IEI Technology Corp.

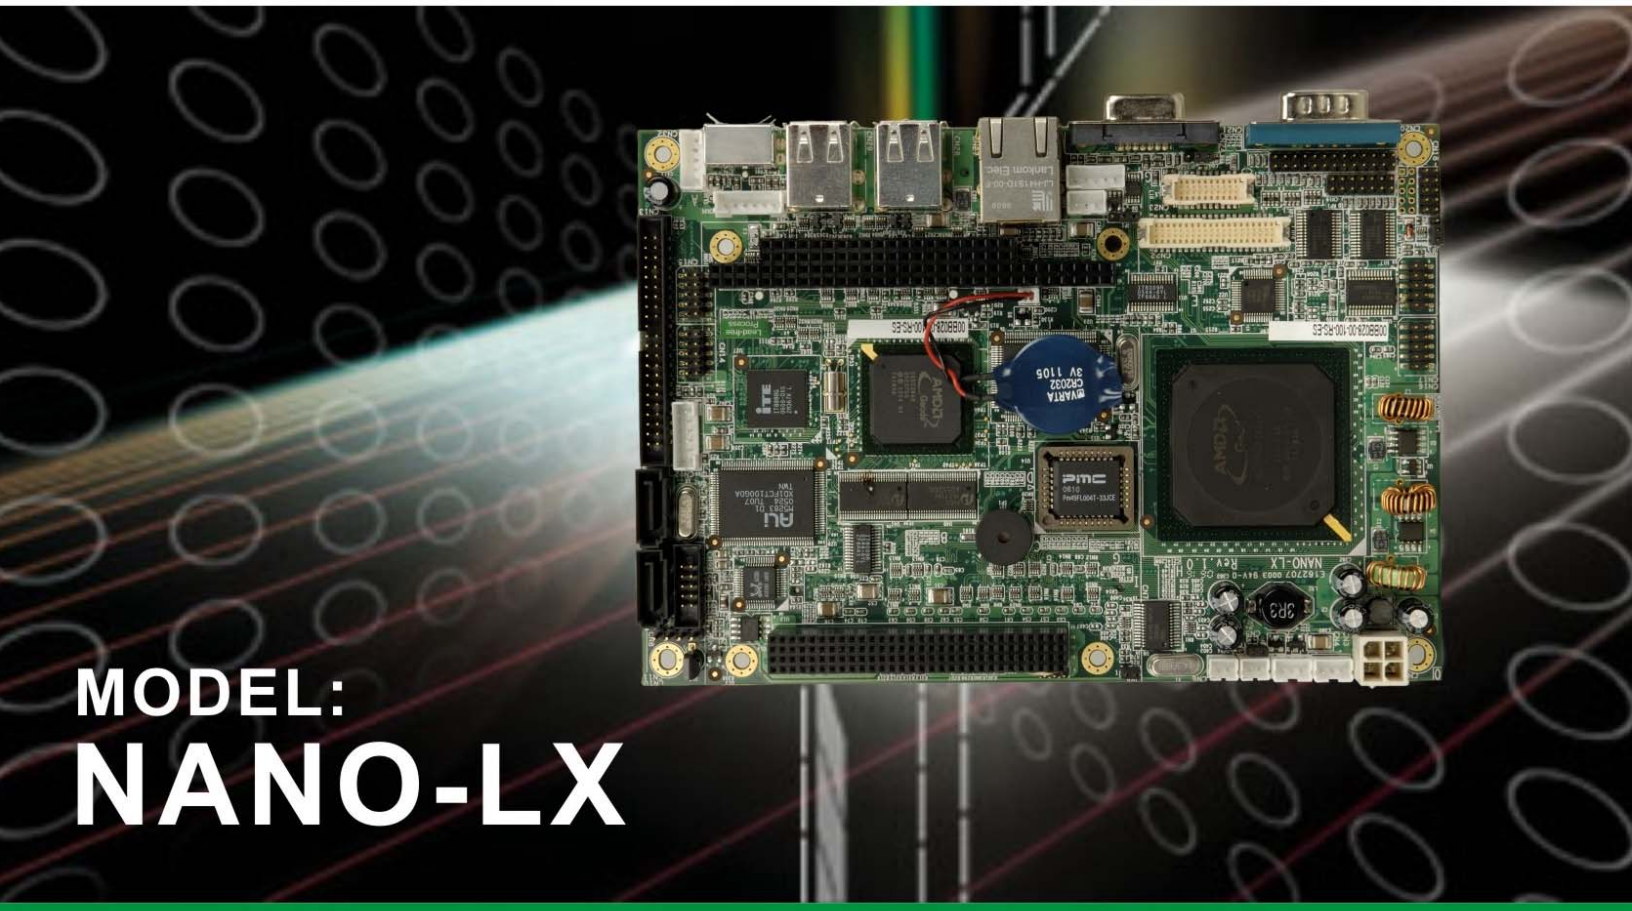

MODEL:

NANO-LX

EPIC AMD® Geode LX 800 SBC with VGA/LVDS/TTL, Single GbE, SATA RAID, USB 2.0 and Audio

User Manual

Rev. 1.10 May 2007

RoHS Lead Free

Revision

Date	Version	Changes
May 2007	1.10	- Added notice for LCD panel voltage select jumper (JP7). - Added dimension drawings. - Changed the document format.
April 2007	1.01	- Updated AMD VGA driver installation (Section 6.2)
August 2006	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

IBM PC is a registered trademark of International Business Machines Corporation. Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Packing List

NOTE:

If any of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the NANO-LX motherboard from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

The items listed below should all be included in the NANO-LX motherboard package.

- NANO-LX single board computer
- IDE flat cable 44p/44p
- RS-232 cables
- Audio cable
- Power cable
- Keyboard/Mouse Y cable
- SATA cables
- SATA power cables
- Mini jumper Pack
- Quick Installation Guide
- Utility CD

Images of the above items are shown in **Chapter 3**.

Table of Contents

1 INTRODUCTION 19

1.1 NANO-LX CPU BOARD OVERVIEW 20

1.1.1 NANO-LX CPU Board Applications 20

1.1.2 NANO-LX CPU Board Benefits 20

1.1.3 NANO-LX CPU Board Features 20

1.2 NANO-LX SBC OVERVIEW 21

1.2.1 NANO-LX CPU Board Connectors 22

1.2.2 Technical Specifications: 23

1.3 COMPATIBLE OPERATING SYSTEMS AND MEMORY MODULES 24

1.3.1 Operating System 24

1.3.2 Memory Module 25

2 DETAILED SPECIFICATIONS 27

2.1 OVERVIEW 28

2.2 DIMENSIONS 28

2.2.1 Board Dimensions 28

2.2.2 External Interface Panel Dimensions 29

2.3 DATA FLOW 29

2.4 CPU SUPPORT 30

2.4.1 AMD® Geode™ LX800 500MHz Overview 30

2.4.2 AMD® Geode™ LX800 Memory Support 31

2.4.3 AMD® Geode™ LX800 500MHz Display Support 31

2.4.4 AMD® Geode™ LX800 500MHz Graphics processor 31

2.4.5 AMD® Geode™ LX800 500MHz Power Management 33

2.5 SYSTEM CHIPSET 33

2.5.1 GeodeLink™ Interface Unit 33

2.5.2 AMD® Geode™ CS5536 ATA-6 Controller 34

2.5.3 AMD® Geode™ CS5536 Audio Codec 97 (AC'97) Controller 34

2.5.4 AMD® Geode™ CS5536 Flash Interface 36

2.5.5 AMD® Geode™ CS5536 USB Controller 36

2.5.6 AMD® Geode™ CS5536 Serial Communications 36

2.5.7 AMD® Geode™ CS5536 Real Time Clock 37

2.5.8 BIOS *37*
2.6 GEODELINK™ PCI BRIDGE 37
2.6.1 Overview *37*
2.6.2 10/100M Ethernet *38*
2.6.3 PCI to ISA Bridge *39*
2.7 ENVIRONMENTAL AND POWER SPECIFICATIONS 39
2.7.1 System Monitoring *39*
2.7.2 Operating Temperature and Temperature Control *40*
2.7.3 Power Consumption *40*

3 UNPACKING 41

3.1 ANTI-STATIC PRECAUTIONS 42
3.2 UNPACKING 42
3.2.1 Unpacking Precautions *42*
3.3 UNPACKING CHECKLIST 43
3.3.1 Package Contents *43*
3.4 OPTIONAL ITEMS 45

4 CONNECTORS AND JUMPERS 47

4.1 PERIPHERAL INTERFACE CONNECTORS 48
4.1.1 NANO-LX SBC Layout *48*
4.1.2 Peripheral Interface Connectors *49*
4.1.3 Rear Panel Connectors *51*
4.1.4 Onboard Jumpers *51*
4.2 INTERNAL PERIPHERAL CONNECTORS 52
4.2.1 ATX Connector *52*
4.2.2 ATX Power Button *53*
4.2.3 Audio CD-In Connector *53*
4.2.4 Audio Connector *54*
4.2.5 Battery Connector *55*
4.2.6 Compact Flash Connector *56*
4.2.7 Digital Input Output Connector *59*
4.2.8 Fan Connector *59*
4.2.9 FDD Connector *60*
4.2.10 IDE Interface Connector *62*
4.2.11 Inverter Connector *63*

4.2.12 IrDA Connector *64*
4.2.13 Keyboard/Mouse Connector *65*
4.2.14 LED Power Connector *66*
4.2.15 LVDS LCD Panel Connector *67*
4.2.16 Parallel Port Connector *68*
4.2.17 PC/104-Plus Connector *69*
4.2.18 Power Connector *72*
4.2.19 Power Input Connector *73*
4.2.20 Reset Button Connector *74*
4.2.21 SATA Drive Ports *75*
4.2.22 Serial Communications Connector *76*
4.2.23 TFT TTL LCD Connector *78*
4.3 EXTERNAL (REAR PANEL) CONNECTORS 80
4.3.1 RS232 Serial Connector *81*
4.3.2 VGA Connector *82*
4.3.3 Ethernet Connector *82*
4.3.4 USB Combo Connectors *83*
4.3.5 Keyboard/Mouse Connector *84*

5 INSTALLATION AND CONFIGURATION 87

5.1 ANTI-STATIC PRECAUTIONS 88
5.2 INSTALLATION CONSIDERATIONS 89
5.2.1 Installation Notices *89*
5.2.2 Installation Checklist *90*
5.3 UNPACKING 91
5.3.1 Unpacking Precautions *91*
5.3.2 Unpacking Checklist *91*
5.4 SO-DIMM INSTALLATION 92
5.5 CF CARD INSTALLATION 93
5.6 JUMPER SETTINGS 94
5.6.1 LCD Panel Shift Clock Jumper *96*
5.6.2 COM1/2 Port RI and Voltage Selection Jumper (Optional) *97*
5.6.3 COM3 RS422/RS485 Select Jumper *97*
5.6.4 AT/ATX Power Mode Select Jumper *98*
5.6.5 PC/104-Plus VIO Voltage Select Jumper *98*
5.6.6 SERIRQ Select Jumper *99*

5.6.7 LCD Panel (LVDS/TTL) Voltage select Jumper *99*
5.7 CHASSIS INSTALLATION 100
5.7.1 Airflow *100*
5.7.2 Motherboard Installation *101*
5.8 INTERNAL PERIPHERAL DEVICE CONNECTIONS 101
5.8.1 Peripheral Device Cables *101*
5.8.2 ATA Flat Cable Connection *102*
5.8.3 AT Power Connection *103*
5.8.4 Parallel Port Cable *104*
5.8.5 Single RS-232 Cable *106*
5.8.6 SATA Drive Connection *106*
5.9 EXTERNAL PERIPHERAL INTERFACE CONNECTION 108
5.9.1 LAN Connection (Single Connector) *109*
5.9.2 PS/2 Keyboard/Mouse Connection *109*
5.9.3 Serial Device Connection *110*
5.9.4 USB Connection (Dual Connector) *111*
5.9.5 VGA Monitor Connection *112*

6 AWARD BIOS SETUP 115

6.1 INTRODUCTION 116
6.1.1 Starting Setup *116*
6.1.2 Using Setup *116*
6.1.3 Getting Help *117*
6.1.4 Unable to Reboot After Configuration Changes *117*
6.1.5 Main BIOS Menu *117*
6.2 STANDARD CMOS FEATURES 120
6.2.1 IDE Primary Master/Slave *122*
6.3 ADVANCED BIOS FEATURES 125
6.4 ADVANCED CHIPSET FEATURES 132
6.4.1 Flat Panel Configuration *135*
6.5 INTEGRATED PERIPHERALS 138
6.6 POWER MANAGEMENT SETUP 145
6.7 PNP/PCI CONFIGURATIONS 148
6.8 PC HEALTH STATUS 153

7 SOFTWARE DRIVERS 155

7.1 AVAILABLE SOFTWARE DRIVERS 156
7.2 AMD® VGA INSTALLATION 159
7.3 AUDIO DRIVER INSTALLATION 168
7.4 LAN DRIVER 175
7.5 SATA/RAID DRIVER 179
7.6 ISA DRIVER 184

A BIOS CONFIGURATION OPTIONS 191

A.1 BIOS CONFIGURATION OPTIONS 192

B WATCHDOG TIMER 197

C ADDRESS MAPPING 201

C.1 I/O ADDRESS MAP 202
C.2 1ST MB MEMORY ADDRESS MAP 202
C.3 IRQ MAPPING TABLE 203
C.4 DMA CHANNEL ASSIGNMENTS 203

D EXTERNAL AC'97 AUDIO CODEC 205

D.1 INTRODUCTION 206
D.1.1 Accessing the AC'97 CODEC 206
D.1.2 Driver Installation 206
D.2 SOUND EFFECT CONFIGURATION 207
D.2.1 Accessing the Sound Effects Manager 207
D.2.2 Sound Effect Manager Configuration Options 209

E ALI® RAID FOR SATA 213

E.1 INTRODUCTION 214
E.1.1 Precautions 214
E.2 FEATURES AND BENEFITS 215
E.3 ACCESSING THE ALI RAID UTILITY 215
E.4 RAID BIOS SETUP UTILITY 216
E.5 RAID OPTIONS: 216
E.5.1 Create RAID0 Striping for Performance 216
E.5.2 Create RAID1 Mirroring for Reliability 218
E.5.3 Create JBOD for Integrated Capacity 220
E.5.4 Stripe Size 222
E.5.5 Delete RAID Setting & Partition 222

E.5.6 Delete All RAID Setting & Partition *222*
E.5.7 Rebuild RAID Array *223*
E.5.8 Select Boot Drive *223*

F CONNECTING AN ATX POWER SUPPLY 225

F.1.1 Using ATX Power Switch *226*
F.1.2 Using AT Power Supply *228*

INDEX 229

List of Figures

Figure 1-1: NANO-LX CPU Board Overview (Front Side) 21
Figure 1-2: NANO-LX CPU Board Overview (Solder Side) 21
Figure 2-1: NANO-LX Dimensions (mm) 28
Figure 2-2: External Interface Panel Dimensions (mm) 29
Figure 2-3: Data Flow Block Diagram 30
Figure 4-1: Connector and Jumper Locations (Front Side) 48
Figure 4-2: Connector and Jumper Locations (Solder Side) 49
Figure 4-3: CN3 Connector Location 52
Figure 4-4: CN5 Connector Location 53
Figure 4-5: CN8 Connector Location 54
Figure 4-6: CN9 Connector Location 55
Figure 4-7: BT1 Connector Location 56
Figure 4-8: CN35 Connector Location 58
Figure 4-9: CN18 Connector Location 59
Figure 4-10 CN4 Connector Location 60
Figure 4-11: CN34 Connector Location 61
Figure 4-12: CN13 Connector Location 63
Figure 4-13: CN26 Connector Location 64
Figure 4-14: CN32 Connector Location 65
Figure 4-15: CN30 Connector Location 66
Figure 4-16: CN12 Connector Location 67
Figure 4-17: CN23 Connector Location 68
Figure 4-18: CN20 Connector Location 69
Figure 4-19: CN7 Connector Location 72
Figure 4-20: CN2 Connector Location 73
Figure 4-21: CN25 Connector Location 74
Figure 4-22: CN6 Connector Location 75
Figure 4-23: CN10, CN11 Connector Locations 76

Figure 4-24 CN14, CN15, CN16, CN17, CN19 Connector Locations.....78
Figure 4-25 CN22 Connector Locations.....80
Figure 4-26: NANO-LX CPU Board Rear Panel.....81
Figure 4-27: CN21 Pinout Locations.....81
Figure 4-28: CN24 Connector.....82
Figure 4-29: CN27 Connector.....83
Figure 4-30: CN31 Pinout locations.....85
Figure 5-1: SO-DIMM Installation.....92
Figure 5-2: CF Card Installation.....94
Figure 5-3: Jumper Locations.....94
Figure 5-4: Jumper Locations.....96
Figure 5-5: IDE Cable Connection.....102
Figure 5-6: Power Cable to Motherboard Connection.....103
Figure 5-7: Connect Power Cable to Power Supply.....104
Figure 5-8: LPT Cable Connection.....105
Figure 5-9: Connect the LPT Device.....105
Figure 5-10: Single RS-232 Cable Installation.....106
Figure 5-11: SATA Drive Cable Connection.....107
Figure 5-12: SATA Power Drive Connection.....108
Figure 5-13: LAN Connection.....109
Figure 5-14: PS/2 Connector.....110
Figure 5-15: Serial Device Connector.....111
Figure 5-16: USB Connector.....112
Figure 5-17: VGA Connector.....113
Figure 7-1: AMD LX/GX CD Main Menu.....157
Figure 7-2: AMD LX/GX CD Driver Menu.....158
Figure 7-3: Access Windows Control Panel.....159
Figure 7-4: Double Click the System Icon.....160
Figure 7-5: Click the Device Manager Tab.....161
Figure 7-6: Device Manager List.....161
Figure 7-7: Video Controller Properties Window.....162
Figure 7-8: Hardware Update Wizard.....163

Figure 7-9: Install Options Window 163
Figure 7-10: Search Options Window 164
Figure 7-11: Folder Selection Window 165
Figure 7-12: Search Options Window 165
Figure 7-13: Hardware Update Wizard Search Window 166
Figure 7-14: Windows Logo Testing Window 166
Figure 7-15: Driver Installation Window 167
Figure 7-16: Driver Installation Complete Window 167
Figure 7-17: Device Manager Window 168
Figure 7-18: Access Windows Control Panel 169
Figure 7-19: Double Click the System Icon 170
Figure 7-20: Double Click the Device Manager Tab 170
Figure 7-21: Device Manager List 171
Figure 7-22: Search for Suitable Driver 172
Figure 7-23: Locate Driver Files 173
Figure 7-24: Location Browsing Window 174
Figure 7-25: Locate the Setup Program Icon 175
Figure 7-26: Preparing Setup Screen 175
Figure 7-27: Install Wizard Welcome Screen 176
Figure 7-28: Installing Screen 177
Figure 7-29: Restart the Computer 178
Figure 7-30: Locate the Setup Program Icon 179
Figure 7-31: Preparing Setup Screen 179
Figure 7-32: Install Wizard Welcome Screen 180
Figure 7-33: Installing Screen 181
Figure 7-34: RAID Driver Digital Signal 182
Figure 7-35: InstallShield Wizard Complete Screen 183
Figure 7-36: Access Windows Control Panel 184
Figure 7-37: Double Click the System Icon 185
Figure 7-38: Double Click the Device Manager Tab 185
Figure 7-39: Device Manager List 186
Figure 7-40: Search for Suitable Driver 187

Figure 7-41: Locate Driver Files..... 188
Figure 7-42: Location Browsing Window..... 189

List of Tables

Table 1-1: Technical Specifications 24
Table 1-2: Compatible Memory Modules 25
Table 2-1: Geode LX Graphics Features 33
Table 2-2: Supported HDD Specifications 34
Table 2-3: Power Consumption 40
Table 3-1: Package List Contents 44
Table 3-2: Package List Contents 45
Table 4-1: Peripheral Interface Connectors 50
Table 4-2: Rear Panel Connectors 51
Table 4-3: Onboard Jumpers 51
Table 4-4: CN3 Connector Pinouts 52
Table 4-5: CN5 Connector Pinouts 53
Table 4-6: CN8 Connector Pinouts 54
Table 4-7: CN9 Connector Pinouts 55
Table 4-8: BT1 Connector Pinouts 56
Table 4-9: CN35 Connector Pinouts 57
Table 4-10: CN18 Connector Pinouts 59
Table 4-11 CN4 Connector Pinouts 60
Table 4-12 CN4 Connector Pinouts 61
Table 4-13: CN13 Connector Pinouts 62
Table 4-14: CN26 Connector Pinouts 64
Table 4-15: CN32 Connector Pinouts 65
Table 4-16: CN30 Connector Pinouts 65
Table 4-17: CN12 Connector Pinouts 66
Table 4-18: CN23 Connector Pinouts 67
Table 4-19: CN20 Connector Pinouts 69
Table 4-20: CN7 (PC/104) Connector Pinouts 71
Table 4-21: CN7 (PCI-104) Connector Pinouts 72
Table 4-22: CN2 Connector Pinouts 72

Table 4-23: CN25 Connector Pinouts 73
Table 4-24: CN6 Connector Pinouts 74
Table 4-25: CN10, CN11 Connector Pinouts 75
Table 4-26: CN14, CN15, CN16, CN17 Connector Pinouts 77
Table 4-27: CN19 Connector Pinouts 77
Table 4-28: CN22 Connector Pinouts 79
Table 4-29: CN21 Pinouts 81
Table 4-30: CN24 Connector Pinouts 82
Table 4-31: CN27 Connector Pinouts 83
Table 4-32: CN27 Connector LEDs 83
Table 4-33: CN28, CN29 Connector Pinouts 84
Table 4-34: CN31 Pinouts 85
Table 5-1: Jumpers 95
Table 5-2: JP1 Jumper Settings 96
Table 5-3: JP2 Jumper Settings 97
Table 5-4: JP3 Jumper Settings 97
Table 5-5: JP4 Jumper Settings 98
Table 5-6: JP5 Jumper Settings 99
Table 5-7: JP6 Jumper Settings 99
Table 5-8: JP7 Jumper Settings 100
Table 5-9: IEI Provided Cables 101
Table 6-1: BIOS Navigation Keys 117

List of BIOS Menus

BIOS Menu 1: AwardBIOS CMOS Setup Utility 118
BIOS Menu 2: Standard CMOS Features 120
BIOS Menu 3: IDE Primary Master 122
BIOS Menu 4: Advanced BIOS Features 125
BIOS Menu 5: Advanced Chipset Features 132
BIOS Menu 6: Flat Panel Configuration 135
BIOS Menu 7: Integrated Peripherals 138
BIOS Menu 8: Power Management Setup 145
BIOS Menu 9: PnP/PCI Configurations 148
BIOS Menu 10: IRQ Resources 150
BIOS Menu 11: Memory Resources 151
BIOS Menu 12: PC Health Status 153

Glossary

AC '97	Audio Codec 97
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
ARMD	ATAPI Removable Media Device
ASKIR	Shift Keyed Infrared
ATA	Advanced Technology Attachments
BIOS	Basic Input/Output System
CFII	Compact Flash Type 2
CMOS	Complementary Metal Oxide Semiconductor
CPU	Central Processing Unit
Codec	Compressor/Decompressor
COM	Serial Port
DAC	Digital to Analog Converter
DDR	Double Data Rate
DIMM	Dual Inline Memory Module
DIO	Digital Input/Output
DMA	Direct Memory Access
EIDE	Enhanced IDE
EIST	Enhanced Intel SpeedStep Technology
FDD	Floppy Disk Drive
FDC	Floppy Disk Connector
FFIO	Flexible File Input/Output
FIFO	First In/First Out
FSB	Front Side Bus
IrDA	Infrared Data Association
HDD	Hard Disk Drive
IDE	Integrated Data Electronics
I/O	Input/Output
ICH4	I/O Controller Hub 4
L1 Cache	Level 1 Cache
L2 Cache	Level 2 Cache
LCD	Liquid Crystal Display
LPT	Parallel Port Connector
LVDS	Low Voltage Differential Signaling
MAC	Media Access Controller
OS	Operating System
PCI	Peripheral Connect Interface
PIO	Programmed Input Output
PnP	Plug and Play
POST	Power On Self Test
RAM	Random Access Memory
SATA	Serial ATA
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology
SPD	Serial Presence Detect
S/PDI	Sony/Philips Digital Interface
SDRAM	Synchronous Dynamic Random Access Memory
SIR	Serial Infrared
UART	Universal Asynchronous Receiver-transmitter
USB	Universal Serial Bus
VGA	Video Graphics Adapter

Chapter

1

Introduction

1.1 NANO-LX CPU Board Overview

The EPIC form factor NANO-LX AMD® Geode™ LX800 is a highly-integrated embedded computer specifically optimized for multi-media applications requiring minimum installation space. The NANO-LX is particularly suitable for low power and fan-less applications. The NANO-LX supports a full range of functionality for an AT/ATX-compatible industrial computer in a space-saving 3.5" profile. The NANO-LX is equipped with an on board low-power consumption and high performance AMD® Geode™ LX800 processor. It also contains a DDR SO-DIMM socket that supports up to 1GB memory in size.

1.1.1 NANO-LX CPU Board Applications

The NANO-LX SBC has been designed for use in industrial applications where board expansion is critical and operational reliability is essential.

1.1.2 NANO-LX CPU Board Benefits

Some of the NANO-LX SBC benefits include,

- operating reliably in harsh industrial environments with ambient temperatures as high as 60°C
- rebooting automatically if the BIOS watchdog timer detects that the system is no longer operating

1.1.3 NANO-LX CPU Board Features

Some of the NANO-LX SBC features are listed below:

- Complies with RoHS
- Supports AMD® Geode™ LX800 500MHz CPU
- Supports up to 1GB of 400/333MHz single channel DDR memory
- Comes with one high performance gigabit Ethernet (GbE) controller
- Supports two SATA channels with transfer rates up to 150MB/s
- Supports four USB 2.0 connectors

1.2 NANO-LX SBC Overview

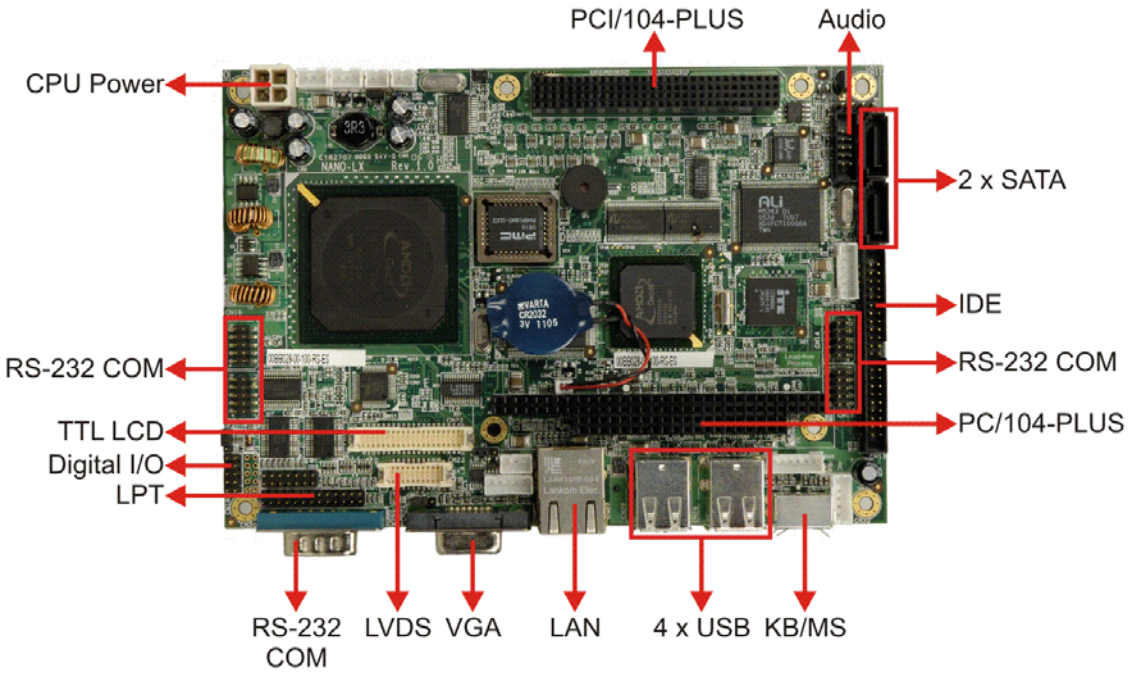

Figure 1-1: NANO-LX CPU Board Overview (Front Side)

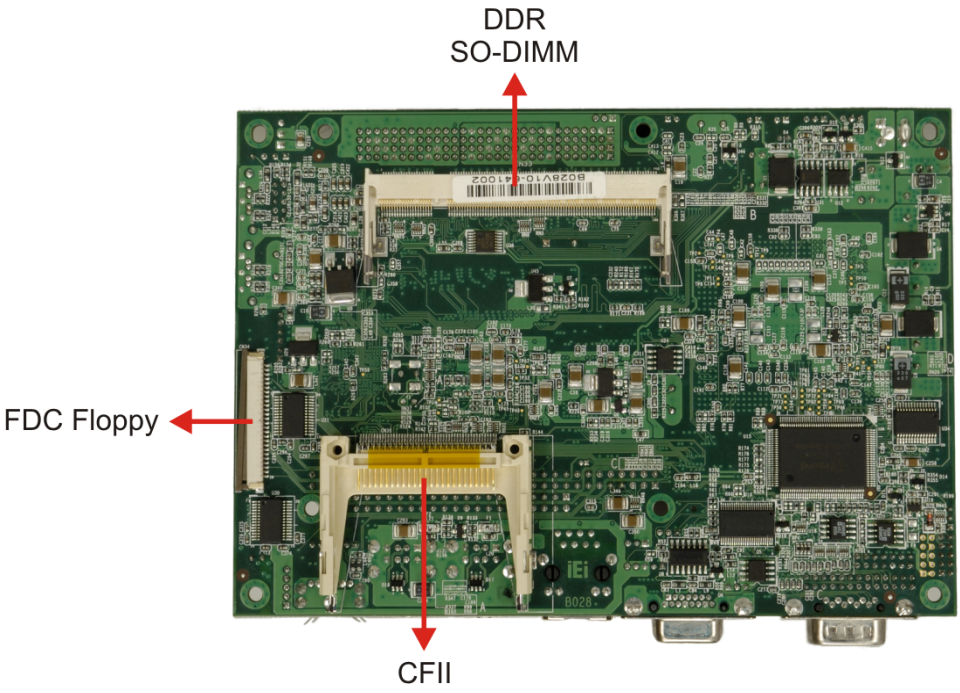

Figure 1-2: NANO-LX CPU Board Overview (Solder Side)

1.2.1 NANO-LX CPU Board Connectors

The NANO-LX SBC has the following connectors onboard:

- 1 x ATX 12V connector
- 1 x CPU cooling fan connector
- 1 x CF type II connector (solder side)
- 1 x TTL/LCD connector
- 1 x IrDA connector
- 1 x IDE device connector
- 1 x FDD connector
- 6 x RS-232 connectors
- 1 x RS-422/485 connector
- 1 x LVDS connector
- 1 x Inverter connector
- 1 x Parallel port connector
- 2 x SATA connectors
- 1 x DIO connector
- 1 x CD_IN connector
- 1 x Keyboard/Mouse connector

The NANO-LX SBC has the following connectors on the board rear panel:

- 1 x RS-232 connector
- 1 x VGA connector
- 1 x RJ-45 Ethernet connector
- 4 x USB ports
- 1 x PS/2 connector

The location of these connectors on the SBC can be seen in **Figure 4-26**. These connectors are fully described in **Chapter 2**.

1.2.2 Technical Specifications:

NANO-LX SBC technical specifications are listed in **Table 1-1**. Detailed descriptions of each specification can be found in **Chapter 2**.

SPECIFICATION	
CPUs Supported	AMD® Geode™ LX800
Cache Memory	64K I/ 64k D L1 cache, 128K L2 cache
System Chipset	AMD® CS5536
I/O Controller	AMD® CS5536
Memory	One 200-pin DDR 333/400MHz SO-DIMM SDRAM with a maximum size of 1GB.
PCI Bus Interface	Revision 2.2
Super IO	W83627EHG
Display	CRT integrated in AMD® Geode™ LX800
TTL/ LVDS	24 bit TTL integrated in AMD® LX 800 18 bit LVDS
HDD Interface	One IDE channel supports two Ultra ATA 100/66/33 devices
Power Support	AT/ATX power support
Power Consumption	+12V @ 0.92A (DDR400 256MB)
Power Management	Supports Advanced Configuration and Power Interface (ACPI) Specifications Revision 2.0
Watchdog Timer	Software programmable supports 1~255 sec. system reset
I/O Interfaces	1 x FDD 1 x LPT 1 x CFII

SPECIFICATION	
	1 x IDE 6 x RS-232 1 x RS-422/485 2 x SATA channels
PC/104-Plus Interface	Direct ISA DMA mode operation.
Infrared Support	One Infrared Data Association (IrDA) interface
Real Time Clock	256-byte battery backed CMOS RAM
Hardware Monitoring	CPU temperature and system voltages
Ethernet	10/100BASE-T RTL8100C
BIOS	AWARD
Physical Dimensions	115mm x 165mm
Operating Temperature	Minimum: 0ºC (32°F) Maximum: 60°C (140°F)
Audio Interfaces	AC'97 Codec Realtek ALC203

Table 1-1: Technical Specifications

1.3 Compatible Operating Systems and Memory Modules

The following sections lists the operating systems (OS) and memory modules that have passed the test held by IEI. Please consider using these compatible OS and memory modules with the NANO-LX for the best performance.

1.3.1 Operating System

The compatible operating systems include:

- DOS 6.22
- Windows XP

- Windows 2000
- QNX Neutrino 6.2.1
- Fedora Core 3
- RedHat 9.0
- Mandrake Linux 2006
- FreeBSD 5.2.1

1.3.2 Memory Module

The following memory modules have been used while testing:

Mfg.	Model	Capacity/Speed	Description
Transcend	PSC A2S56D30ATP324ALA12	256MB DDR266 SDRAM	200-pin DDR SO-DIMM
Transcend	NANYA NT5DS64M8AF-6K	1GB DDR333 SODIMM	200-pin DDR SO-DIMM
Apacer	Mosel V58C2256804SAS5	512MB DDR PC-3200	200-pin DDR SO-DIMM
Apacer	Infineon HyB25D512800CC-5	512MB DDR PC-3200	200-pin DDR SO-DIMM
Kingston	KV333X64SC25/512	512MB DDR333 SDRAM	200-pin DDR SO-DIMM
Kingston	KV333X64SC25/1G	1GB DDR333 SDRAM	200-pin DDR SO-DIMM
Kingston	KV400X64SC3A/512	512MB DDR400 SDRAM	200-pin DDR SO-DIMM

Table 1-2: Compatible Memory Modules

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

2

Detailed Specifications

2.1 Overview

This chapter describes the specifications and on-board features of the NANO-LX in detail.

2.2 Dimensions

2.2.1 Board Dimensions

The dimensions of the board are listed below:

- **Length**: 165.10mm
- **Width**: 115.00mm

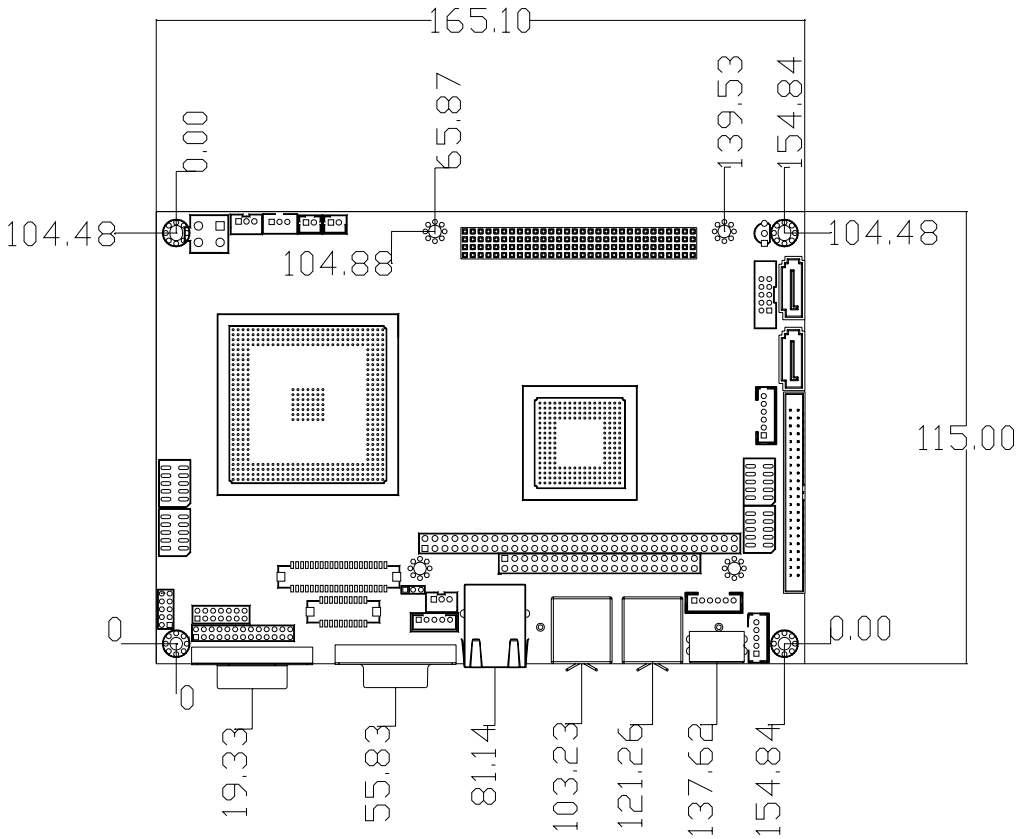

Figure 2-1: NANO-LX Dimensions (mm)

2.2.2 External Interface Panel Dimensions

External peripheral interface connector panel dimensions are shown in **Figure 2-2**.

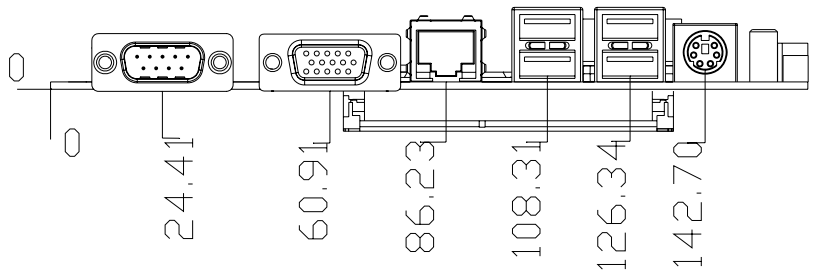

Figure 2-2: External Interface Panel Dimensions (mm)

2.3 Data Flow

The NANO-LX motherboard comes with an AMD® Geode™ LX800 CPU and an AMD® Geode™ CS5536 linked together by the GeodeLink™ Interface Unit. **Figure 2-3** shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

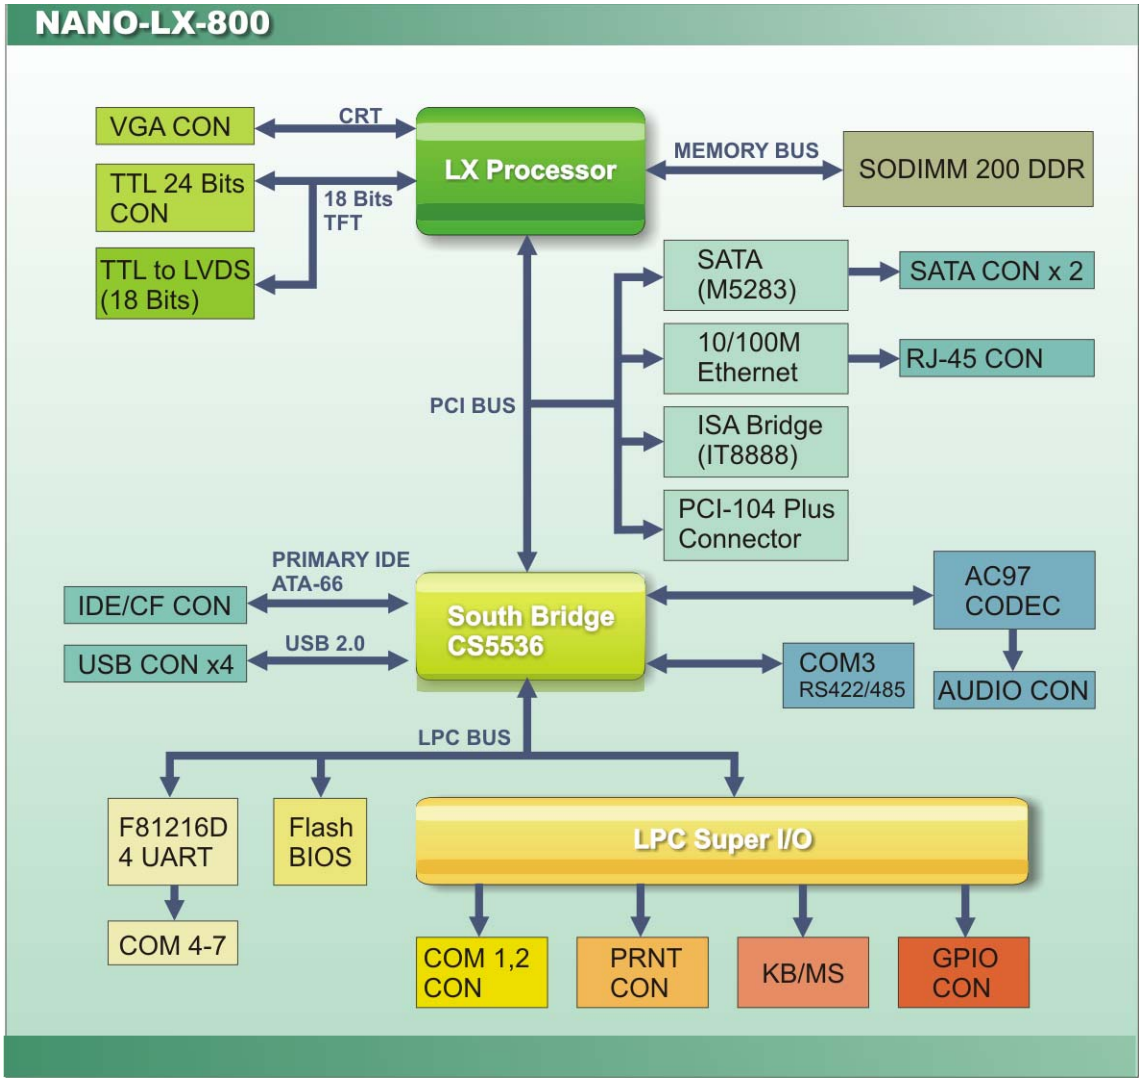

Figure 2-3: Data Flow Block Diagram

2.4 CPU Support

The NANO-LX series motherboards all come with a preinstalled AMD® Geode™ LX800 500MHz CPU.

2.4.1 AMD® Geode™ LX800 500MHz Overview

The specifications for the 500MHz AMD® Geode™ LX800 are listed below

- x86/x87-compatible core
- Processor frequency up to 500 MHZ

- 64K I/64K D L1 cache and 128K L2 cache
- Split I/D cache/TLB (Translation Look-Aside Buffer)
- Integrated FPU that supports the Intel MMX® and AMD 3DNow!™ Technology instruction sets
- 9 GB/s internal GeodeLink™ Interface Unit (GLIU)
- Security Block
  - 128-bit AES (CBC/ECB)
- True Random Number Generator

2.4.2 AMD® Geode™ LX800 Memory Support

The AMD® Geode™ LX800 supports 64-bit DDR memory modules with frequencies up to 400MHz. The NANO-LX has one 200-pin DDR SO-DIMM SDRAM socket that supports one 64-bit 333 MHz or 400MHz DDR SO-DIMM memory module with a maximum capacity of 1GB.

2.4.3 AMD® Geode™ LX800 500MHz Display Support

The AMD® Geode™ LX800 supports both CRT and TFT in a dual display mode. The following display specifications.

- Supported Standards
  - High Definition (HD)
  - Standard Definition (SD)
- Supported Resolution
  - 1920x1440 in CRT mode
  - 1600x1200 in TFT mode
- VESA 1.1 and 2.0 VIP/VDA support

2.4.4 AMD® Geode™ LX800 500MHz Graphics processor

The AMD® Geode™ LX800 BitBLT/vector engine graphics processor supports pattern generation, source expansion, pattern/source transparency, 256 ternary raster operations, alpha blenders to support alpha- BLTs, incorporated BLT FIFOs, a GeodeLink interface and the ability to throttle BLTs according to video timing. New features added to the Graphics Processor include:

- Command buffer interface
- Hardware accelerated rotation BLTs
- Color depth conversion
- Paletized color
- Full 8x8 color pattern buffer
- Separate base addresses for all channels
- Monochrome inversion

Table 2-1: Geode LX Graphics Features lists a complete list of Geode LX graphics features. For more details, please refer to the AMD website or the Geode LX series data book available from AMD.

Feature	AMD® Geode™ LX Processor
Color Depth	8, 16, 32 bpp (A) RGB 4 and 8-bit indexed
ROPs	256 (2-src, dest and pattern)
BLT Buffers	FIFOs in Graphics Processor
BLT Splitting	Managed by hardware
Video Synchronized BLT/Vector	Throttle by VBLANK
Bresenham Lines	Yes
Patterned (stippled) Lines	Yes
Screen to Screen BLT	Yes
Screen to Screen BLT with mono expansion	Yes
Memory to Screen BLT	Yes (throttled rep movs writes)
Accelerated Text	No
Pattern Size (Mono)	8x8 pixels
Pattern Size (Color)	8x8 pixels
Monochrome Pattern	Yes (with inversion)
Dithered Pattern (4 color)	No
Color Pattern	8, 16, 32 bpp
Transparent Pattern	Monochrome
Solid Fill	Yes
Pattern Fill	Yes
Transparent Source	Monochrome
Color Key Source Transparency	Y with mask
Variable Source Stride	Yes

Variable Destination Stride	Yes
Destination Write Bursting	Yes
Selectable BLT Direction	Vertical and Horizontal
Alpha BLT	Yes (constant α, α/pix, or sep. α channel)
VGA Support	Decodes VGA Register
Pipeline Depth	Unlimited
Accelerated Rotation BLT	8, 16, 32 bpp
Color Depth Conversion	5:6:5, 1:5:5:5, 4:4:4:4, 8:8:8:8

Table 2-1: Geode LX Graphics Features

2.4.5 AMD® Geode™ LX800 500MHz Power Management

The power management for the 500MHz AMD® Geode™ LX800 is listed below:

- 1.8W Typical (3.9W TDP) @ 500MHz
- GeodeLink active hardware power management
- Hardware support for standard ACPI software power management
- I/O companion SUSP#/SUSPA# power controls
- Lower power I/O
- Wakeup on SMI/INTR

2.5 System Chipset

The NANO-LX series motherboards all have a preinstalled AMD® Geode™ CS5536 system chipset. The system chipset features are listed below.

- 82xx Legacy Devices
- System Management Bus (SMB) Controller
- 8 Multi-Function General Purpose Timers (MFGPTs)
- Power Management Controller
- ACPI v2.0 compliant

2.5.1 GeodeLink™ Interface Unit

- 64-bit, 66MHz operation
- PCI VSM (Virtual System Module) that makes the interface transparent to applications software and BIOS

- Programmable routing descriptors, use and activity monitors, and SSMI (Synchronous System Management Interrupt)

2.5.2 AMD® Geode™ CS5536 ATA-6 Controller

The single NANO-LX IDE connector supports two ATA-6 HDDs. An ATA-6 (Ultra ATA/100) compliant IDE controller on the AMD® Geode™ CS5536 has a maximum transfer rate of 100MB/s. ATA-6 includes advancements in error checking and ATA-6 drives are compatible with future interface additions.

The onboard ATA-6 controller is able to support the following IDE HDDs:

- **Ultra ATA/100**, with data transfer rates up to 100MB/s
- **Ultra ATA/66**, with data transfer rates up to 66MB/s
- **Ultra ATA/33**, with data transfer rates up to 33MB/s

Specification	Ultra ATA/100	Ultra ATA/66	Ultra ATA/33
IDE devices	2	2	2
PIO Mode	0 – 4	0 – 4	0 – 4
PIO Max Transfer Rate	16.6 MB/s	16.6 MB/s	16.6 MB/s
DMA/UDMA designation	UDMA 3 - 4	UDMA 3 – 4	UDMA 2
DMA/UDMA Max Transfer	100MB/s	66MB/s	33MB/s
Controller Interface	5V	5V	5V

Table 2-2: Supported HDD Specifications

2.5.3 AMD® Geode™ CS5536 Audio Codec 97 (AC'97) Controller

The AC'97 specification v2.3 compliant controller on the chipset is interfaced to a 20-bit DAC and 18-bit ADC full-duplex AC'97 2.3 stereo RealTek ALC203 codec. The ALC203 is then connected to a 10-pin audio connector to which an audio kit can easily be connected. The codec meets performance requirements for audio on PC99/2001 systems. Some of the codec features are listed below.

- Meets Microsoft WHQL/WLP 2.0 audio requirements
- 20-bit DAC and 18-bit ADC resolution
- 18-bit Stereo full-duplex CODEC with independent and variable sampling rate
- Complies with AC'97 2.3 specifications
  - LINE/HP-OUT, MIC-IN and LINE-IN sensing
  - 14.318MHz -> 24.576MHz PLL saves crystal
  - 12.288MHz BITCLK input can be consumed
  - Integrated PCBEEP generator to save buzzer
  - Interrupt capability
  - Page registers and Analog Plug & Play
- Support of S/PDIF out is fully compliant with AC'97 rev2.3 specifications
- Three analog line-level stereo inputs with 5-bit volume control: LINE_IN, CD, AUX
- High quality differential CD input
- Two analog line-level mono input: PCBEEP, PHONE-IN
- Supports double sampling rate (96KHz) of DVD audio playback
- Two software selectable MIC inputs
- +6/12/20/30dB boost preamplifier for MIC input
- Stereo output with 6-bit volume control
- Mono output with 5-bit volume control
- Headphone output with 50mW/20Ohm amplifier
- 3D Stereo Enhancement
- Multiple CODEC extension capability
- External Amplifier Power Down (EAPD) capability
- Power management and enhanced power saving features
- Stereo MIC record for AEC/BF application
- DC Voltage volume control
- Auxiliary power to support Power Off CD
- Adjustable VREFOUT control
- 2 GPIO pins with smart GPIO volume control
- 2 Universal Audio Jacks (UAJ)® for front panel
- Supports 32K/44.1K/48K/96KHz S/PDIF output
- Supports 32K/44.1K/48KHz S/PDIF input
- Power support: Digital: 3.3V; Analog: 3.3V/5V
- Standard 48-Pin LQFP Package
- EAX™ 1.0 & 2.0 compatible

- Direct Sound 3D™ compatible
- A3D™ compatible
- I3DL2 compatible
- HRTF 3D Positional Audio
- Sensaura™ 3D Enhancement (optional)
- 10 Bands of Software Equalizer
- Voice Cancellation and Key Shifting in Kareoke mode
- AVRack® Media Player

2.5.4 AMD® Geode™ CS5536 Flash Interface

The NANO-LX CompactFlash socket supports standard CF Type II card. The chipset flash interface is multiplexed with an IDE interface and can be connected to an array of industry standard NAND Flash or NOR Flash devices.

2.5.5 AMD® Geode™ CS5536 USB Controller

Four external USB ports on the NANO-LX board are interfaced to the chipset USB controller. Four USB 1.1 or USB 2.0 devices can be connected simultaneously to the NANO-LX. The chipset USB controller has the following specifications:

- 4 USB ports
- USB 1.1 and USB 2.0 compliant
- 3 host ports
- 1 host/device

2.5.6 AMD® Geode™ CS5536 Serial Communications

Seven high-speed UART serial port connectors, six RS-232 and one that can be configured as RS-232, RS-422 or RS-485, are connected to the system chipset low pin count (LPC) port via the LPC bus. The specifications for the serial ports are listed below.

- 16C550 UART with 16-byte FIFO buffer
- 115.2Kbps transmission rate

2.5.7 AMD® Geode™ CS5536 Real Time Clock

The system chipset has a battery backed up 256-byte real-time clock (RTC) with CMOS RAM.

2.5.8 BIOS

The BIOS flash memory chip on the NANO-LX has a licensed copy of AWARD BIOS loaded onto it. The BIOS flash memory chip is connected to the chipset via the LPC bus. The flash BIOS features are listed below:

- SMIBIOS (DMI) compliant
- Console redirection function support
- PXE (**P**re-Boot E**x**ecution **E**nvironment) support
- USB booting support

2.6 GeodeLink™ PCI Bridge

2.6.1 Overview

The GeodeLink™ PCI Bridge (GLPCI) module provides a PCI interface for GeodeLink Interface Unit-based designs. The GLPCI module is composed of six major blocks:

- GeodeLink Interface
- FIFO/Synchronization
- Transaction Forwarding
- PCI Bus Interface
- PCI Arbiter

The GeodeLink and PCI Bus Interface blocks provide adaptation to the respective buses. The Transaction Forwarding block provides bridging logic. Some of the features of the GeodeLink™ PCI Bridge are listed below:

- PCI Version 2.2 compliance
- 32-bit, 66 MHz PCI bus operation
- Target support for fast back-to-back transactions
- Arbiter support for three external PCI bus masters
- Write gathering and write posting for in-bound write requests

- Virtual PCI header support
- Delayed transactions for in-bound read requests
- Zero wait state operation within a PCI burst
- Dynamic clock stop/start support for GLIU and PCI clock domains (this is not CLKRUN support)
- Capable of handling out of bound transactions immediately after reset

2.6.2 10/100M Ethernet

A highly integrated and cost-effective single-chip, fast RealTek RTL8100C 10/100M Ethernet controller is interfaced through first the PCI bus and then through the GeodeLink™ PCI Bridge to the CPU and system chipset. The RealTek RTL8100C controller provides 10Mbps or 100Mbps Ethernet connectivity to the NANO-LX. Some of the features of the RealTek RTL8100C are listed below.

- 10Mbps and 100Mbps operation
- Supports 10Mbps and 100Mbps N-way auto-negotiation
- Supports 25MHz Crystal or 25MHz OSC as the internal clock source
- Complies with PC99/PC2001 standards
- Supports ACPI power management
- Provides PCI bus master data transfer
- Provides PCI memory space or I/O space mapped data transfer
- Supports PCI clock speed of 16.75MHz-40MHz
- Advanced power saving mode
- Supports Wake-on-LAN and remote wake-up (AMD Magic Packet™, Link Change, and Microsoft® Wake-up frame)
- Half/Full duplex capability
- Supports Full Duplex Flow Control (IEEE 802.3x)
- Provides interface to 93C46 EEPROM to store resource configuration and ID parameters
- Provides PCI clock run pin
- Provides LED pins for network operation status indication
- 2.5/3.3V power supply with 5V tolerant I/Os

2.6.3 PCI to ISA Bridge

An ITE IT8888G PCI to ISA bridge single function device connects the onboard NANO-LX ISA bus PC/104 connector to the GeodeLink™ PCI bridge. The IT8888G has a PCI specification v2.1 compliant 32-bit PCI bus interface and supports both PCI Bus master and slave. The PCI interface supports both programmable positive and full subtractive decoding schemes. Some of the features of the IT8888G PCI to ISA bridge are listed below.

- PCI Interface
- Programmable PCI Address Decoders
- PC/PCI DMA Controller
- Distributed DMA Controller
- ISA Interface
- SM Bus
- 1 analog line-level mono output: MONO_OUT
- Power-on Serial Bus Configuration
- Serial IRQ
- Versatile power-on strapping options
- Supports NOGO function
- Single 33 MHz Clock Input
- +3.3V PCI I/F with +5V tolerant I/O buffers
- +5V ISA I/F and core Power Supply

2.7 Environmental and Power Specifications

2.7.1 System Monitoring

The NANO-LX is capable of self-monitoring various aspects of its operating status including:

- CPU, chipset, and battery voltage, +3.3V, +5V, and +12V
- RPM of cooling fans
- CPU and board temperatures (by the corresponding embedded sensors)

2.7.2 Operating Temperature and Temperature Control

The maximum and minimum operating temperatures for the NANO-LX are listed below.

- Minimum Operating Temperature: 0ºC (32°F)
- Maximum Operating Temperature: 60°C (140°F)

A cooling fan and heat sink must be installed on the CPU. Thermal paste must be smeared on the lower side of the heat sink before it is mounted on the CPU. Heat sinks are also mounted on the Northbridge and Southbridge chipsets to ensure the operating temperature of these chips remain low.

2.7.3 Power Consumption

Table 2-3 shows the power consumption parameters for the NANO-LX when an AMD® Geode™ LX800 processor is running with one 256MB DDR 400MHz memory module.

Voltage	Current
+12V	0.92A

Table 2-3: Power Consumption

Chapter

3

Unpacking

3.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the installation of the NANO-LX may result in permanent damage to the NANO-LX and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the NANO-LX. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the NANO-LX, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***: Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the NANO-LX, place it on an antic-static pad. This reduces the possibility of ESD damaging the NANO-LX.
- ***Only handle the edges of the PCB***: When handling the PCB, hold the PCB by the edges.

3.2 Unpacking

3.2.1 Unpacking Precautions

When the NANO-LX is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 3.1**.
- Make sure the packing box is facing upwards so the NANO-LX does not fall out of the box.
- Make sure all the components shown in **Section 3.3** are present.

3.3 Unpacking Checklist

NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the NANO-LX from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

3.3.1 Package Contents

The NANO-LX is shipped with the following components:

Quantity	Item and Part Number	Image
1	NANO-LX SBC	
1	IDE flat cable 44p/44p (**P/N**: 32200-000009-RS)	
2	RS-232 cables (**P/N**: 32200-000049-RS)	
1	Audio cable (**P/N**: 32000-072100-RS)	
1	Power cable (**P/N**: 32100-087100-RS)	
1	Keyboard/Mouse Y cable (**P/N**: 32000-000138-RS)	

2	SATA cables (**P/N**: 32000-062800-RS)	
1	SATA power cables (**P/N**: 32100-088600-RS)	
1	Mini jumper Pack	
1	Quick Installation Guide	
1	Utility CD	

Table 3-1: Package List Contents

3.4 Optional Items

ATX power cable (**P/N**: 32100-052100-RS)	
LPT cable (**P/N**: 32200-015100-RS)	
RS-232 and RS-422/485 cable (**P/N**: 32200-026500-RS)	
NANO-LX-CE050	Windows CE 5.0 & BSP, Software CD, Licensed sticker
NANO-LX-XPE	Windows XP Embedded & SLD, software CD, Licensed sticker

Table 3-2: Package List Contents

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

4

Connectors and Jumpers

4.1 Peripheral Interface Connectors

The locations of the peripheral interface connectors are shown in **Section 4.1.1**. A complete list of all the peripheral interface connectors can be seen in **Section 4.1.2**.

4.1.1 NANO-LX SBC Layout

Figure 4-1 shows the onboard peripheral connectors, backplane peripheral connectors and onboard jumpers on the front side of the card.

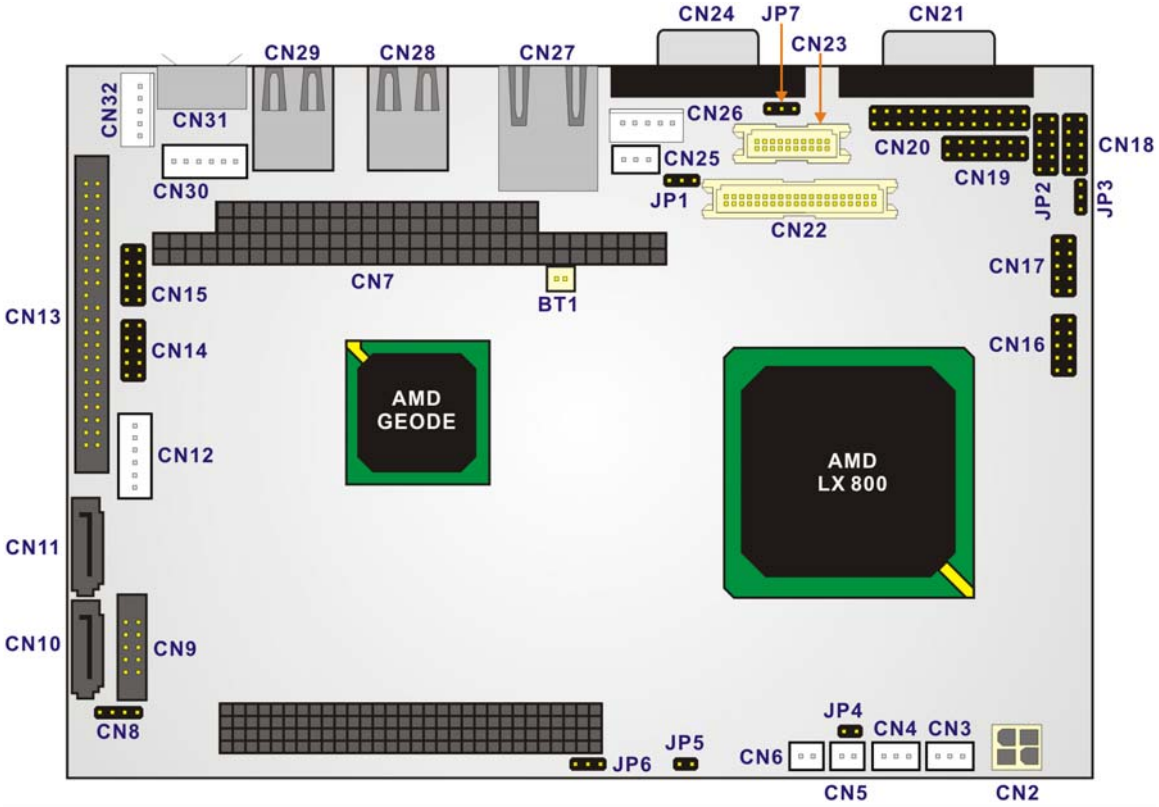

Figure 4-1: Connector and Jumper Locations (Front Side)

Figure 4-2 shows the onboard peripheral connectors on the solder side of the board.

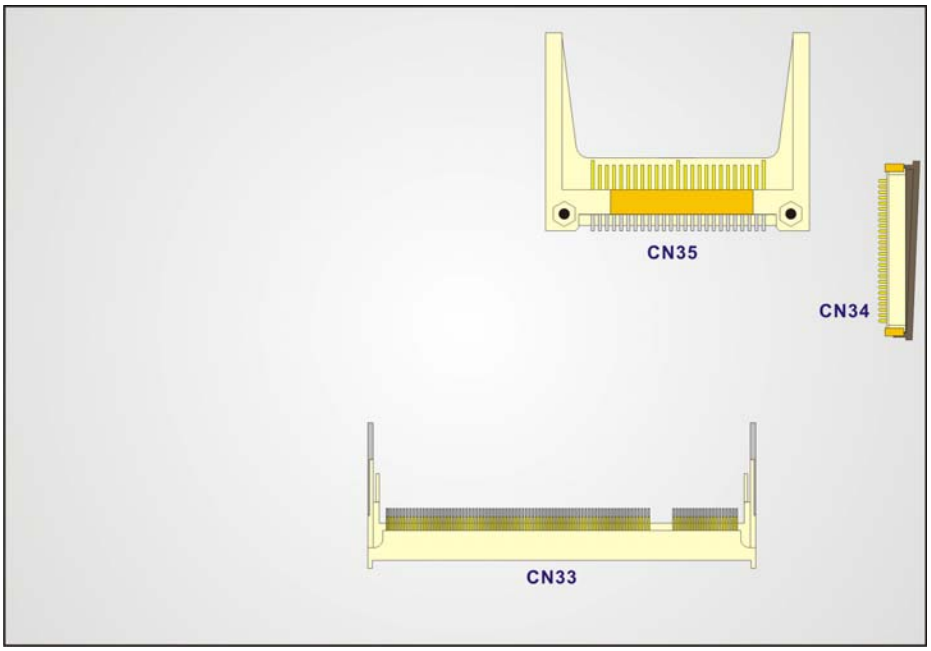

Figure 4-2: Connector and Jumper Locations (Solder Side)

4.1.2 Peripheral Interface Connectors

Table 4-1 shows a list of the peripheral interface connectors on the NANO-LX SBC. Detailed descriptions of these connectors can be found in **Section 4.2**.

Connector	Type	Label
200-pin DDR SO-DIMM socket	200-pin socket	CN33
ATX connector	3-pin header	CN3
ATX Power Button connector	2-pin header	CN5
Audio CD-In connector	4-pin header	CN8
Audio connector	10-pin header	CN9
Battery Connector	2-pin header	BT1
Compact Flash Type II connector	50-pin header	CN35
Digital Input Output connector	10-pin header	CN18

Connector	Type	Label
Fan connector	3-pin header	CN4
FDD connector	26-pin header	CN34
IDE Interface connector	44-pin header	CN13
Inverter connector	5-pin header	CN26
IrDA connector	5-pin header	CN32
Keyboard/Mouse connector	6-pin header	CN30
LED Power connector	6-pin header	CN12
LVDS LCD Panel connector	20-pin header	CN23
Parallel Port connector	26-pin header	CN20
PC/104-Plus connector	PC/104-Plus connector	CN7
Power connector (Default)	4-pin header	CN2
Power connector (Optional)	2-pin header	CN1
Power Input connector	3-pin header	CN25
Reset Button connector	2-pin header	CN6
SATA Drive port (150MB/s)	SATA disk drive port	CN10
SATA Drive port (150MB/s)	SATA disk drive port	CN11
Serial Communications connector	10-pin header	CN14
Serial Communications connector	10-pin header	CN15
Serial Communications connector	10-pin header	CN16
Serial Communications connector	10-pin header	CN17
Serial Communications connector	14-pin header	CN19
TFT TTL LCD	40-pin header	CN22

Table 4-1: Peripheral Interface Connectors

4.1.3 Rear Panel Connectors

Table 4-2 lists the rear panel connectors on the NANO-LX SBC. Detailed descriptions of these connectors can be found in **Section 4.3**.

Connector	Type	Label
Serial connector	RS232 connector	CN21
VGA Connector	15-pin VGA connector	CN24
Ethernet connector	RJ-45	CN27
USB Combo connector	USB Port	CN28
USB Combo connector	USB Port	CN29
Keyboard/Mouse connector	PS/2	CN31

Table 4-2: Rear Panel Connectors

4.1.4 Onboard Jumpers

Table 4-3 lists the onboard jumpers. Detailed descriptions of these jumpers can be found in **Section 5.6**.

Connector	Type	Label
AT/ATX Power Mode Select	2-pin header	JP4
COM1, COM2 RI Pin and Voltage Selection (Optional)	10-pin header	JP2
COM3 RS422/RS485 Select	3-pin header	JP3
LCD Panel (LVDS/TTL) Voltage select	2-pin header	JP7
LCD PANEL SHIFT CLOCK	3-pin header	JP1
PC104 Plus VIO Voltage Select	3-pin header	JP5
SERIRQ Select	2-pin header	JP6

Table 4-3: Onboard Jumpers

4.2 Internal Peripheral Connectors

Internal peripheral connectors on the SBC are only accessible when the SBC is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the NANO-LX SBC.

4.2.1 ATX Connector

CN Label: CN3

CN Type: 3-pin header

CN Pinouts: See Table 4-4

CN Location: See Figure 4-3

The ATX connector is a 5V standby connection for the ATX power supply.

PIN	DESCRIPTION
1	5VSB
2	NC
3	PS-ON

Table 4-4: CN3 Connector Pinouts

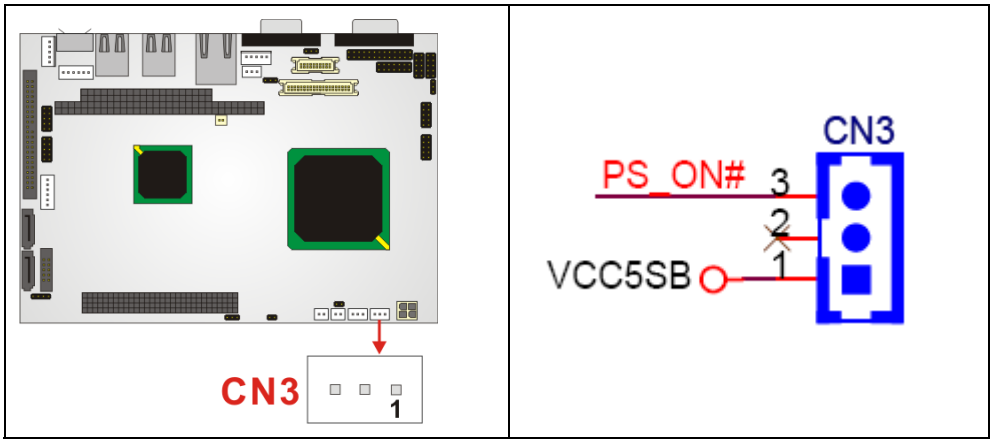

Figure 4-3: CN3 Connector Location

4.2.2 ATX Power Button

CN Label: CN5

CN Type: 2-pin header

CN Pinouts: See Table 3-6

CN Location: See Figure 3-5

The ATX Power Button connector connects to the system power On/Off switch.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	ATX Power button +	2	ATX Power button -

Table 4-5: CN5 Connector Pinouts

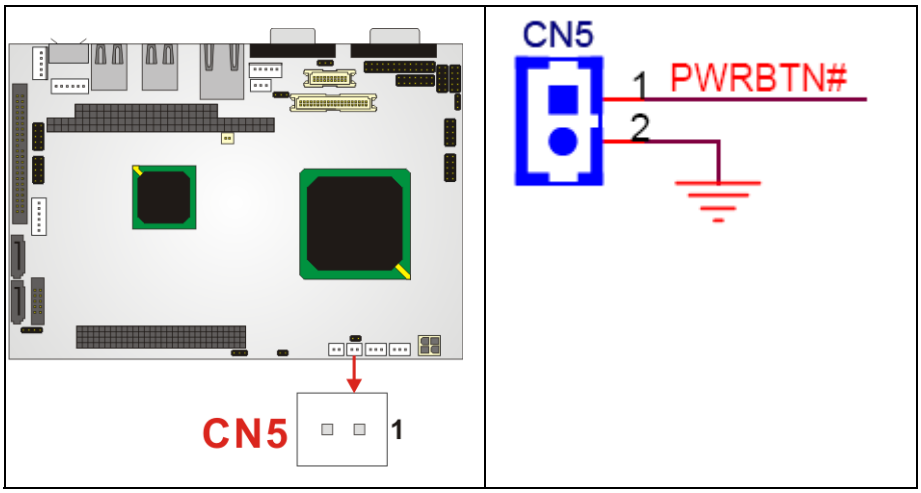

Figure 4-4: CN5 Connector Location

4.2.3 Audio CD-In Connector

CN Label: CN8

CN Type: 4-pin header

CN Pinouts: See Table 4-6

CN Location: See Figure 4-5

The Audio CD-In connector connects to audio sources such as CD/DVD-ROM optical drives.

PIN	DESCRIPTION
1	CD Left
2	GND
3	GND
4	CD Right

Table 4-6: CN8 Connector Pinouts

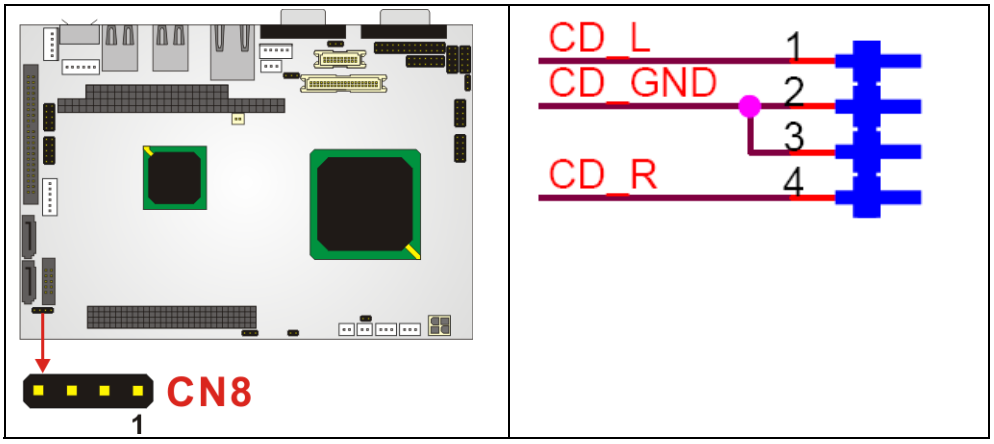

Figure 4-5: CN8 Connector Location

4.2.4 Audio Connector

CN Label: CN9

CN Type: 10-pin header (2x5 pins)

CN Pinouts: See Table 4-7

CN Location: See Figure 4-6

AC'97 Audio signals are interfaced through a 10-pin flat-cable connector. These signals include Microphone line-in, line-in stereo, and line-out stereo. An audio 10-pin-to-phone-jack adapter kit is required.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	LINE_OUT_R	2	LINE_IN_R
3	GND	4	GND
5	LINE_OUT_L	6	LINE_IN_L

7	GND	8	GND
9	MIC1	10	MIC2

Table 4-7: CN9 Connector Pinouts

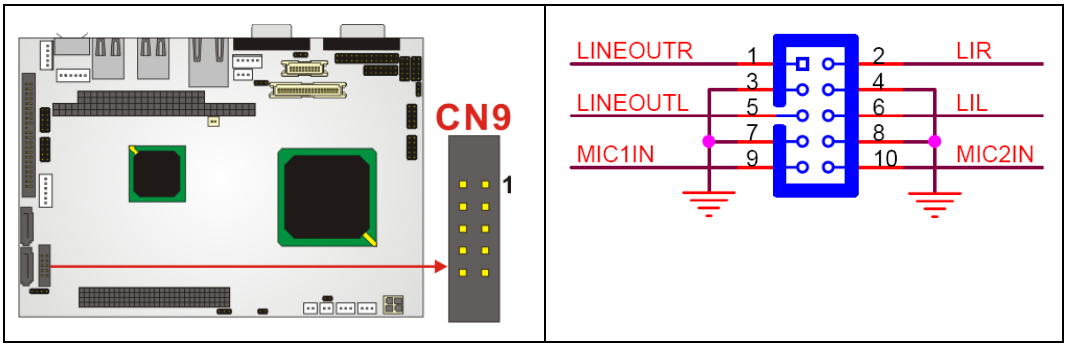

Figure 4-6: CN9 Connector Location

4.2.5 Battery Connector

CN Label: BT1

CN Type: 2-pin header

CN Pinouts: See Table 4-8

CN Location: See Figure 4-7

This battery connector connects to an externally mounted 3V, Lithium, cell coin battery (VARTA CR2032). The life expectancy of the battery is approximately 7 years. Depending on the working condition, the life expectancy may be shorter.

Replacing the battery is not a user operation.

If the battery starts to weaken and lose voltage, contact a vendor or IEI for a replacement module. Dispose of the used battery properly. Contact the local waste disposal agency for disposal instructions. Do not dispose of a used battery with normal household waste.

WARNING!

1. Keep batteries away from children.
2. There is a danger of explosion if the battery is incorrectly replaced.
3. Only a certified module from IEI can be used as a replacement.
4. Do not expose the battery to excessive heat or fire.
5. If the battery shows signs of leakage, contact a local vendor or IEI immediately.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	BAT+	2	GND

Table 4-8: BT1 Connector Pinouts

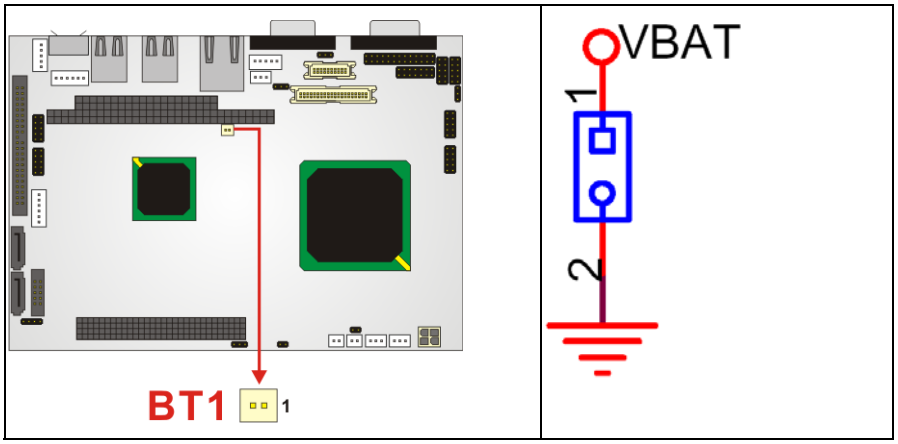

Figure 4-7: BT1 Connector Location

4.2.6 Compact Flash Connector

CN Label: CN35

CN Type: 50-pin header (2x25 pins)

CN Pinouts: See Table 4-9

CN Location: See Figure 4-8

The Compact Flash connector is used to adapt Type II Compact Flash and CF+ cards for use in Type II (5 mm thick) PCMCIA card slots.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	26	-CD1
2	D03	27	D11
3	D04	28	D12
4	D05	29	D13
5	D06	30	D14
6	D07	31	D15
7	-CE1	32	-CE2
8	A10	33	-VS1
9	-OE	34	-IORD
10	A09	35	-IOWR
11	A08	36	-WE
12	A07	37	READY
13	VCC	38	VCC
14	A06	39	A25
15	A05	40	-VS2
16	A04	41	RESET
17	A03	42	-WAIT
18	A02	43	-INPACK
19	A01	44	-REG
20	A00	45	BVD2
21	D00	46	BVD1
22	D01	47	D08
23	D02	48	D09
24	WP	49	D10
25	-2CD	50	GND

Table 4-9: CN35 Connector Pinouts

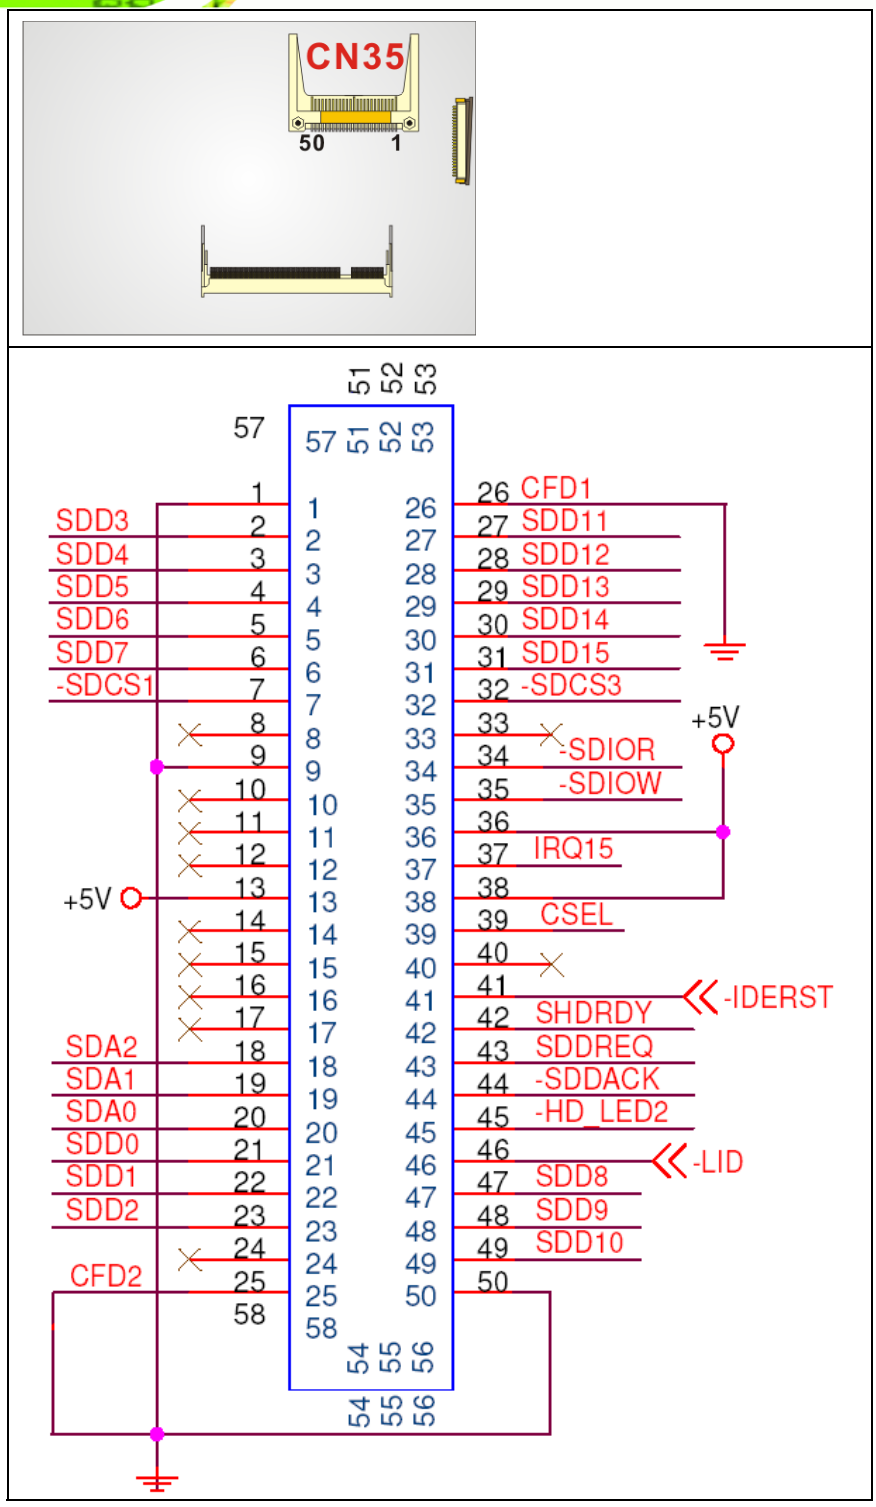

Figure 4-8: CN35 Connector Location

4.2.7 Digital Input Output Connector

CN Label: CN18

CN Type: 10-pin header (2x5 pins)

CN Pinouts: See Table 4-10

CN Location: See Figure 4-9

The Digital Input Output connector is a user-programmable general-purpose I/O controller managed through a Winbond W83697HF LPC SI/O chip.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	2	VCC5
3	OUT0	4	OUT1
5	OUT2	6	OUT3
7	IN0	8	IN1
9	IN2	10	IN3

Table 4-10: CN18 Connector Pinouts

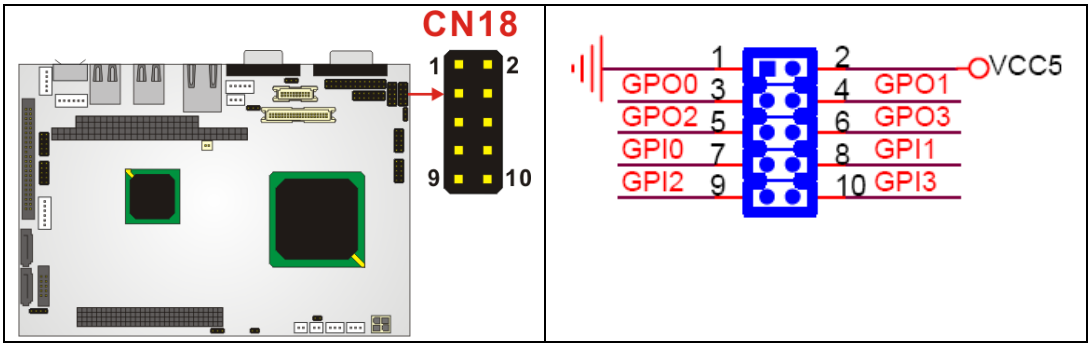

Figure 4-9: CN18 Connector Location

4.2.8 Fan Connector

CN Label: CN4

CN Type: 3-pin header

CN Pinouts: See Table 4-11

CN Location: See Figure 4-10

The Fan connector provides a 5Vcurrent to the cooling fan. The connector has a "rotation" pin to get rotation signals from the fan and notify the system so the system BIOS can recognize the fan speed. Please note that only certain fans can issue the rotation signals.

PIN	DESCRIPTION
1	Rotation Signal
2	VCC5
3	GND

Table 4-11 CN4 Connector Pinouts

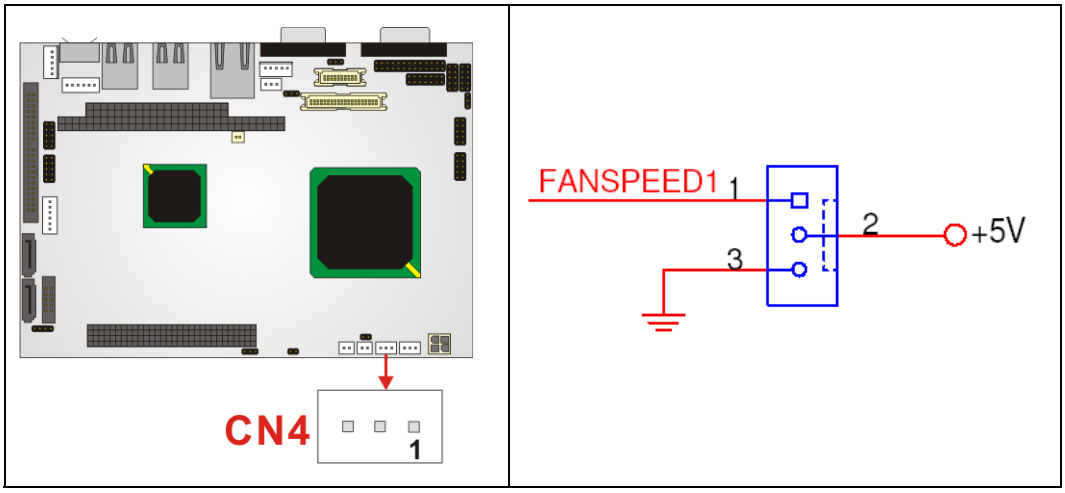

Figure 4-10 CN4 Connector Location

4.2.9 FDD Connector

CN Label: CN34

CN Type: 26-pin header

CN Pinouts: See Table 4-12

CN Location: See Figure 4-11

The FDD connector connects to a floppy disk drive.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	+5V	14	STEP#
2	INDEX#	15	GND
3	+5V	16	WDATA#
4	DSA#	17	GND
5	+5V	18	WGATE#
6	DSKCHG#	19	GND
7	NC	20	TRACK0#
8	NC	21	GND
9	NC	22	WP#
10	MOTO0#	23	GND
11	NC	24	RDATA#
12	DIR#	25	GND
13	NC	26	HEAD#

Table 4-12 CN4 Connector Pinouts

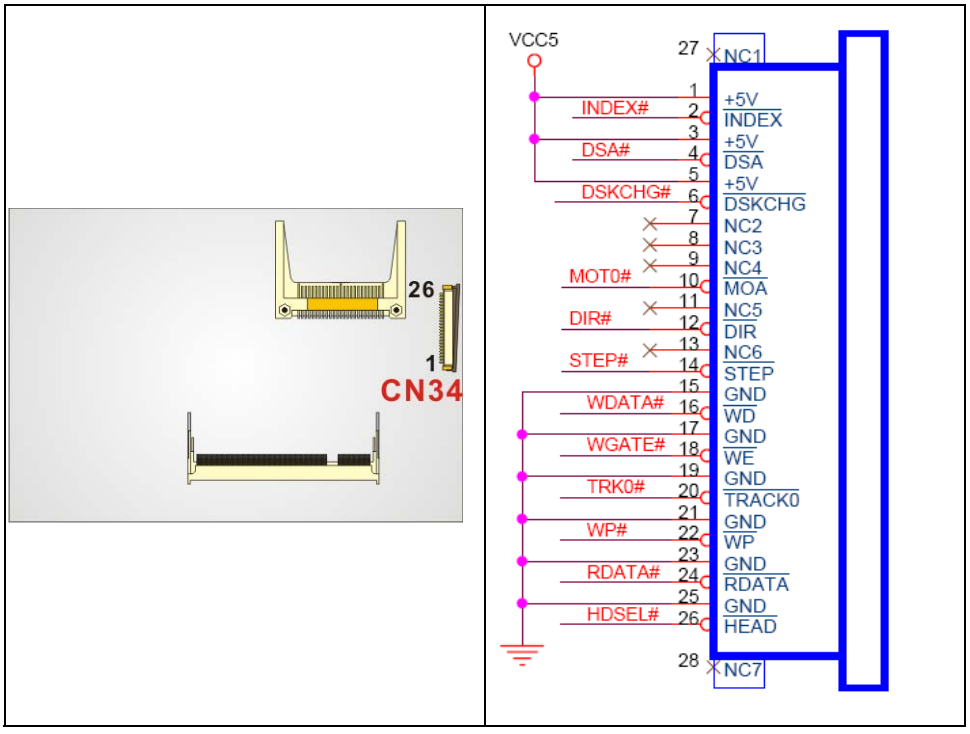

Figure 4-11: CN34 Connector Location

4.2.10 IDE Interface Connector

CN Label: CN13

CN Type: 44-pin header (2x22 pins)

CN Pinouts: See Table 4-13

CN Location: See Figure 4-12

The IDE Interface connector provides connectivity for two IDE devices.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	RESET#	2	GND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	SIGNAL GND	20	(KEY)
21	HDD 0	22	GND
23	IO WRITE	24	GND
25	IO READ	26	GND
27	HD READY	28	N/C
29	HDACK 0	30	GND
31	IRQ14	32	N/C
33	ADDR 1	34	N/C
35	ADDR 0	36	ADDR 2
37	HDD SELECT 0	38	HDD SELECT 1
39	IDE ACTIVE#	40	GND
41	VCC	42	VCC
43	GND	44	N/C

Table 4-13: CN13 Connector Pinouts

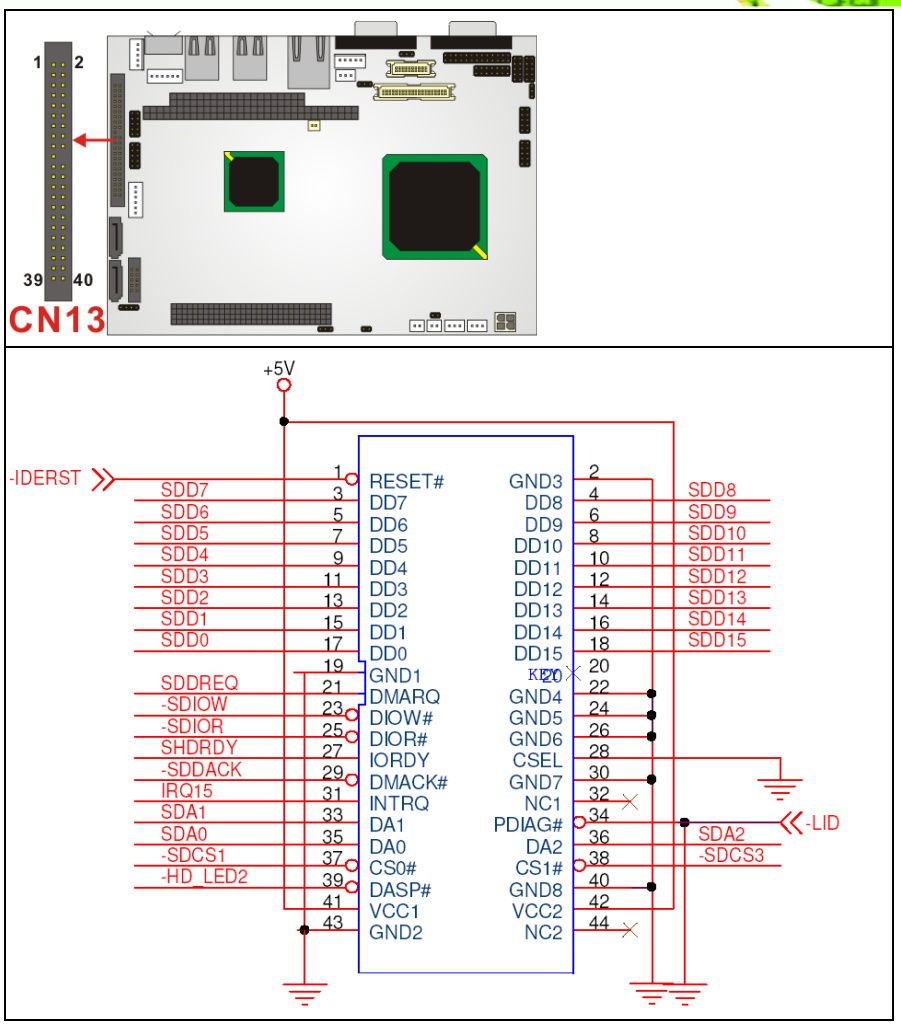

Figure 4-12: CN13 Connector Location

4.2.11 Inverter Connector

CN Label:	CN26
CN Type:	5-pin header
CN Pinouts:	See Table 4-14
CN Location:	See Figure 4-13

The Inverter connector connects to the LCD backlight.

PIN	DESCRIPTION
1	BL_ADJ (default:GND)
2	GND
3	VCC12
4	GND
5	VDD_EN

Table 4-14: CN26 Connector Pinouts

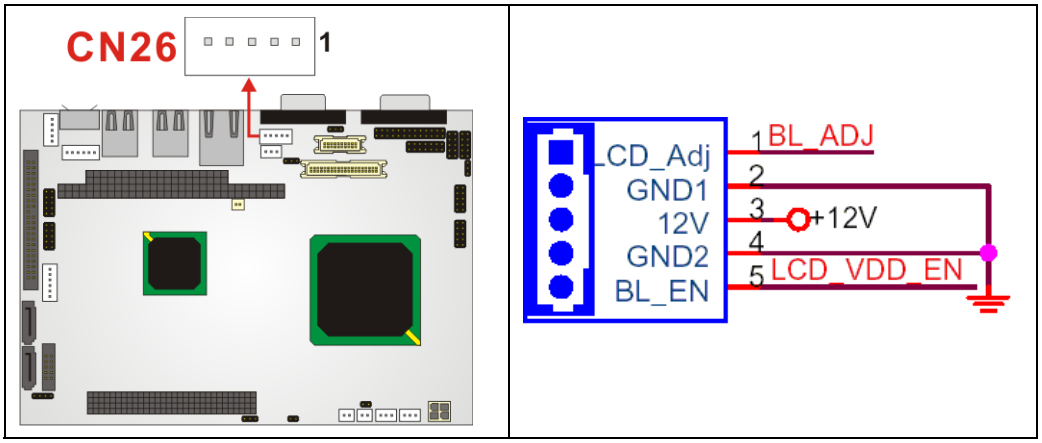

Figure 4-13: CN26 Connector Location

4.2.12 IrDA Connector

CN Label: CN32

CN Type: 5-pin header

CN Pinouts: See Table 4-15

CN Location: See Figure 4-14

The integrated IrDA connector supports both the SIR and ASKIR infrared protocols.

PIN	DESCRIPTION
1	VCC5
2	NC
3	IR-RX
4	GND

PIN	DESCRIPTION
5	IR-TX

Table 4-15: CN32 Connector Pinouts

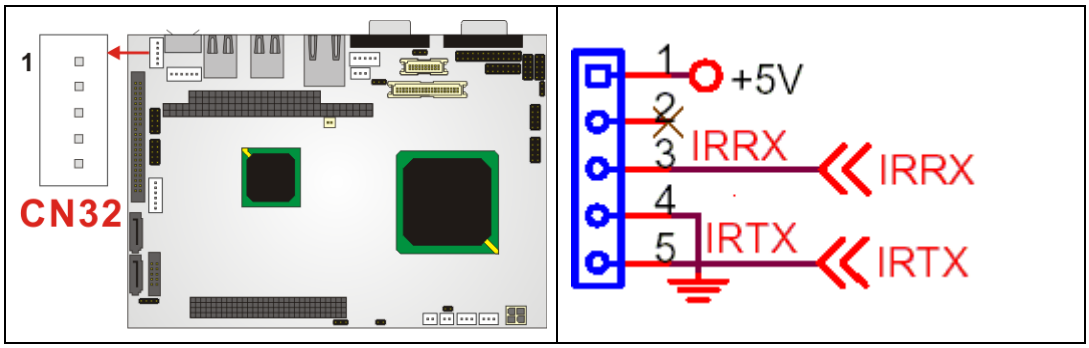

Figure 4-14: CN32 Connector Location

4.2.13 Keyboard/Mouse Connector

CN Label: CN30

CN Type: 6-pin header

CN Pinouts: See Table 4-16

CN Location: See Figure 4-15

For alternative applications, an on board keyboard/mouse pin header connector is also available.

PIN	DESCRIPTION
1	VCC
2	MS_DATA
3	MS_CLK
4	KB_DATA
5	KB_CLK
6	GND

Table 4-16: CN30 Connector Pinouts

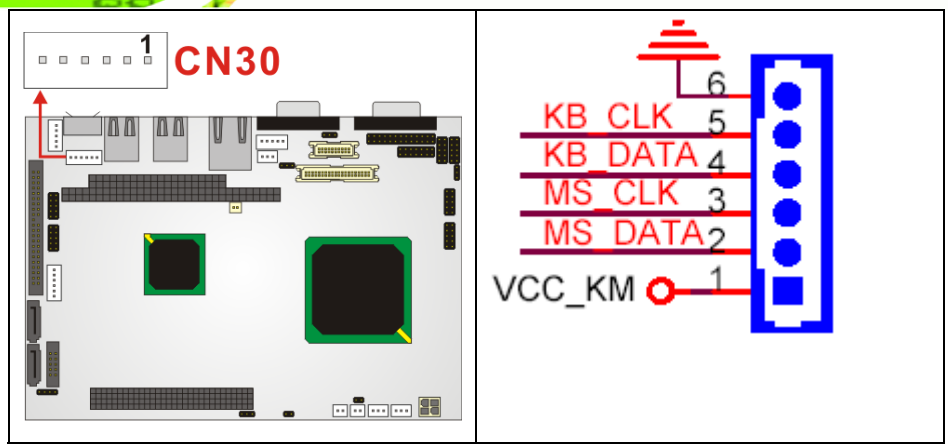

Figure 4-15: CN30 Connector Location

4.2.14 LED Power Connector

CN Label:	CN12
CN Type:	6-pin header
CN Pinouts:	See Table 4-17
CN Location:	See Figure 4-16

The LED power connector provides the connectivity to the power and hard drive activity LEDs on the chassis front panel. An adapter cable is required.

PIN	DESCRIPTION
1	+5V
2	GND
3	POWER LED+
4	POWER LED-
5	HDD LED+
6	HDD LED-

Table 4-17: CN12 Connector Pinouts

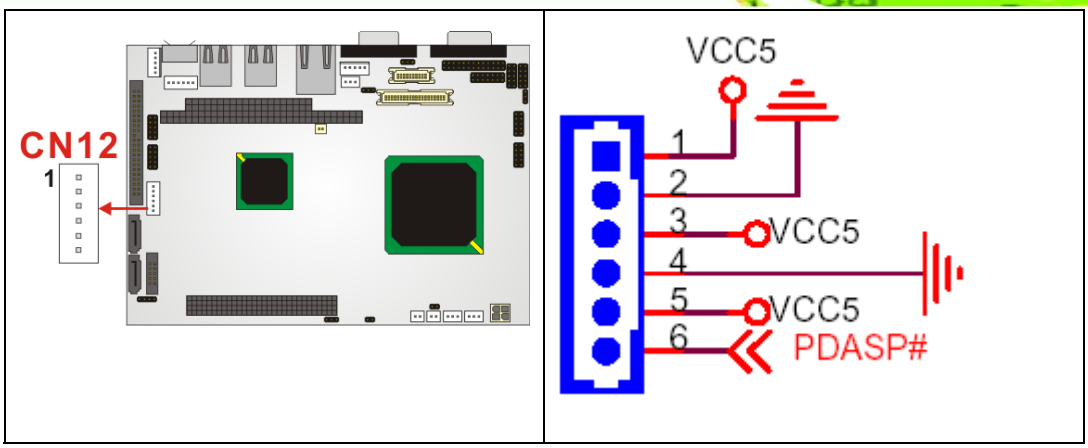

Figure 4-16: CN12 Connector Location

4.2.15 LVDS LCD Panel Connector

CN Label: CN23

CN Type: 20-pin header (2x10)

CN Pinouts: See Table 4-18

CN Location: See Figure 4-17

The LVDS LCD connector connects to a one or two channel (18-bit or 24-bit) LVDS panel.

PIN	DESCRIPTION	PIN	DESCRIPTION
2	GND	1	GND
4	LVDS_Y0-	3	LVDS_Y0+
6	LVDS_Y1-	5	LVDS_Y1+
8	LVDS_Y2-	7	LVDS_Y2+
10	LVDS_CLK-	9	LVDS_CLK+
12	NC	11	NC
14	GND	13	GND
16	I_SCL	15	I_SDA
18	LCD_VCC	17	LCD_VCC
20	LCD_VCC	19	LCD_VCC

Table 4-18: CN23 Connector Pinouts

NOTE:

The supplied voltage can be selected via JP7.

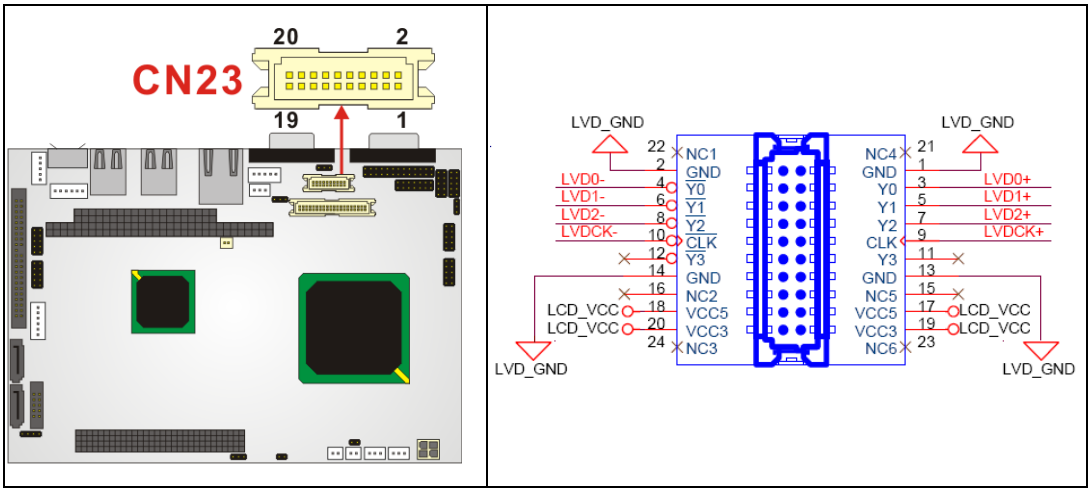

Figure 4-17: CN23 Connector Location

4.2.16 Parallel Port Connector

CN Label:	CN20
CN Type:	26-pin header (2x13 pins)
CN Pinouts:	See Table 4-19
CN Location:	See Figure 4-18

The parallel port connector connects to a printer. The NANO-LX comes with a multi-mode (ECP/EPP/SPP) parallel port. The CN20 parallel port interface features a 26-pin flat-cable connector that requires an adapter cable if a traditional DB-25 connector is preferred. The parallel interface can be re-assigned to LPT2 or LPT3 through the BIOS configuration utility. The default interrupt channel is IRQ7. Select ECP or EPP DMA mode using the BIOS configuration utility.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	STROBE#	2	AUTO FORM FEED#
3	DATA0	4	ERROR#
5	DATA1	6	INITIALIZE
7	DATA2	8	PRINTER SELECT LN#
9	DATA3	10	GROUND
11	DATA4	12	GROUND
13	DATA5	14	GROUND
15	DATA6	16	GROUND
17	DATA7	18	GROUND
19	ACK-	20	GROUND
21	BUSY	22	GROUND
23	PAPER EMPTY	24	GROUND
25	PRINTER SELECT	26	N/C

Table 4-19: CN20 Connector Pinouts

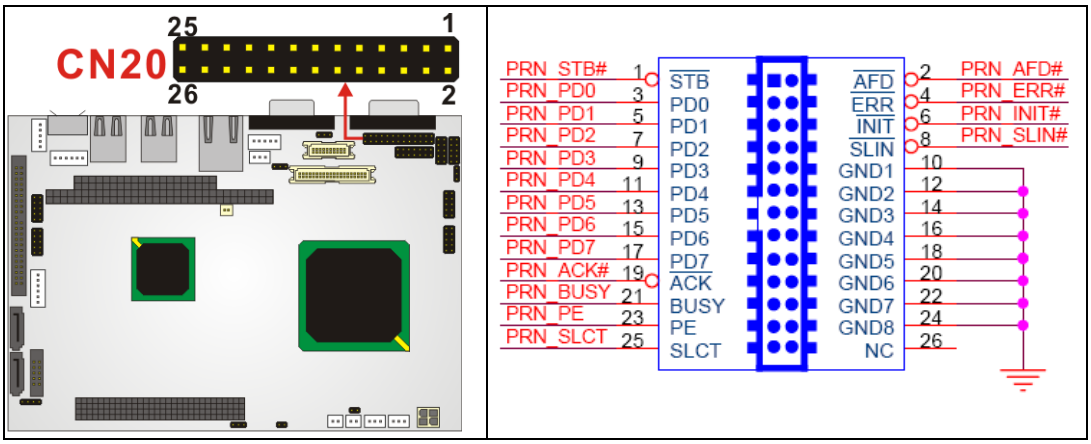

Figure 4-18: CN20 Connector Location

4.2.17 PC/104-Plus Connector

CN Label: CN7

CN Type: PC/104-Plus connector

CN Pinouts: See Table 4-20 and Table 4-21

CN Location: See Figure 4-19

Use the PC/104-Plus connector to add auxiliary boards using stack-through connectors.

Pin	Row A	Row B	Row C	Row D
0	--	--	GND	GND
1	IOCHCHK*	GND	SBHE*	MEMCS16*
2	SD7	RESETDRV	LA23	IOCS16*
3	SD6	+5V	LA22	IRQ10
4	SD5	IRQ9	LA21	IRQ11
5	SD4	-5V	LA20	IRQ12
6	SD3	DRQ2	LA19	IRQ15
7	SD2	-12V	LA18	IRQ14
8	SD1	ENDXFR*	LA17	DACK0*
9	SD0	+12V	MEMR*	DRQ0
10	IOCHRDY	(KEY)	MEMW*	DACK5*
11	AEN	SMEMW*	SD8	DRQ5
12	SA19	SMEMR*	SD9	DACK6*
13	SA18	IOW*	SD10	DRQ6
14	SA17	IOR*	SD11	DACK7*
15	SA16	DACK3*	SD12	DRQ7
16	SA15	DRQ3	SD13	+5V
17	SA14	DACK1*	SD14	MASTER*
18	SA13	DRQ1	SD15	GND
19	SA12	REFRESH*	(KEY)	GND
20	SA11	SYSCLK	--	--
21	SA10	IRQ7	--	--
22	SA9	IRQ6	--	--
23	SA8	IRQ5	--	--
24	SA7	IRQ4	--	--
25	SA6	IRQ3	--	--
26	SA5	DACK2*	--	--
27	SA4	TC	--	--
28	SA3	BALE	--	--
29	SA2	+5V	--	--

Pin	Row A	Row B	Row C	Row D
30	SA1	OSC	--	--
31	SA0	GND	--	--

Table 4-20: CN7 (PC/104) Connector Pinouts

Pin	A	B	C	D
1	GROUND	TBD1	+5V	AD0
2	VIO	AD2	AD1	+5V
3	AD5	GND	AD4	AD3
4	CBE0-	AD7	GND	AD6
5	GND	AD9	AD8	GND
6	AD11	VIO	AD10	N66EV
7	AD14	AD13	GND	AD12
8	+3.3V	CBE1-	AD15	+3.3V
9	SERR-	GND	SBO-	PAR
10	GND	PERR-	+3.3V	SDONE
11	STOP-	+3.3V	LOCK-	GND
12	+3.3V	TRDY-	GND	DEVSEL-
13	FRAME-	GND	IRDY-	+3.3V
14	GND	AD16	+3.3V	CBE2-
15	AD18	+3.3V	AD17	GND
16	AD21	AD20	GND	AD19
17	+3.3V	AD23	AD22	+3.3V
18	IDSEL0	GND	IDSEL1-	IDSEL2
19	AD24	CBE3-	VIO	IDSEL3
20	GND	AD26	AD25	GND
21	AD29	+5V	AD28	AD27
22	+5V	AD30	GND	AD31
23	REQ0-	GND	REQ1-	VIO
24	GND	REQ2-	+5V	GNT0-
25	GNT1-	VIO	GNT2-	GND
26	+5V	PCICLK0	GND	PCICLK1
27	PCICLK2	+5V	PCICLK3	GND
28	GND	INTD-	+5V	PCIRST-

29	+12V	INTA-	INTB-	INTC-
30	-12v	TBD2	TBD	GND/3.3V

Table 4-21: CN7 (PCI-104) Connector Pinouts

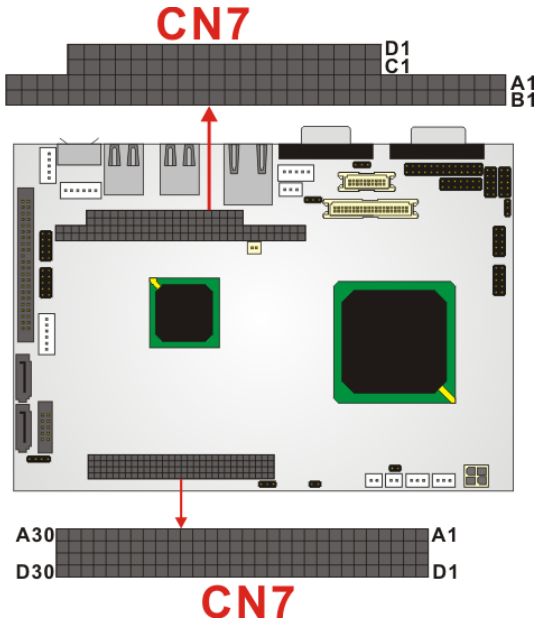

Figure 4-19: CN7 Connector Location

4.2.18 Power Connector

CN Label: CN2

CN Type: 4-pin header (2x2 pins)

CN Pinouts: See Table 4-22

CN Location: See Figure 4-20

This connector supports the ATX-12V power supply.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	2	GND
3	+12V	4	+12V

Table 4-22: CN2 Connector Pinouts

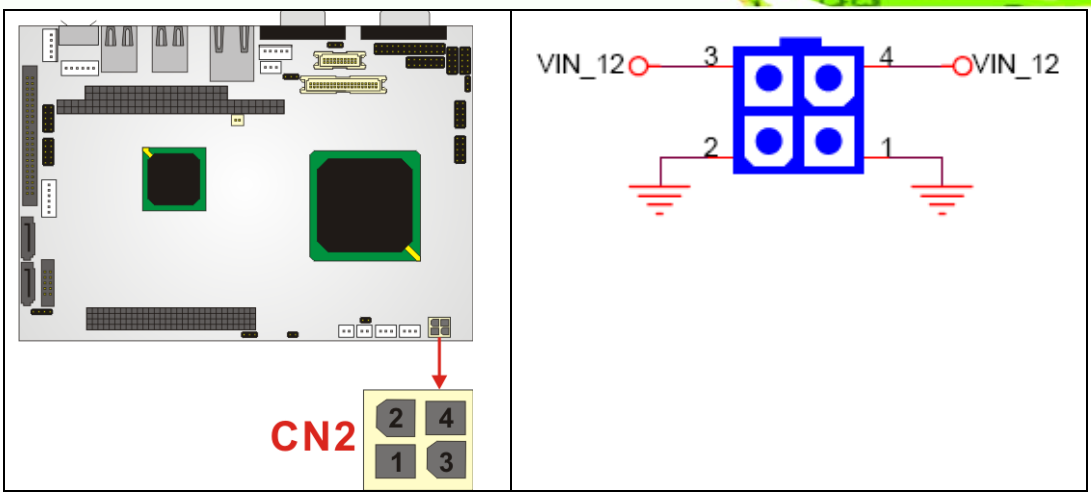

Figure 4-20: CN2 Connector Location

4.2.19 Power Input Connector

CN Label: CN25

CN Type: 3-pin header

CN Pinouts: See Table 4-23

CN Location: See Figure 4-21

The Power Input connector is a –5V/-12V power connector for ISA devices.

PIN	DESCRIPTION
1	-VCC5
2	GND
3	-VCC12

Table 4-23: CN25 Connector Pinouts

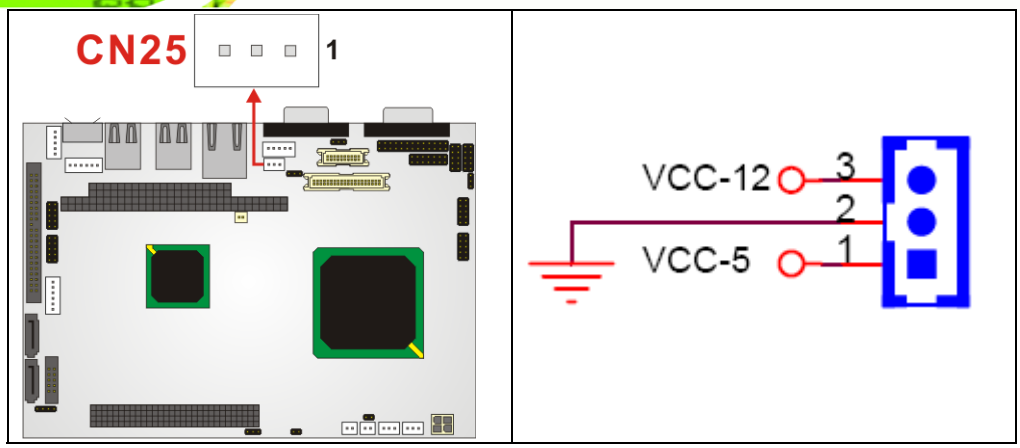

Figure 4-21: CN25 Connector Location

4.2.20 Reset Button Connector

CN Label: CN6

CN Type: 2-pin header

CN Pinouts: See Table 4-24

CN Location: See Figure 4-22

The Reset Button connector connects to an external reset button through an adapter cable.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	RESET BUTTON +	2	RESET BUTTON -

Table 4-24: CN6 Connector Pinouts

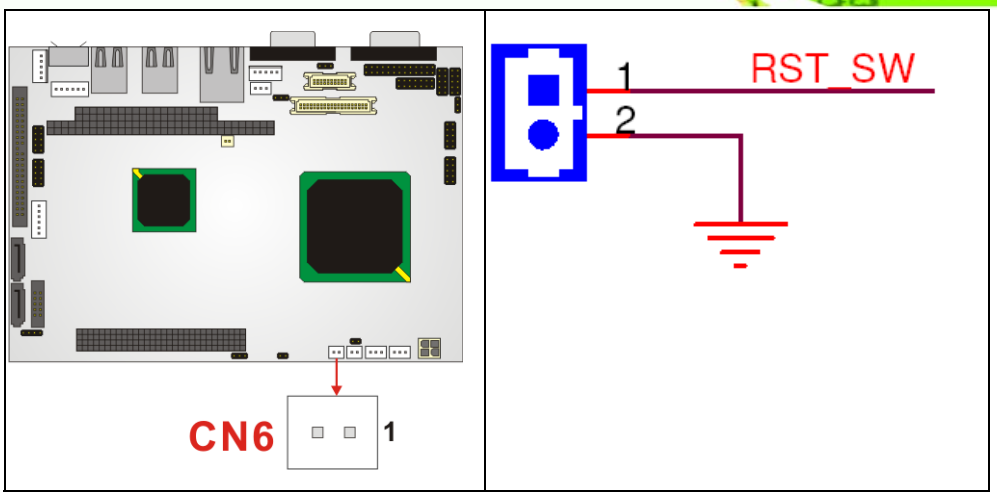

Figure 4-22: CN6 Connector Location

4.2.21 SATA Drive Ports

CN Label:	CN10, CN11
CN Type:	7-pin port
CN Pinouts:	See Table 4-25
CN Location:	See Figure 4-23

The SATA drive ports provide connectivity to SATA drives with a maximum data transfer rate of 150MB/s.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	GND	5	RX-
2	TX+	6	RX+
3	TX-	7	GND
4	GND		

Table 4-25: CN10, CN11 Connector Pinouts

CAUTION!

SATA hard drives may come with both a 4P power connector and a SATA power interface. Attach either the 4P connector or the SATA power cable to the SATA hard drives. ***DO NOT*** attach both the power connectors to your SATA hard drives at the same time! Doing so will cause damage.

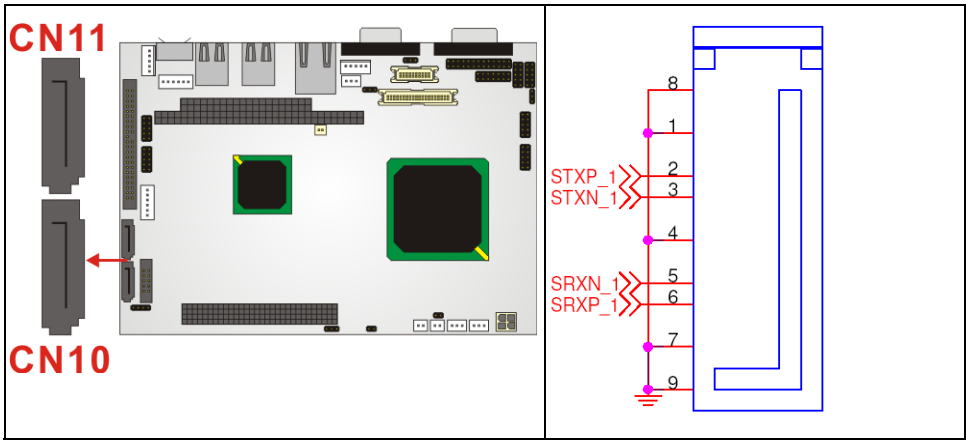

Figure 4-23: CN10, CN11 Connector Locations

NOTE:

1. SATA is supported by:
   - Windows 2000 SP4
   - Windows XP SP1
   - Windows 2003, or later versions.
2. Older OSes, such as Windows 98SE or ME, do not support the SATA interface.

4.2.22 Serial Communications Connector

CN Label:	CN14, CN15, CN16, CN17, CN19
CN Type:	14-pin headers (2x5 pins)
CN Pinouts:	See Table 3-27 and Table 4-27
CN Location:	See Figure 4-24

The NANO-LX offers four ten-pin headers and one 14-pin header for serial connections.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND	10	GND

Table 4-26: CN14, CN15, CN16, CN17 Connector Pinouts

PIN	DESCRIPTION	PIN	DESCRIPTION
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	GND
11	TXD485+	12	TXD485#
13	RXD485+	14	RXD485#

Table 4-27: CN19 Connector Pinouts

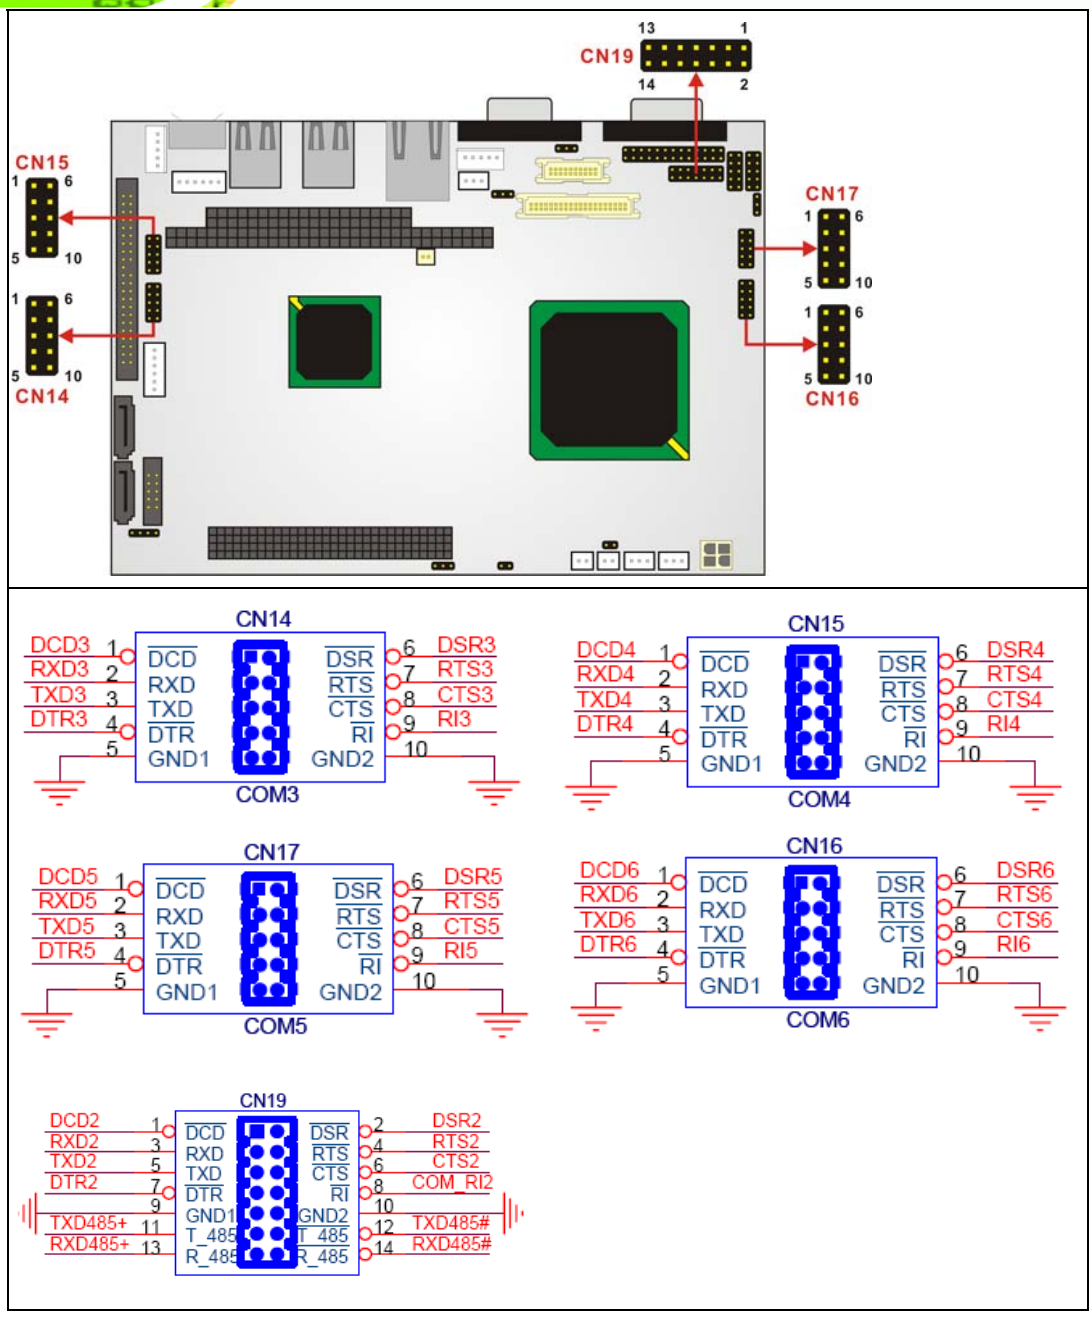

Figure 4-24 CN14, CN15, CN16, CN17, CN19 Connector Locations

4.2.23 TFT TTL LCD Connector

CN Label:	CN22
CN Type:	40-pin headers (2x20 pins)
CN Pinouts:	See Table 4-28

CN Location: See Figure 4-25

TFT LCD (24-bit one channel; DF13-40DP-1.25V)

PIN	DESCRIPTION	PIN	DESCRIPTION
2	LCD_VCC	1	LCD_VCC
4	GROUND	3	GROUND
6	LCD_VCC	5	LCD_VCC
8	GROUND	7	I_SDA
10	B1	9	B0
12	B3	11	B2
14	B5	13	B4
16	B7	15	B6
18	G1	17	G0
20	G3	19	G2
22	G5	21	G4
24	G7	23	G6
26	R1	25	R0
28	R3	27	R2
30	R5	29	R4
32	R7	31	R6
34	GROUND	33	GROUND
36	FPVS	35	FPCLK
38	FPHS	37	FPDEN
40	ENVEE	39	I_SCL

Table 4-28: CN22 Connector Pinouts

NOTE:

The supplied voltage (3.3V and 5V) can be selected via JP7.

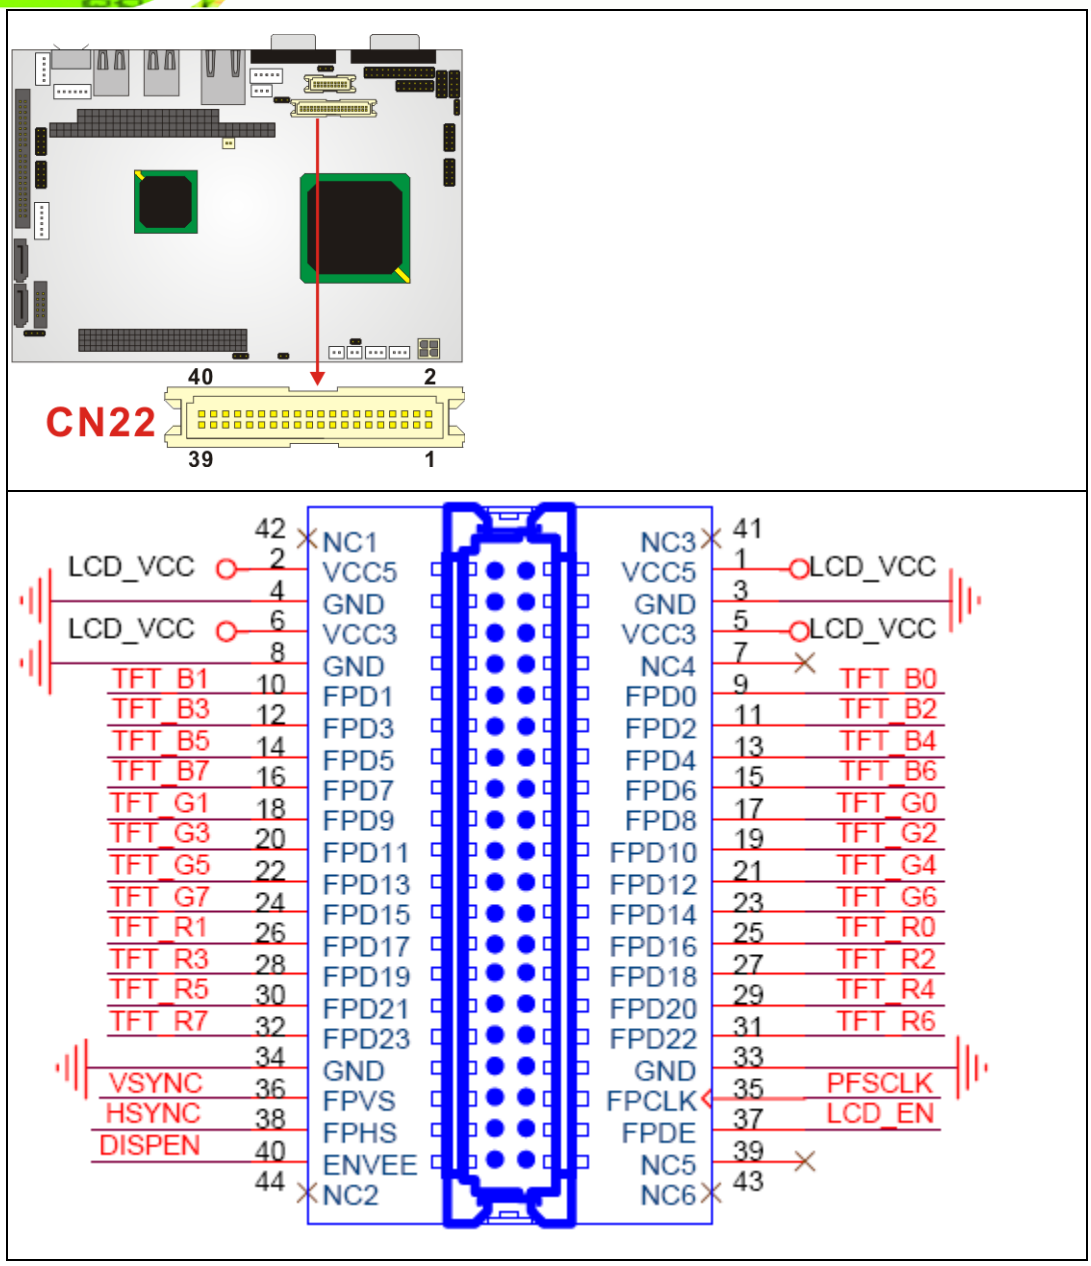

Figure 4-25 CN22 Connector Locations

4.3 External (Rear Panel) Connectors

Figure 4-26 shows the NANO-LX CPU board rear panel. The peripheral connectors on the back panel can connect to external devices when the SBC is installed in a chassis. The peripheral connectors on the rear panel are:

- 1 x RS232 serial connector

- 1 x VGA connector
- 1 x RJ-45 Ethernet connector
- 2 x USB combo connectors
- 1 x PS/2 connector

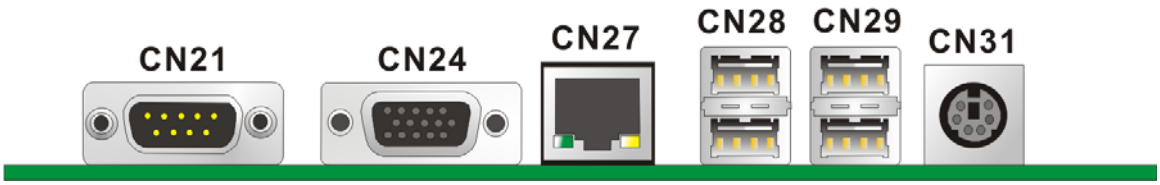

Figure 4-26: NANO-LX CPU Board Rear Panel

4.3.1 RS232 Serial Connector

CN Label: CN21

CN Type: RS-232

CN Pinouts: See Table 4-29 and Figure 4-27

CN Location: See Figure 4-26

The RS-232 Serial connector provides serial connection in the RS-232 mode.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI/Vout
5	GND		

Table 4-29: CN21 Pinouts

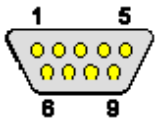

Figure 4-27: CN21 Pinout Locations

4.3.2 VGA Connector

CN Label: CN24

CN Type: HD-D-sub 15 Connector

CN Pinouts: See Table 4-30 and Figure 4-28

CN Location: See Figure 4-26

The standard 15-pin VGA connector connects to a CRT or LCD monitor.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	Red	9	No Connect
2	Green	10	Ground
3	Blue	11	No Connect
4	No Connect	12	DDC DAT
5	Ground	13	Horizontal Synchronization
6	Ground	14	Vertical Synchronization
7	Ground	15	DDC Clock
8	Ground		

Table 4-30: CN24 Connector Pinouts

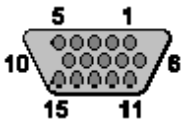

Figure 4-28: CN24 Connector

4.3.3 Ethernet Connector

CN Label: CN27

CN Type: RJ-45

CN Pinouts: See Table 4-31 and Figure 4-29

CN Location: See Figure 4-26

The Ethernet connector provides a 10/100BaseT Ethernet connection to a local or internet network. Refer to the table below for the Ethernet port LED indication.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	TX-	5	N/C
2	N/C	6	RX-
3	TX-	7	N/C
4	RX+	8	N/C

Table 4-31: CN27 Connector Pinouts

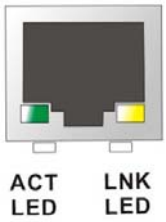

Figure 4-29: CN27 Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked (**Table 4-32**).

SPEED LED		LINK LED	
Status	**Description**	**Status**	**Description**
GREEN	ON: 100MB OFF: 10MB	YELLOW	ON: Linked Flashing: Activity

Table 4-32: CN27 Connector LEDs

4.3.4 USB Combo Connectors

CN Label: CN28, CN29

CN Type: USB port

CN Pinouts: See Table 4-33

CN Location: See Figure 4-26

The USB comb connector provides the connectivity to additional USB devices through an adapter cable. Various adapters may come with USB ports on a slot bracket or ports that can be attached to D-SUB openings on a chassis. USB devices connect directly to the USB connectors on the rear panel.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	+5V	8	GND
2	USBDT2N	7	USBDT3P
3	USBDT2P	6	USBDT3N
4	GND	5	+5V

Table 4-33: CN28, CN29 Connector Pinouts

4.3.5 Keyboard/Mouse Connector

CN Label: CN31

CN Type: PS/2

CN Pinouts: See Table 4-34 and Figure 4-30

CN Location: See Figure 4-26

The Keyboard/Mouse connector connects to a mouse and keyboard.

PIN	DESCRIPTION	PIN	DESCRIPTION
1	KB Data	2	MS_DATA
3	GND	4	+5V
5	Clock	6	MS_CLK

Table 4-34: CN31 Pinouts

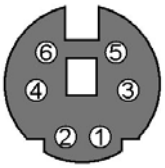

Figure 4-30: CN31 Pinout locations

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

5

Installation and Configuration

5.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the installation of the NANO-LX may result in permanent damage to the NANO-LX and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the NANO-LX. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the NANO-LX, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***:- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the NANO-LX, place it on an antic-static pad. This reduces the possibility of ESD damaging the NANO-LX.
- ***Only handle the edges of the PCB***:-: When handling the PCB, hold the PCB by the edges.

5.2 Installation Considerations

NOTE:

The following installation notices and installation considerations should be read and understood before the NANO-LX is installed. All installation notices pertaining to the installation of the NANO-LX should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the NANO-LX and injury to the person installing the motherboard.

5.2.1 Installation Notices

WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the NANO-LX, NANO-LX components and injury to the user.

Before and during the installation please **DO** the following:

- **Read the user manual**:
  - The user manual provides a complete description of the NANO-LX installation instructions and configuration options.
- **Wear an electrostatic discharge cuff (ESD)**:
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- **Place the NANO-LX on an antistatic pad**:
  - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- **Turn all power to the NANO-LX off**:

- When working with the NANO-LX, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the NANO-LX **DO NOT:**

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

5.2.2 Installation Checklist

The following checklist is provided to ensure the NANO-LX is properly installed.

- All the items in the packing list are present
- The CPU is installed
- The CPU cooling kit is properly installed
- A compatible memory module is properly inserted into the slot
- The CF Type I or CF Type II card is properly installed into the CF socket
- The jumpers have been properly configured
- The NANO-LX is inserted into a chassis with adequate ventilation
- The correct power supply is being used
- The following devices are properly connected
  - Primary and secondary IDE device
  - SATA drives
  - Keyboard and mouse cable
  - Audio kit
  - Power supply
  - USB cable
  - Serial port cable
  - Parallel port cable
- The following external peripheral devices are properly connected to the chassis:
  - VGA screen
  - Keyboard

- Mouse
- RS-232 serial communications device

5.3 Unpacking

5.3.1 Unpacking Precautions

When the NANO-LX is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 5.1**.
- Make sure the packing box is facing upwards so the NANO-LX does not fall out of the box.
- Make sure all the components in the checklist shown in **Section 5.3.2** are present.

5.3.2 Unpacking Checklist

NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the NANO-LX from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

When the NANO-LX is received, make sure all the components listed below are present.

- NANO-LX single board computer
- IDE flat cable 44p/44p
- RS-232 cables
- Audio cable
- Power cable
- Keyboard/Mouse Y cable
- SATA cables
- SATA power cables

- Mini jumper Pack
- Quick Installation Guide
- Utility CD

5.4 SO-DIMM Installation

WARNING:

Using incorrectly specified SO-DIMM may cause permanently damage the NANO-LX. Please make sure the purchased SO-DIMM complies with the memory specifications of the NANO-LX. SO-DIMM specifications compliant with the NANO-LX are listed in **Chapter 2**.

To install a SO-DIMM into a SO-DIMM socket, please follow the steps below and refer to **Figure 5-1**.

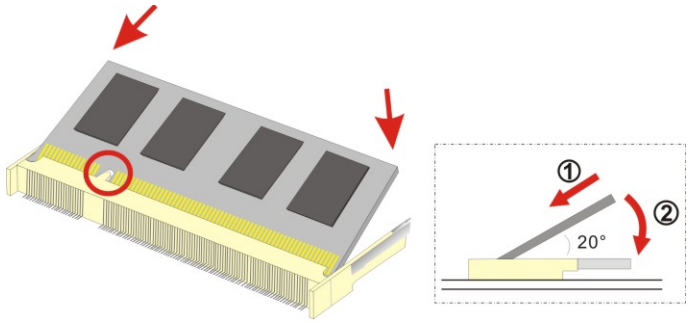

Figure 5-1: SO-DIMM Installation

Step 1: **Locate the SO-DIMM socket**. Place the NANO-LX on an anti-static pad with the solder side facing up.

Step 2: **Align the SO-DIMM with the socket**. The SO-DIMM must be oriented in such a way that the notch in the middle of the SO-DIMM must be aligned with the plastic bridge in the socket.

Step 3: **Insert the SO-DIMM**. Push the SO-DIMM chip into the socket at an angle. (See **Figure 5-1**)

Step 4: **Open the SO-DIMM socket arms**. Gently pull the arms of the SO-DIMM socket out and push the rear of the SO-DIMM down. (See **Figure 5-1**)

Step 5: **Secure the SO-DIMM**. Release the arms on the SO-DIMM socket. They clip into place and secure the SO-DIMM in the socket.

5.5 CF Card Installation

NOTE:

The NANO-LX supports CF Type II card. For the complete specifications of the supported CF cards please refer to **Chapter 2**.

To install the a CF Type II card onto the NANO-LX, please follow the steps below:

Step 1: **Locate the CF card socket**. Place the NANO-LX on an anti-static pad with the solder side facing up. Locate the CF card.

Step 2: **Align the CF card**. Make sure the CF card is properly aligned with the CF socket.

Step 3: **Insert the CF card**. Gently insert the CF card into the socket making sure the socket pins are properly inserted into the socket. See **Figure 5-2**.

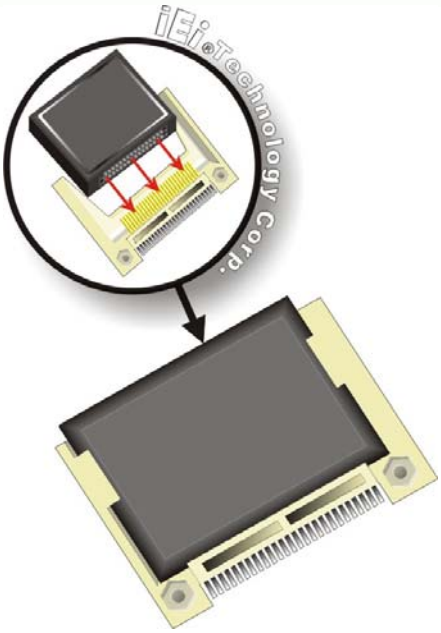

Figure 5-2: CF Card Installation

5.6 Jumper Settings

NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

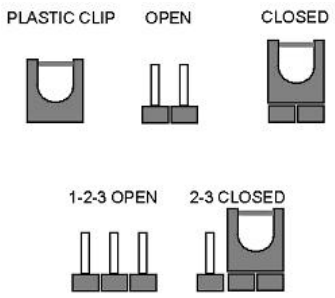

Figure 5-3: Jumper Locations

Before the NANO-LX is installed in the system, the jumpers must be set in accordance with the desired configuration. The jumpers on the NANO-LX are listed in **Table 5-1**.

Description	Label	Type
AT/ATX Power Mode Select	2-pin header	JP4
COM1, COM2 RI Pin and Voltage Selection (Optional)	10-pin header	JP2
COM3 RS422/RS485 Select	3-pin header	JP3
LCD Panel (LVDS/TTL) Voltage select	2-pin header	JP7
LCD PANEL SHIFT CLOCK	3-pin header	JP1
PC104 Plus VIO Voltage Select	3-pin header	JP5
SERIRQ Select	2-pin header	JP6
AT/ATX Power Mode Select	2-pin header	JP4
COM1, COM2 RI Pin and Voltage Selection (Optional)	10-pin header	JP2
COM3 RS422/RS485 Select	3-pin header	JP3
LCD Panel (LVDS/TTL) Voltage select	2-pin header	JP7
LCD PANEL SHIFT CLOCK	3-pin header	JP1
PC104 Plus VIO Voltage Select	3-pin header	JP5

Table 5-1: Jumpers

NOTE:

The NANO-LX does not provide a “Clear CMOS” configuration jumper. If the system fails to boot due to improper BIOS settings, reset the CMOS contents by disconnecting and reconnecting the BT1 battery connector. Use small-sized needle nose pliers to carefully disconnect and reconnect the BT1 battery connector.

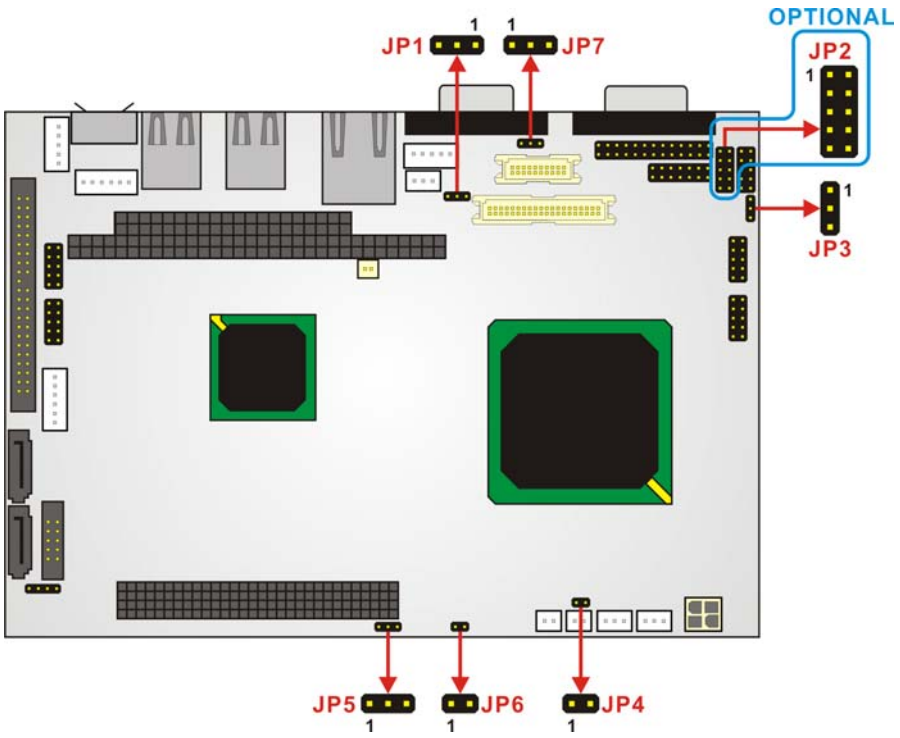

Figure 5-4: Jumper Locations

5.6.1 LCD Panel Shift Clock Jumper

Jumper Label:	JP1
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-2
Jumper Location:	See Figure 5-4

The JP1 jumper sets the LCD panel shift clock.

JP1	Description
1-2	Normal Output (Default)
2-3	Invert Output

Table 5-2: JP1 Jumper Settings

5.6.2 COM1/2 Port RI and Voltage Selection Jumper (Optional)

Jumper Label: JP2

Jumper Type: 10-pin header (2x5 pins)

Jumper Settings: See Table 5-3

Jumper Location: See Figure 5-4

The optional JP2 jumper sets the COM1/2 port RI and voltage.

JP2	Description
1-3	COM1 RI Pin Use +12V
3-5	COM1 RI Pin Use +5V
7-9	COM1 RI Pin Use RI
2-4	COM2 RI Pin Use +12V
4-6	COM2 RI Pin Use +5V
8-10	COM2 RI Pin Use RI

Table 5-3: JP2 Jumper Settings

5.6.3 COM3 RS422/RS485 Select Jumper

Jumper Label: JP3

Jumper Type: 3-pin header

Jumper Settings: See Table 5-4

Jumper Location: See Figure 5-4

The JP3 jumper sets the COM3 connector type to RS-422 or RS-485.

JP3	Description
1-2	UART-2 RxD Signal connect to RS-422 (Default)
2-3	UART-2 RxD Signal connect to RS-485

Table 5-4: JP3 Jumper Settings

5.6.4 AT/ATX Power Mode Select Jumper

Jumper Label:	JP4
Jumper Type:	2-pin header
Jumper Settings:	See Table 5-5
Jumper Location:	See Figure 5-4

The JP4 jumper block controls the connection to a power supply.

The CN5 connector is used to connect a chassis power On/Off button using an adapter cable and is configured through the JP4 jumper. The CN5 connector has two operational modes:

1. Using **ATX** power: CN5 connects to an externally implemented power switch, and the JP4 jumper should be left open.
2. Using **AT** power: The pins on JP4 are shorted by a jumper cap. JP4 should be shorted by default as the AMD® Southbridge is designed without the consideration for a power button signal. The shorted JP4 provides a hardware feedback to initiate the system. The power on/off function is then managed by the AT power switch button.

JP4	Description
Short	AT Mode (Default)
Open	ATX Mode

Table 5-5: JP4 Jumper Settings

5.6.5 PC/104-Plus VIO Voltage Select Jumper

Jumper Label:	JP5
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-6

Jumper Location: See Figure 5-4

The JP5 jumper sets the voltage to the PC/104-Plus connector.

JP5	Description
1-2	PC104 Plus VIO output voltage select 5V
2-3	PC104 Plus VIO output voltage select 3.3V

Table 5-6: JP5 Jumper Settings

5.6.6 SERIRQ Select Jumper

NOTE:

Serial IRQ can only work properly if PCMCIA supports Serial IRQ signal.

Jumper Label: JP6

Jumper Type: 2-pin header

Jumper Settings: See Table 5-7

Jumper Location: See Figure 5-4

Use the JP6 jumper to reserve IRQ addresses for PCMCIA devices.

JP6	Description
Short	SERIRQ Enable
Open	SERIRQ Disable

Table 5-7: JP6 Jumper Settings

5.6.7 LCD Panel (LVDS/TTL) Voltage select Jumper

Jumper Label: JP7

Jumper Type: 3-pin header

Jumper Settings: See Table 5-8

Jumper Location: See Figure 5-4

The JP7 jumper sets the voltage to the LCD panel.

WARNING!

The LCD panel voltage select jumper setting of NANO-LX-800-**R11** is different from the previous version (NANO-LX-800-**R10**). Please confirm the version number of the motherboard prior to setup the LCD panel voltage select jumper (JP7).

Model No.	Pin	Description
NANO-LX-800-R10	Short 1-2	Panel Voltage select 5V
	Short 2-3	Panel Voltage select 3.3V
NANO-LX-800-R11	Short 1-2	Panel Voltage select 3.3V
	Short 2-3	Panel Voltage select 5V

Table 5-8: JP7 Jumper Settings

5.7 Chassis Installation

5.7.1 Airflow

WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the NANO-LX must have air vents to allow cool air to move into the system and hot air to move out.

The NANO-LX must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply

unit, the cooling fan of a power supply can also help generate airflow through the board surface.

NOTE:

IEI has a wide range of backplanes available. Please contact your NANO-LX vendor, reseller or an IEI sales representative at sales@iei.com.tw or visit the IEI website (http://www.ieiworld.com.tw) to find out more about the available chassis.

5.7.2 Motherboard Installation

To install the NANO-LX motherboard into the chassis please refer to the reference material that came with the chassis.

5.8 Internal Peripheral Device Connections

5.8.1 Peripheral Device Cables

The cables listed in **Table 5-9** are shipped with the NANO-LX.

Quantity	Type
1	ATA 66/100 flat cable
1	AT power cable
1	Audio cable
2	Single RS-232 cable
1	KB/MS Y cable
2	SATA drive cable
1	SATA drive power cable

Table 5-9: IEI Provided Cables

5.8.2 ATA Flat Cable Connection

The ATA 66/100 flat cable connects to the NANO-LX to one or two IDE devices. To connect an IDE HDD to the NANO-LX please follow the instructions below.

Step 1: **Locate the IDE connector**. The location/s of the IDE device connector/s is/are shown in **Chapter 3**.

Step 2: **Insert the connector**. Connect the IDE cable connector to the onboard connector. See Figure 5-5. A key on the front of the cable connector ensures it can only be inserted in one direction.

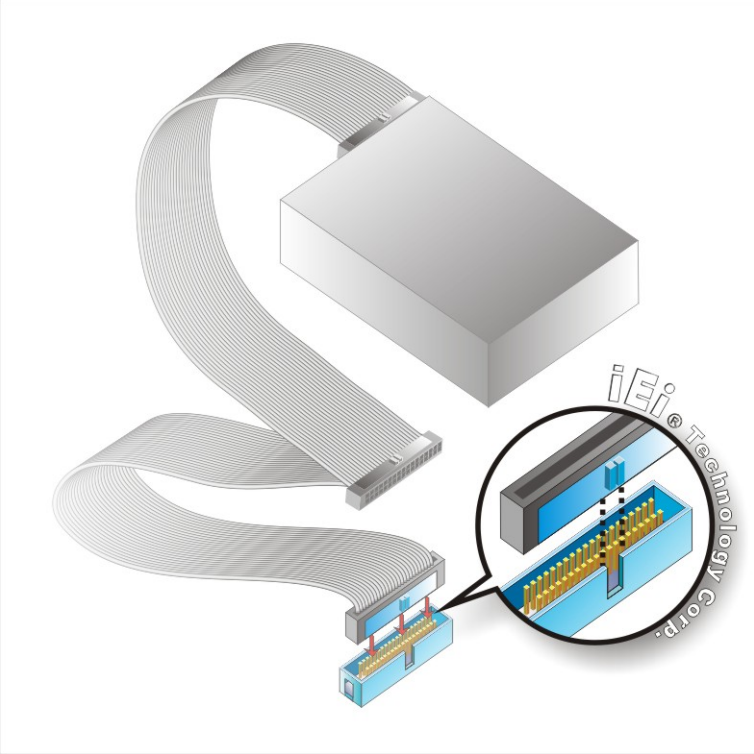

Figure 5-5: IDE Cable Connection

Step 3: **Connect the cable to an IDE device**. Connect the two connectors on the other side of the cable to one or two IDE devices. Make sure that pin 1 on the cable corresponds to pin 1 on the connector.

5.8.3 AT Power Connection

Follow the instructions below to connect the NANO-LX to an AT power supply.

WARNING:

Disconnect the power supply power cord from its AC power source to prevent a sudden power surge to the NANO-LX.

Step 1: **Locate the power cable**. The power cable is shown in the packing list in **Chapter 3**.

Step 2: **Connect the Power Cable to the Motherboard**. Connect the 4-pin (2x2) Molex type power cable connector to the AT power connector on the motherboard. See Figure 5-6.

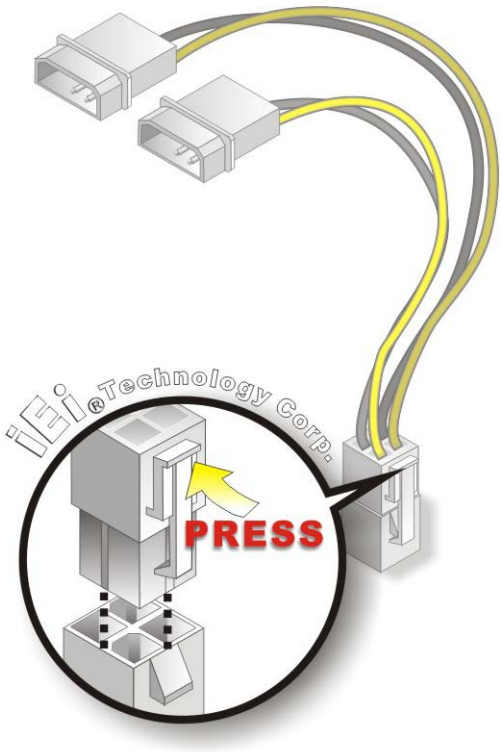

Figure 5-6: Power Cable to Motherboard Connection

Step 3: **Connect Power Cable to Power Supply**. Connect one of the 4-pin (1x4) Molex type power cable connectors to an AT power supply. See Figure 5-7.

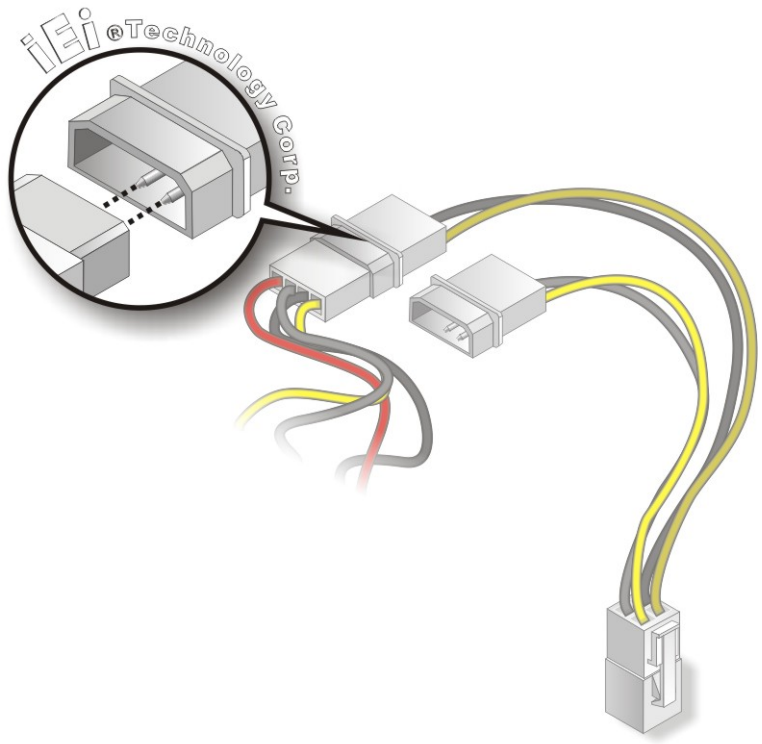

Figure 5-7: Connect Power Cable to Power Supply

5.8.4 Parallel Port Cable

The optional parallel port (LPT) cable respectively connects the onboard LPT 26-pin box header to an external LPT device (like a printer). The cable comprises a 26-pin female header, to be connected to the onboard LPT box-header, on one side and on the other side a standard external LPT connector. To connect the LPT cable, please follow the steps below.

Step 1: **Locate the connector**. The LPT connector location is shown in **Chapter 4**.

Step 2: **Align the connectors**. Correctly align pin 1 on the cable connector with pin 1 on the PCIE-9452 LPT box-header connector. See **Figure 5-8**.

Step 3: **Insert the cable connectors** Once the cable connector is properly aligned with

the 26-pin box-header connector on the PCIE-9452, connect the cable connector to the onboard connector. See **Figure 5-8.**

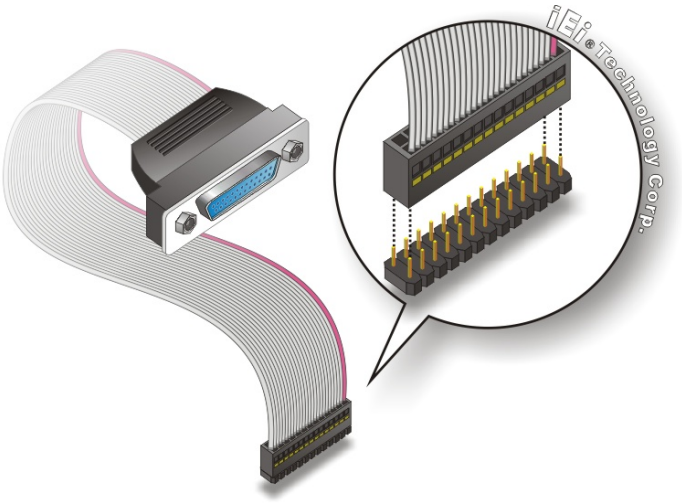

Figure 5-8: LPT Cable Connection

Step 4: **Attach the LPT connector to the chassis**. To secure the LPT interface connector to the chassis please refer to the installation instructions that came with the chassis.

Step 5: **Connect LPT device**. Once the LPT interface connector is connected to the chassis, the LPT device can be connected to the LPT interface connector. See **Figure 5-9.**

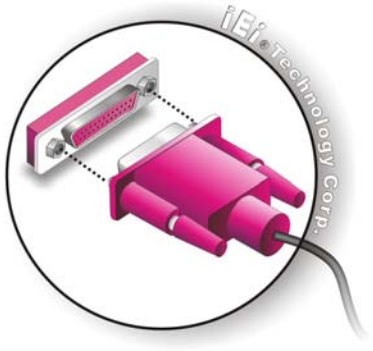

Figure 5-9: Connect the LPT Device

5.8.5 Single RS-232 Cable

The single RS-232 cable consists of one serial port connectors attached to a serial communications cable that is then attached to a D-sub 9 male connector. To install the single RS-232 cable, please follow the steps below.

Step 1: **Locate the connector**. The location of the RS-232 connector is shown in **Chapter 3**.

Step 2: **Insert the cable connector**. Insert the connector into the serial port box header. See **Figure 5-10**. A key on the front of the cable connectors ensures the connector can only be installed in one direction.

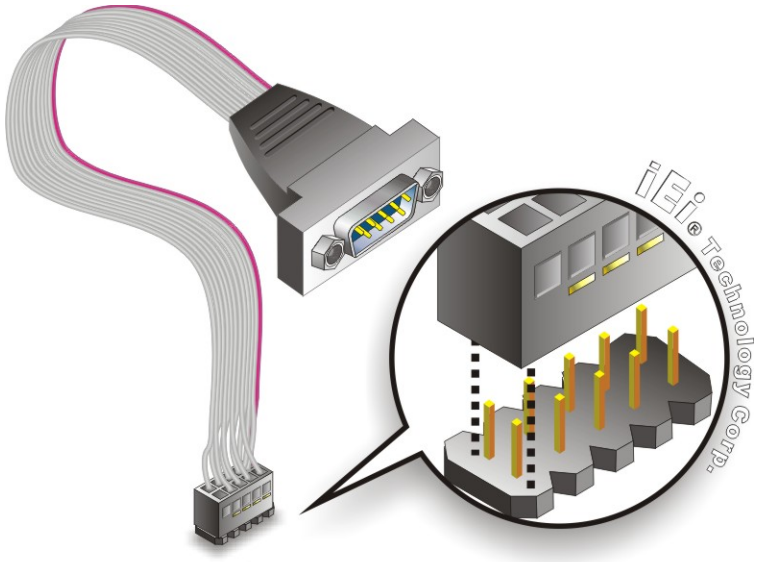

Figure 5-10: Single RS-232 Cable Installation

5.8.6 SATA Drive Connection

The NANO-LX is shipped with two SATA drive cables and one SATA drive power cable. To connect the SATA drives to the connectors, please follow the steps below.

Step 3: **Locate the connectors**. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 4: **Insert the cable connector**. Press the clip on the connector at the end of the

SATA cable and insert the cable connector into the onboard SATA drive connector. See **Figure 5-11**.

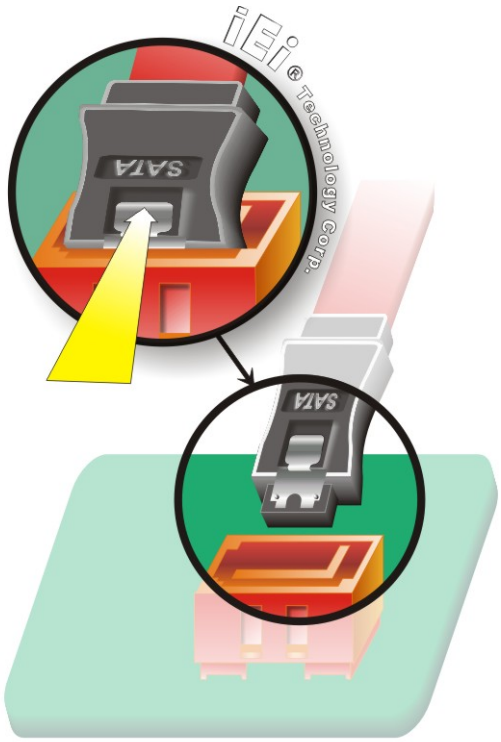

Figure 5-11: SATA Drive Cable Connection

Step 5: **Connect the cable to the SATA disk**. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 5-12**.

Step 6: **Connect the SATA power cable**. Connect the SATA power connector to the back of the SATA drive. See **Figure 5-12**.

Figure 5-12: SATA Power Drive Connection

5.9 External Peripheral Interface Connection

The following external peripheral devices can be connected to the external peripheral interface connectors.

- RJ-45 Ethernet cable connectors
- PS/2 devices
- Serial port devices
- USB devices
- VGA monitors

To install these devices, connect the corresponding cable connector from the actual device to the corresponding NANO-LX external peripheral interface connector making sure the pins are properly aligned.

5.9.1 LAN Connection (Single Connector)

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 1: **Locate the RJ-45 connectors**. The locations of the USB connectors are shown in **Chapter 4**.

Step 2: **Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the NANO-LX. See **Figure 5-13**.

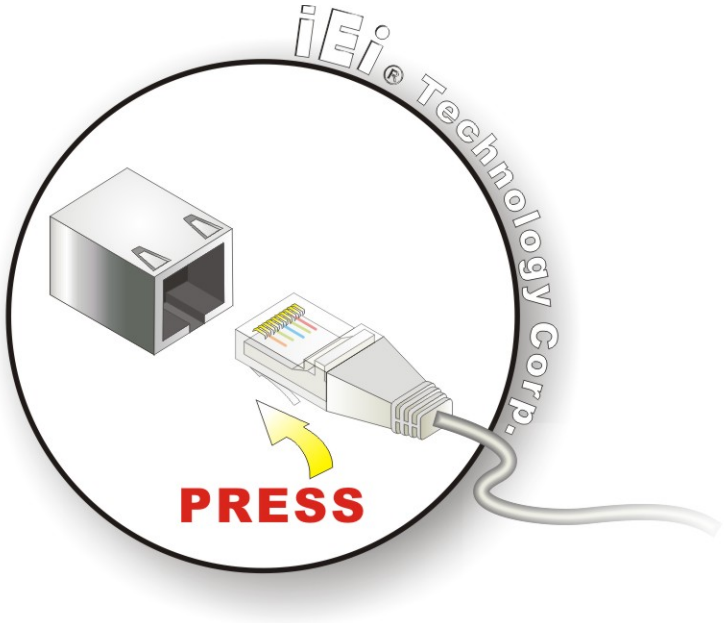

Figure 5-13: LAN Connection

Step 3: **Insert the LAN cable RJ-45 connector.** Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 connector.

5.9.2 PS/2 Keyboard/Mouse Connection

The NANO-LX has a single PS/2 connector on the external peripheral interface panel. The PS/2 connector is connected to a keyboard/mouse through the keyboard/mouse Y cable. To connect a keyboard/mouse to the NANO-LX, please follow the instructions below.

Step 1: **Locate the PS/2 connector**. The location of the PS/2 connector is shown in

Chapter 3.

Step 2: **Align the PS/2 connector**. Align the PS/2 connector on the keyboard/mouse Y cable with the PS/2 connector on the external peripheral interface.

Step 3: **Insert the PS/2 connector** Once the connector is properly aligned, insert the PS/2 connector from the keyboard/mouse Y cable into the PS/2 connector on the NANO-LX. See **Figure 5-14.**

Step 4: **Connect the keyboard and mouse**. A keyboard and mouse can each be connected to one of the PS/2 connectors. The keyboard PS/2 connector and mouse PS/2 connector are both marked. Please make sure the keyboard and mouse are connected to the correct PS/2 connector.

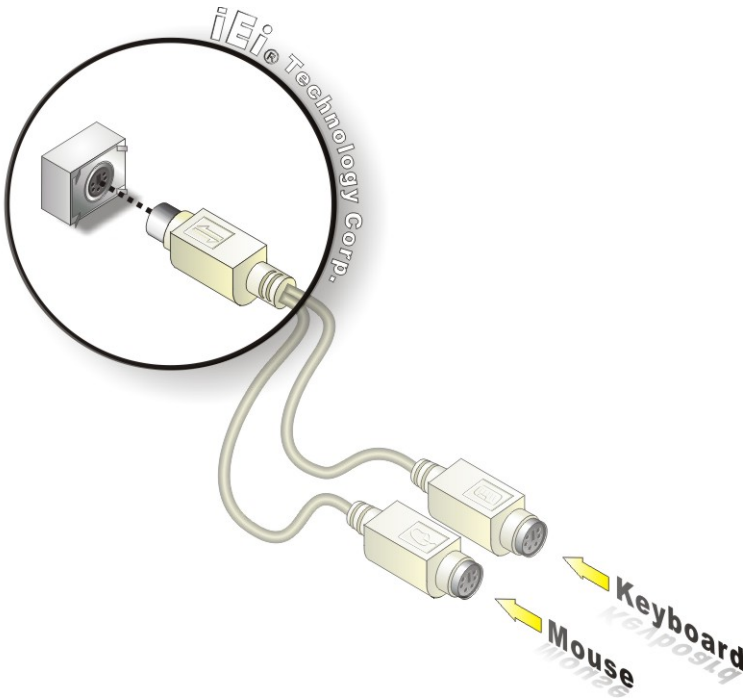

Figure 5-14: PS/2 Connector

5.9.3 Serial Device Connection

The NANO-LX has a single female DB-9 connector on the external peripheral interface panel for a serial device. Follow the steps below to connect a serial device to the NANO-LX.

Step 1: **Locate the DB-9 connector**. The location of the DB-9 connector is shown in **Chapter 3**.

Step 2: **Insert the serial connector**. Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface. See Figure 5-15.

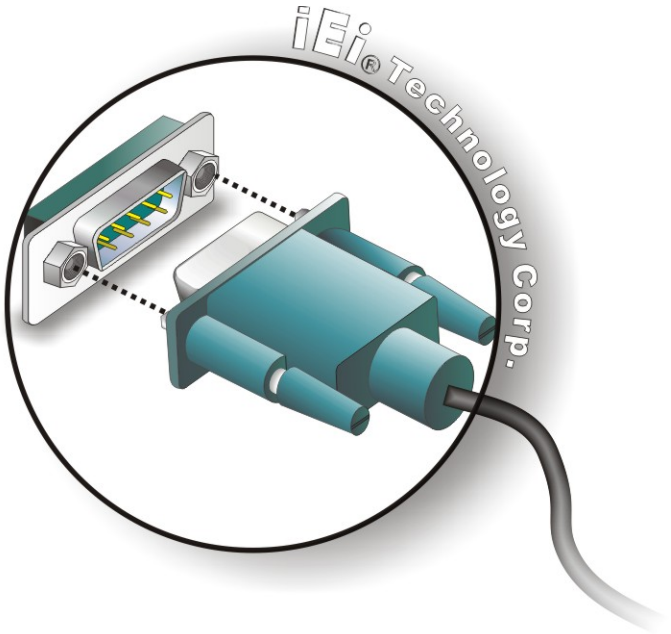

Figure 5-15: Serial Device Connector

Step 3: **Secure the connector**. Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

5.9.4 USB Connection (Dual Connector)

The external USB Series "A" receptacle connectors provide easier and quicker access to external USB devices. Follow the steps below to connect USB devices to the NANO-LX.

Step 1: **Locate the USB Series "A" receptacle connectors**. The location of the USB Series "A" receptacle connectors are shown in **Chapter 3**.

Step 2: **Insert a USB Series "A" plug**. Insert the USB Series "A" plug of a device into the USB Series "A" receptacle on the external peripheral interface. See Figure 5-16.

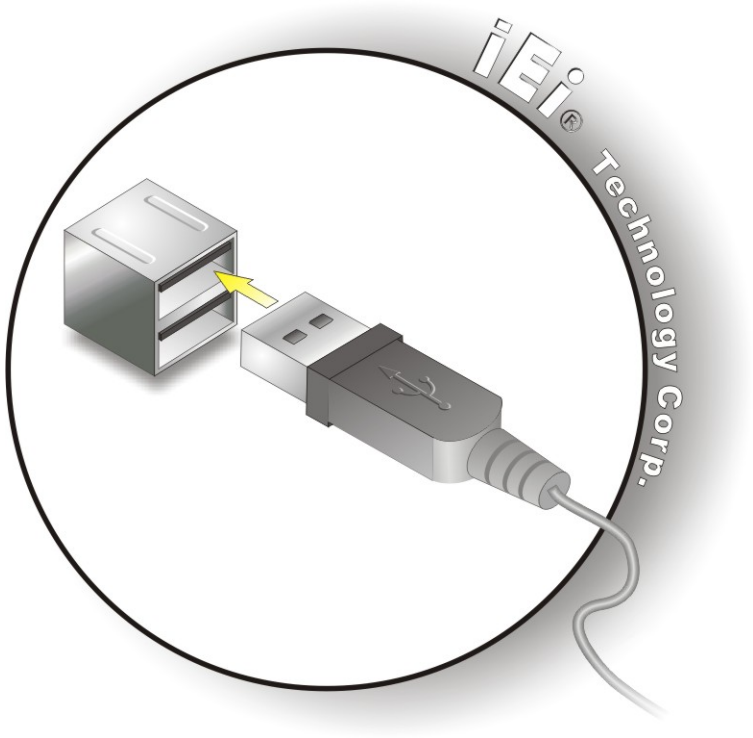

Figure 5-16: USB Connector

5.9.5 VGA Monitor Connection

The NANO-LX has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the NANO-LX, please follow the instructions below.

Step 1: **Locate the female DB-15 connector**. The location of the female DB-15 connector is shown in **Chapter 3**.

Step 2: **Align the VGA connector**. Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.

Step 3: **Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the NANO-LX. See **Figure 5-17**.

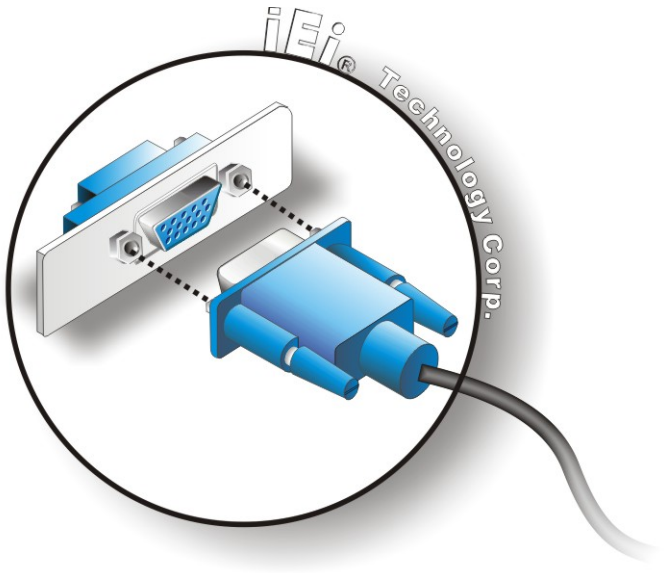

Figure 5-17: VGA Connector

Step 4: **Secure the connector**. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

6

Award BIOS Setup

6.1 Introduction

A licensed copy of Phoenix Award BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

6.1.1 Starting Setup

The Phoenix Award BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the "**Press Del to enter SETUP**" message appears on the screen.

If the message disappears, restart the computer and try again.

6.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the **PAGEUP** and **PAGEDOWN** keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown below.

Key	Function
Up arrow	Move to the item above
Down arrow	Move to the item below
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+/Page up	Increase the numeric value or make changes
-/Page down	Decrease the numeric value or make changes
Esc	Main Menu – Quit and do not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Item help

Key	Function
F5	Previous values for the page menu items
F6	Fail-safe defaults for the current page menu items
F7	Optimized defaults for the current page menu items
F9	Menu in BIOS
F10	Save changes and Exit BIOS

Table 6-1: BIOS Navigation Keys

6.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

6.1.4 Unable to Reboot After Configuration Changes

If the system cannot be booted after changes are made, restore the CMOS defaults. The SBC should come with a restore CMOS settings jumper. Refer to **Section 5.6** for more information.

6.1.5 Main BIOS Menu

Once the BIOS opens, the main menu (BIOS Menu 1) appears.

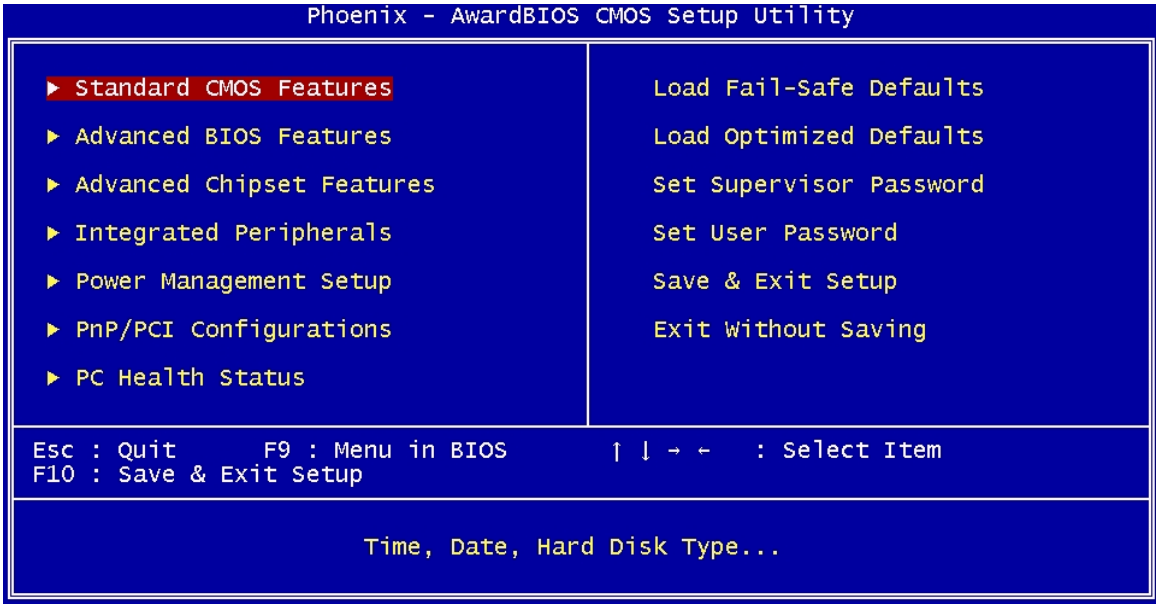

BIOS Menu 1: AwardBIOS CMOS Setup Utility

NOTE:

The following sections will completely describe the menus listed below and the configuration options available to users.

The following menu options are seen in BIOS Menu 1.

- **Standard CMOS Features**: Changes the basic system configuration.
- **Advanced BIOS Features**: Changes the advanced system settings.
- **Advanced Chipset Features**: Changes the chipset configuration features.
- **Integrated Peripherals**: Changes the settings for integrated peripherals.
- **Power Management Setup**: Configures power saving options.
- **PnP/PCI Configurations**: Changes the advanced PCI/PnP settings.
- **PC Health Status**: Monitors essential system parameters.

The following user configurable options are also available in **BIOS Menu 1**:

➔ **Load Fail-Safe Defaults**

Select this option to load failsafe default values for each BIOS parameter in the setup menus. Press **F6** for this operation on any page.

➔ **Load Optimized Defaults**

Select this option to load optimal default values for each BIOS parameter in the setup menus. Press **F7** for this operation on any page.

➔ **Set Supervisor Password**

By default, no supervisor password is set. To install a supervisor password, select this field and enter the password. After this option is selected, a red dialogue box appears with "**Enter Password:** ". Type the password and press **ENTER**. Retype the original password into the "**Confirm Password:** " dialogue box and press **ENTER**. To disable the password, simply press **ENTER** in the "**Enter Password:** " dialogue box, then press any key in the "**Password Disabled !!!**" dialogue box.

➔ **Set User Password**

By default no user password is set. To install a user password, select this field and enter the password. After this option is selected, a red dialogue box appears with "**Enter Password:** ". Type the password and press **ENTER**. Retype the original password into the "**Confirm Password:** " dialogue box and press **ENTER**. To disable the password, simply press **ENTER** in the "**Enter Password:** " dialogue box, then press any key in the "**Password Disabled !!!**" dialogue box.

➔ **Save & Exit Setup**

Select this option to save any configuration changes made and exit the BIOS menus.

➔ **Exit Without Saving**

Select this option exit the BIOS menus without saving any configuration changes.

6.2 Standard CMOS Features

Use the Standard CMOS Features BIOS menu (**BIOS Menu 2**) to set basic BIOS configuration options.

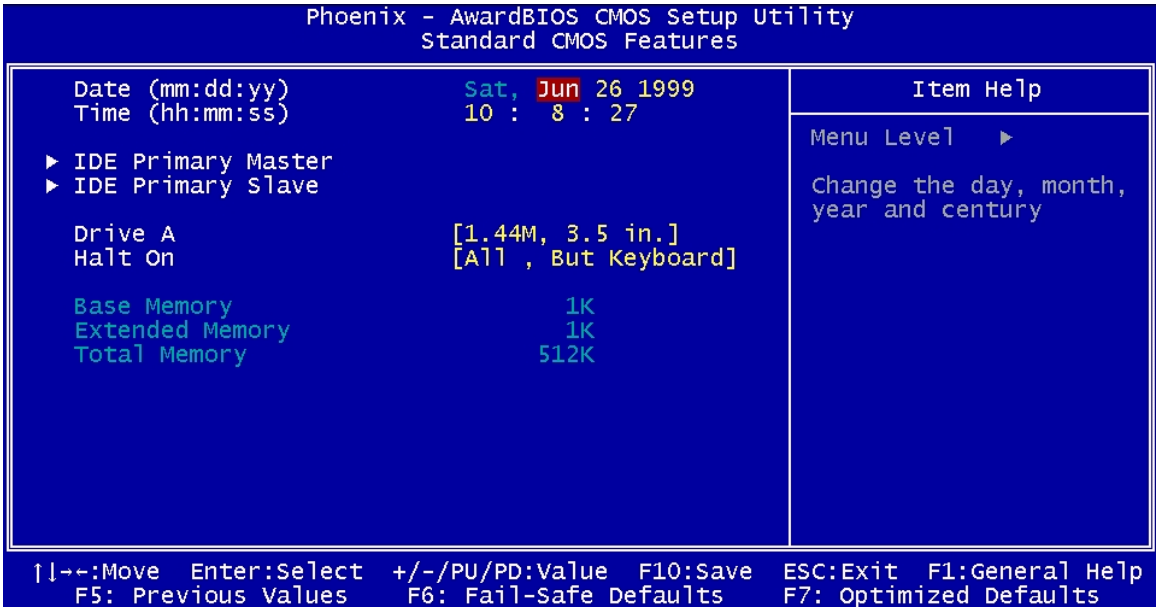
Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features
Date (mm:dd:yy) Sat, Jun 26 1999
Time (hh:mm:ss) 10 : 8 : 27
IDE Primary Master
IDE Primary Slave
Drive A [1.44M, 3.5 in.]
Halt On [All , But Keyboard]
Base Memory 1K
Extended Memory 1K
Total Memory 512K
Item Help
Menu Level ▶
Change the day, month, year and century
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 2: Standard CMOS Features

➔ **Date [Day mm:dd:yyyy]**

The **Date** option sets the system date.

➔ **Time [hh/mm/ss]**

The **Time** option sets the system time.

➔ **IDE Master and IDE Slave**

When entering setup, BIOS auto detects the presence of IDE devices. The **Standard CMOS Features** menu shows the status of the auto detected IDE devices. The following IDE devices are detected and shown in the **Standard CMOS Features** menu:

- IDE Primary Master
- IDE Primary Slave

IDE device configurations are changed or set in the IDE Configuration menu (**BIOS Menu 3**). If an IDE device is detected, and one of the above listed two BIOS configuration options is selected, the IDE configuration options shown in **Section 6.2.1** appear.

➔ **Drive A [1.44M, 3.5in]**

Use the Drive A configuration to specify the floppy drive type installed in the system. The floppy drive configuration options are:

- None
- 360K, 5.25 in.
- 1.2M, 5.25 in.
- 720K, 3.5 in.
- 1.44M, 3.5in (Default)
- 2.88M, 3.5 in.

➔ **Halt On [All, But Keyboard]**

Use the Halt On option to specify what errors detected during the power up process stop the system.

➔ **All Errors**		Whenever BIOS detects a non-fatal error the system is stopped and the user prompted.
➔ **No Errors**		The system boot is not stopped for any errors that may be detected.
➔ **All, But Keyboard**	(Default)	The system boot does not stop for a keyboard error; it stops for all other errors.
➔ **All, But Diskette**		The system boot does not stop for a disk error; it stops for all other errors.
➔ **All, But Disk/Key**		The system boot does not stop for a keyboard or a disk error; it stops for all other errors.

➔ **Base Memory:**

The **Base Memory** is NOT user configurable. The POST determines the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed, or 640K for systems with 640K or more memory installed.

➔ **Extended Memory**

The **Extended Memory** is NOT user configurable. The BIOS determines how much extended memory is present during the POST. This is the amount of memory above 1MB located in the memory address map of the CPU.

➔ **Total Memory**

The **Total Memory** is NOT user configurable.

6.2.1 IDE Primary Master/Slave

Use the IDE Primary Master/Slave menu (**BIOS Menu 3**) to set or change the master/slave IDE configurations.

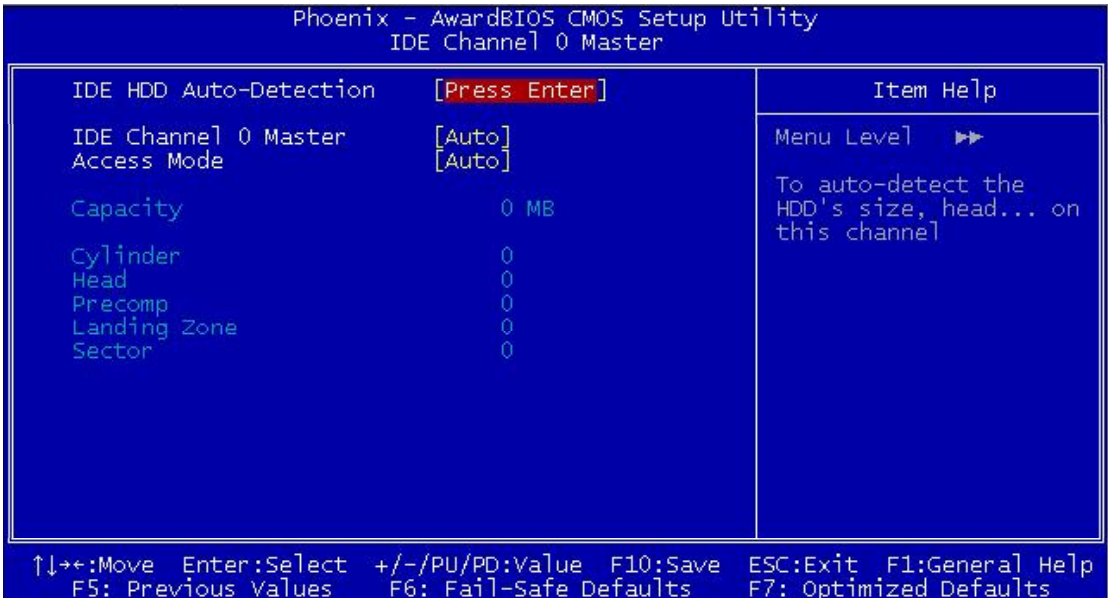
Phoenix - AwardBIOS CMOS Setup Utility
IDE Channel 0 Master
IDE HDD Auto-Detection [Press Enter]
IDE Channel 0 Master [Auto]
Access Mode [Auto]
Capacity 0 MB
Cylinder 0
Head 0
Precomp 0
Landing Zone 0
Sector 0
Item Help
Menu Level ▶▶
To auto-detect the HDD's size, head... on this channel
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 3: IDE Primary Master

➔ **IDE HDD Auto-Detection [Press Enter]**

Use the **IDE HDD Auto-Detection** option to enable BIOS to automatically detect the IDE settings. Select **IDE HDD Auto-Detection** and press **ENTER.** BIOS automatically detects the HDD type. Do not set this option manually.

➔ **IDE Primary Master [Auto]**

Use the **IDE Primary Master** option to activate or deactivate the following drive channels:

- Channel 0 Master
- Channel 0 Slave
- Channel 1 Master
- Channel 0 Slave

➔ **None**		If no drives are connected to the IDE channel select this option. Once set, this IDE channel becomes inaccessible and any drives attached to it are undetected.
➔ **Auto**	(Default)	Setting this option allows the device to be automatically detected by the BIOS.
➔ **Manual**		Selecting this option allows manual configuration of the device on the IDE channel in BIOS.

➔ **Access Mode [Auto]**

The **Access Mode** option can only be configured if the **IDE Primary Master** is set to either **Manual** or **Auto**. Use the **Access Mode** option to determine the hard disk BIOS translation modes. Most systems now use hard drives with large capacities and therefore either the LBA translation mode or auto mode should be selected.

➔ **CHS**	Select this mode if the HDD capacity is less than 504MB.

- ➔ **LBA** — Select this mode if the HDD capacity is more than 8.4GB.
- ➔ **Large** — This mode is an extended ECHS mode and while it supports HDDs larger than 504MB, it is not recommended.
- ➔ **Auto** (Default) — If you are unsure of what access mode to set, select this option.

➔ **Capacity**

The **Capacity** specification indicates the storage capacity of the HDD installed in the system.

➔ **Cylinder**

The **Cylinder** specification indicates how many cylinders (tracks) are on the HDD installed in the system.

➔ **Head**

The **Head** specification indicates how many logical heads are on the HDD installed in the system.

➔ **Precomp**

The **Precomp** specification indicates on what track the write precompensation begins.

➔ **Landing Zone**

The **Landing Zone** specification indicates where the disk head will park itself after the system powers off.

➔ **Sector**

The **Sector** specification indicates how many logical sectors the HDD has been divided into.

6.3 Advanced BIOS Features

CPU and peripheral device configuration options are accessed in the **Advanced BIOS Features** menu (**BIOS Menu 4**).

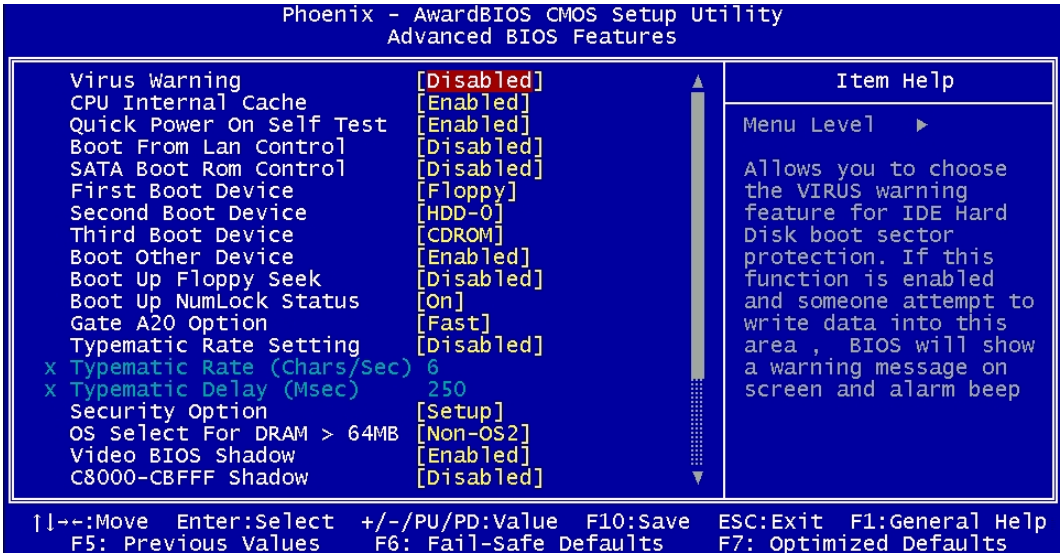
Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features
Virus Warning [Disabled]
CPU Internal Cache [Enabled]
Quick Power On Self Test [Enabled]
Boot From Lan Control [Disabled]
SATA Boot Rom Control [Disabled]
First Boot Device [Floppy]
Second Boot Device [HDD-0]
Third Boot Device [CDROM]
Boot Other Device [Enabled]
Boot Up Floppy Seek [Disabled]
Boot Up NumLock Status [On]
Gate A20 Option [Fast]
Typematic Rate Setting [Disabled]
x Typematic Rate (Chars/Sec) 6
x Typematic Delay (Msec) 250
Security Option [Setup]
OS Select For DRAM > 64MB [Non-OS2]
Video BIOS Shadow [Enabled]
C8000-CBFFF Shadow [Disabled]
Item Help
Menu Level ▶
Allows you to choose the VIRUS warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area , BIOS will show a warning message on screen and alarm beep
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

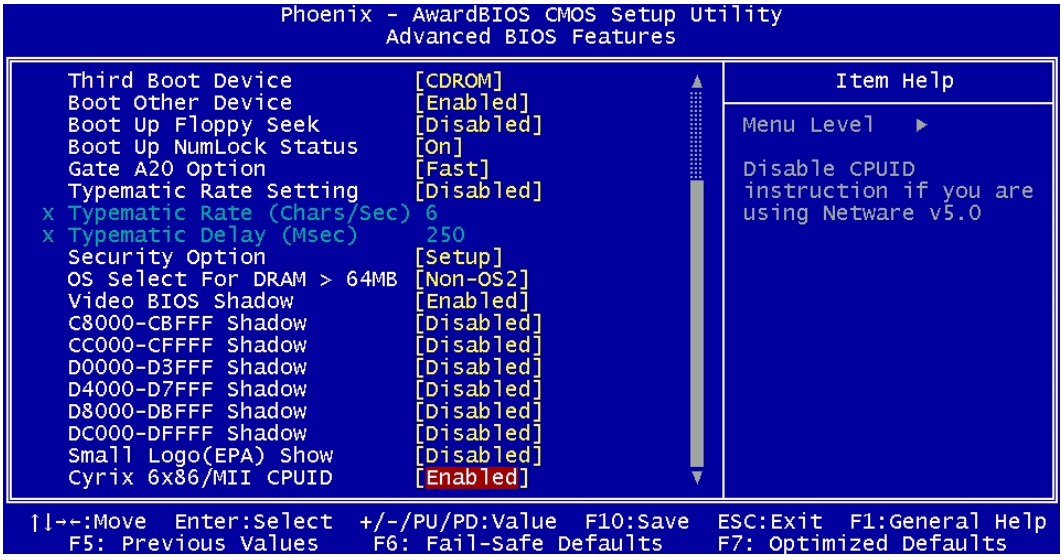
Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features
Third Boot Device [CDROM]
Boot Other Device [Enabled]
Boot Up Floppy Seek [Disabled]
Boot Up NumLock Status [On]
Gate A20 Option [Fast]
Typematic Rate Setting [Disabled]
x Typematic Rate (Chars/Sec) 6
x Typematic Delay (Msec) 250
Security Option [Setup]
OS Select For DRAM > 64MB [Non-OS2]
Video BIOS Shadow [Enabled]
C8000-CBFFF Shadow [Disabled]
CC000-CFFFF Shadow [Disabled]
D0000-D3FFF Shadow [Disabled]
D4000-D7FFF Shadow [Disabled]
D8000-DBFFF Shadow [Disabled]
DC000-DFFFF Shadow [Disabled]
Small Logo(EPA) Show [Disabled]
Cyrix 6x86/MII CPUID [Enabled]
Item Help
Menu Level ▶
Disable CPUID instruction if you are using Netware v5.0
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 4: Advanced BIOS Features

➔ **Virus Warning [Disabled]**

NOTE:

Many disk diagnostic programs can cause the above warning message to appear when the program attempts to access the boot sector table. If you are running such a program, it is recommended that the virus protection function be disabled beforehand.

Use the **Virus Warning** option to enable BIOS to monitor the boot sector and partition table of the HDD for any attempted modification. If a modification attempt is made, the BIOS halts the system and an error message appears. If necessary, an anti-virus program can then be run to locate and remove the virus before any damage is done.

➔ **Enabled**		Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or HDD partition table.
➔ **Disabled**	(Default)	No warning message appears when there is an attempt to access the boot sector or HDD partition table.

➔ **CPU Internal Cache [Enabled]**

Use the **CPU Internal Cache** option to enable or disable the internal CPU cache.

➔ **Disabled**		The internal CPU cache is disabled.
➔ **Enabled**	(Default)	The internal CPU cache is enabled.

➔ **Boot From LAN Control [Disabled]**

Use the **BOOT From LAN Control** option to enable the system to be booted from a remote system.

➔ **Disabled** (Default) The system cannot be booted from a remote system through the LAN.

➔ **Enabled** The system can be booted from a remote system through the LAN.

➔ **SATA Boot ROM Control [Disabled]**

Use the **SATA Boot ROM Control** option to configure SATA IDE use in DOS mode.

➔ **Disabled** (Default) Disables SATA IDE use in DOS mode.

➔ **Enabled** Enables SATA IDE use in DOS mode.

➔ **Boot Device**

Use the **Boot Device** options to select the order of the devices the system boots from. There are three boot device configuration options:

- **First Boot Device** [Default: Floppy]
- **Second Boot Device** [Default: HDD-0]
- **Third Boot Device** [Default: CDROM]

Using the default values, the system first looks for a floppy disk to boot from. If it cannot find a floppy disk, it boots from an HDD. If both The floppy and the HDD are unavailable, the system boots from a CDROM drive.

Boot Device configuration options are:

- Floppy
- LS120
- HDD-0
- SCSI
- CDROM
- HDD-1
- ZIP100
- USB-FDD

- USB-ZIP
- USB-CDROM
- USB-HDD
- LAN
- Disabled

➔ **Boot Other Device [Enabled]**

Use the **Boot Other Device** option to determine whether the system uses a second or third boot device if the first boot device is not found.

➔ **Disabled** The system does not look for second and third boot devices if the first one is not found.

➔ **Enabled** (Default) The system looks for second and third boot devices if the first one is not found.

➔ **Boot Up Floppy Seek [Disabled]**

Use the **Boot Up Floppy Seek** option to enable the BIOS to determine if the floppy disk drive installed has 40 or 80 tracks during the POST. 360K FDDs have 40 tracks while 760K, 1.2M and 1.44M FDDs all have 80 tracks.

➔ **Disabled** (Default) BIOS does not search for the type of FDD drive by track number. Note that there is no warning message if the drive installed is 360K.

➔ **Enabled** BIOS searches for a FDD to determine if it has 40 or 80 tracks. Note that BIOS cannot tell the difference between 720K, 1.2M or 1.44M drives as they all have 80 tracks.

➔ **Boot Up Numlock Status [On]**

Use the **Boot Up Numlock Status** option to specify the default state of the numeric keypad.

➔ **Off**		The keys on the keypad are not activated.
➔ **On**	(Default)	Activates the keys on the keypad.

➔ **Gate A20 Option [Fast]**

Use the **Gate A20 Option** to set if the keyboard controller or the chipset controls the Gate A20 switching.

➔ **Normal**		The keyboard controller does the switching.
➔ **Fast**	(Default)	The chipset does the switching.

➔ **Typematic Rate Setting [Disabled]**

Use the **Typematic Rate Setting** configuration option to specify if only one character is allowed to appear on the screen if a key is continuously held down. When this option is enabled, the BIOS reports as before, but it then waits a moment, and, if the key is still held down, it begins to report that the key has been pressed repeatedly. This feature accelerates cursor movement with the arrow keys.

➔ **Disabled**	(Default)	Disables the typematic rate.
➔ **Enabled**		Enables the typematic rate.

➔ **Typematic Rate (Chars/sec) [6]**

The **Typematic Rate** option can only be configured if the **Typematic Rate Setting** is enabled. Use the **Typematic Rate** option to specify the rate keys are accelerated.

➔ **6**	(Default)	6 characters per second
➔ **8**		8 characters per second
➔ **10**		10 characters per second
➔ **12**		12 characters per second
➔ **15**		15 characters per second

- ➔ **20** 20 characters per second
- ➔ **24** 24 characters per second
- ➔ **30** 30 characters per second

➔ **Typematic Delay (Msec) [250]**

The **Typematic Rate** option can only be configured if the **Typematic Rate Setting** is enabled. Use the **Typematic Delay** option to specify the delay time between when a key is first pressed and when the acceleration begins.

- ➔ **250** (Default) 250 milliseconds
- ➔ **500** 500 milliseconds
- ➔ **750** 750 milliseconds
- ➔ **1000** 1000 milliseconds

➔ **Security Option [Setup]**

Use the **Security Option** to limit access to both the system and Setup, or just Setup.

- ➔ **Setup** (Default) The system does not boot and access to Setup is denied if the correct password is not entered at the prompt.
- ➔ **System** The system boots, but access to Setup is denied if the correct password is not entered at the prompt.

NOTE:

To disable security, select the password setting in the Main Menu. When asked to enter a password, don't type anything, press **ENTER** and the security is disabled. Once the security is disabled, the system boots and **Setup** can be accessed.

➔ **OS Select For DRAM > 64MB [Non-OS2]**

Use the **OS Select For DRAM > 64MB** option to specify the operating system.

- ➔ **Enabled** Specifies the operating system used as OS/2.
- ➔ **Disabled** (Default) Select this option when not using the OS/2 operating system.

➔ **Video BIOS Shadow [Enabled]**

Use the **Video Bios Shadow** option to enable video BIOS to be copied to RAM.

- ➔ **Disabled** Video BIOS is not copied to RAM.
- ➔ **Enabled** (Default) Video BIOS is copied to RAM.

➔ **XXXXX-YYYYY Shadow [Disabled]**

Use the **XXXXX-YYYYY Shadow** option to write the contents of the ROM area XXXXX-YYYYY to the same address in the system RAM.

- ➔ **Disabled** (Default) Contents from ROM area XXXXX-YYYYY are not written to the RAM.
- ➔ **Enabled** Contents from ROM area XXXXX-YYYYY are written to the RAM.

➔ **Small Logo (EPA) Show [Disabled]**

Use the **Small Logo (EPA) Show** option to specify if the Environmental Protection Agency (EPA) logo appears during the system boot-up process. If enabled, the boot up process may be delayed.

- ➔ **Disabled** (Default) EPA logo does not appear during boot up.
- ➔ **Enabled** EPA logo appears during boot up.

➔ **Cyrix 6x86/MII CPUID [Enabled]**

Use the **Cyrix 6x86/MII CPUID** option to determine if the system checks to see if a Cyrix CPU is installed.

- ➔ **Disabled** (Default) The system doesn't look for a Cyrix CPU.
- ➔ **Enabled** The system looks for a Cyrix CPU.

6.4 Advanced Chipset Features

Use the Advanced Chipset Features menu (**BIOS Menu 5**) to change chipset configuration options.

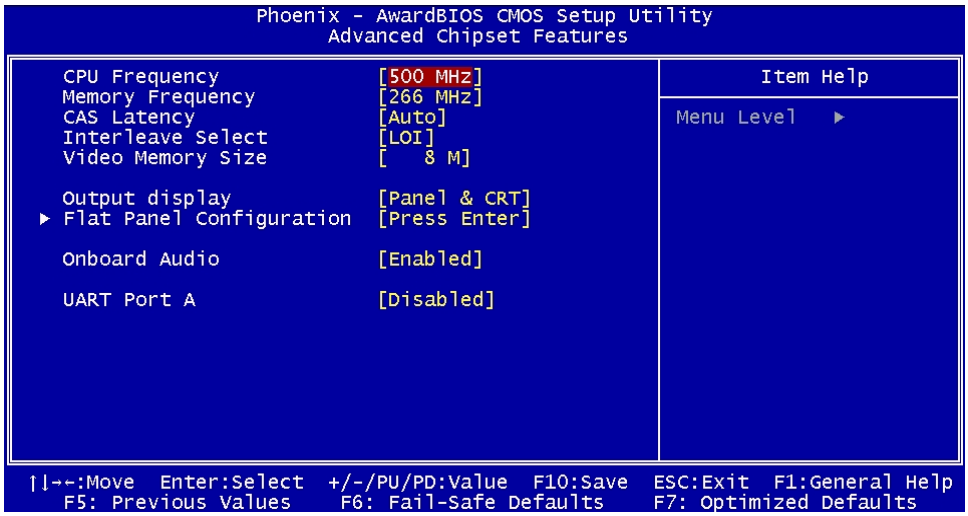
Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features
CPU Frequency [500 MHz]
Memory Frequency [266 MHz]
CAS Latency [Auto]
Interleave Select [LOI]
Video Memory Size [8 M]
Output display [Panel & CRT]
Flat Panel Configuration [Press Enter]
Onboard Audio [Enabled]
UART Port A [Disabled]
Item Help
Menu Level ▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 5: Advanced Chipset Features

➔ **CPU Frequency [500MHz]**

Use the **CPU Frequency** option to set the CPU frequency.

- 500MHz (Default)

➔ **Memory Frequency [266MHz]**

Use the **Memory Frequency** option to set the frequency of the installed DRAM modules. The **Memory Frequency** options are:

- 200MHz
- 266MHz (Default)
- 333MHz
- 400MHz

➔ **CAS Latency [Auto]**

Use the **CAS Latency Time** option to set the Column Address Strobe (CAS) delay time. The **CAS Latency Time** options are:

- Auto (Default)
- 1.5 nanoseconds
- 2.0 nanoseconds
- 2.5 nanoseconds
- 3.0 nanoseconds
- 3.5 nanoseconds

➔ **Interleave Select [LOI]**

Use the **Interleave Select** option to specify how the cache memory is interleaved.

➔ **LOI**	(Default)	Low order interleaving (LOI) of memory occurs.
➔ **HOI**		High order interleaving (HOI) of memory occurs.

➔ **Video Memory Size [8M]**

Use the **Video Memory Size** option to determine how much memory is allocated to the video graphics device. The **Video Memory Size** options are:

- None
- 8M (Default)
- 16M
- 32M
- 64M
- 128M
- 254M

➔ **Output Display [Panel & CRT]**

Use the **Output Display** configuration to specify the display devices the system is connected to. The **Output Display** options are:

- Flat Panel
- CRT
- Panel & CRT (Default)

➔ **Flat Panel Configuration [Press Enter]**

Use the Flat Panel Configuration option to open the Flat Panel Configuration menu. The Flat Panel Configuration options are shown in Section **6.4.1**.

➔ **OnBoard Audio [Enabled]**

Use the **OnBoard Audio** option to enable or disable the onboard codec.

➔ **Disabled** The onboard codec is disabled.

➔ **Enabled** (Default) The onboard codec is detected and enabled.

➔ **UART Port A [Disabled]**

Use the **UART Port A** option to select the I/O address and IRQ for the UART port A. The **UART Port A** options are:

- Disabled (Default)
- 3F8/IRQ4
- 2F8/IRQ3
- 3E8/IRQ4
- 2E8/IRQ3

6.4.1 Flat Panel Configuration

Use the **Flat Panel Configuration** menu (**BIOS Menu 6**) to set the configuration settings for the flat panel screen connected to the system.

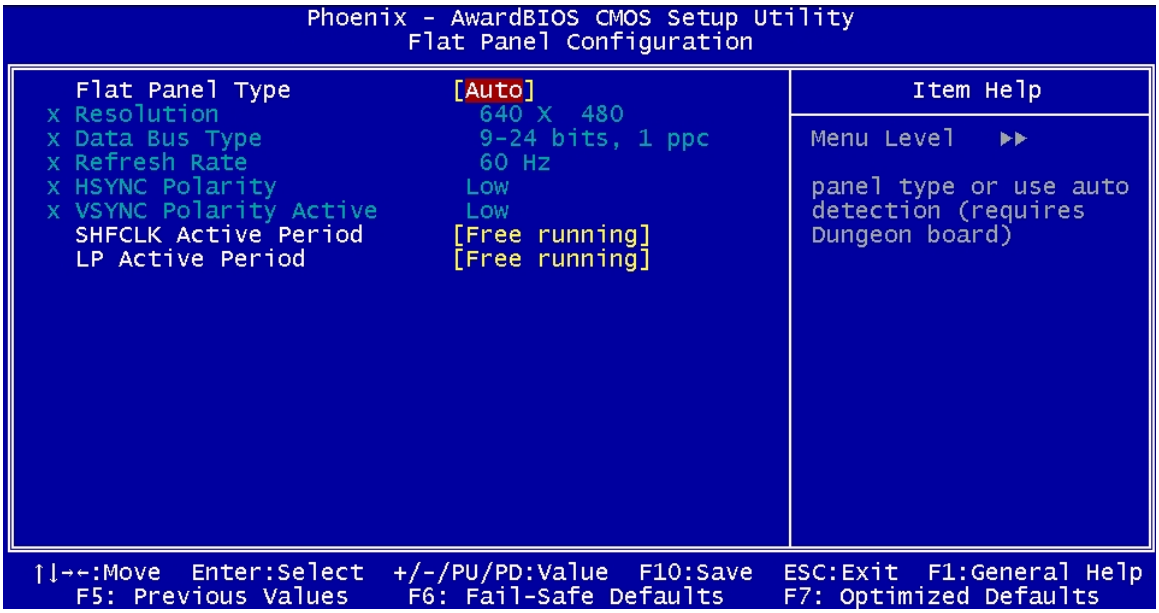
Phoenix - AwardBIOS CMOS Setup Utility
Flat Panel Configuration
Flat Panel Type [Auto]
x Resolution 640 X 480
x Data Bus Type 9-24 bits, 1 ppc
x Refresh Rate 60 Hz
x HSYNC Polarity Low
x VSYNC Polarity Active Low
SHFCLK Active Period [Free running]
LP Active Period [Free running]
Item Help
Menu Level ▶▶
panel type or use auto detection (requires Dungeon board)
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 6: Flat Panel Configuration

➔ **Flat Panel Type [Auto]**

Use the **Flat Panel Type** option to specify the type of flat panel screen connected to the system.

- **TFT** Specifies the system is connected to a TFT display.
- **LVDS** Specifies the system is connected to an LVDS display.
- **Auto** (Default) The system detects the display type and the display settings.

➔ Resolution [800 x 600]

The **Resolution** option can only be configured if the **Flat Panel Type** option is not set to **Auto**. Use the **Resolution** option to set the resolution of the flat panel screen connected to the system. The **Resolution** options are:

- 320 x 240
- 640 x 480
- 800 x 600 (Default)
- 1024 x 768
- 1152 x 864
- 1280 x 1024
- 1600 x 1200

➔ Data Bus Type [9 – 24 bits, 1 ppc]

The **Data Bus Type** option can only be configured if the **Flat Panel Type** option is not set to **Auto**. Use the **Data Bus Type** option to set the bus type and the data bus width used to transfer data between the system and the flat panel screen connected to the system. The **Data Bus Type** options are:

- 9-24 bits, 1 ppc (Default)
- 18, 24 bits, 2 ppc

➔ Refresh Rate [60Hz]

The **Refresh Rate** option can only be configured if the **Flat Panel Type** option is not set to **Auto**. Use the **Refresh Rate** option to set the screen refresh rate required by the panel connected to the system. Check the documentation that came with the panel before setting this option. The **Refresh Rate** options are:

- 60Hz (Default)
- 70Hz
- 72Hz
- 75Hz
- 85Hz
- 90Hz
- 100Hz

➔ **HSYNC Polarity [Low]**

The **HSYNC Polarity** option can only be configured if the **Flat Panel Type** option is not set to **Auto**. Use the **HSYNC Polarity** option to set the polarity of the HSYNC signal to the panel. The **HSYNC Polarity** options are:

- High
- Low (Default)

➔ **VSYNC Polarity Active [Low]**

The **VGSYNC Polarity Active** option can only be configured if the **Flat Panel Type** option is not set to **Auto**. Use the **VGSYNC Polarity Active** option to set the polarity of the VSYNC signal to the panel. The **VGSYNC Polarity Active** options are:

- High
- Low (Default)

➔ **SHFCLK Active Period [Free Running]**

Use the **SHFCLK Active Period** option to set the SHFCLK. The **SHFCLK Active Period** options are:

- Active Only
- Free running (Default)

➔ **LP Active Period [Free Running]**

Use the **LP Active Period** option to set the LDE/MOD signal to the panel. The **LP Active Period** options are:

- Active Only
- Free running (Default)

6.5 Integrated Peripherals

Use the Integrated Peripherals menu (**BIOS Menu 7**) to change the configuration options for the attached peripheral devices..

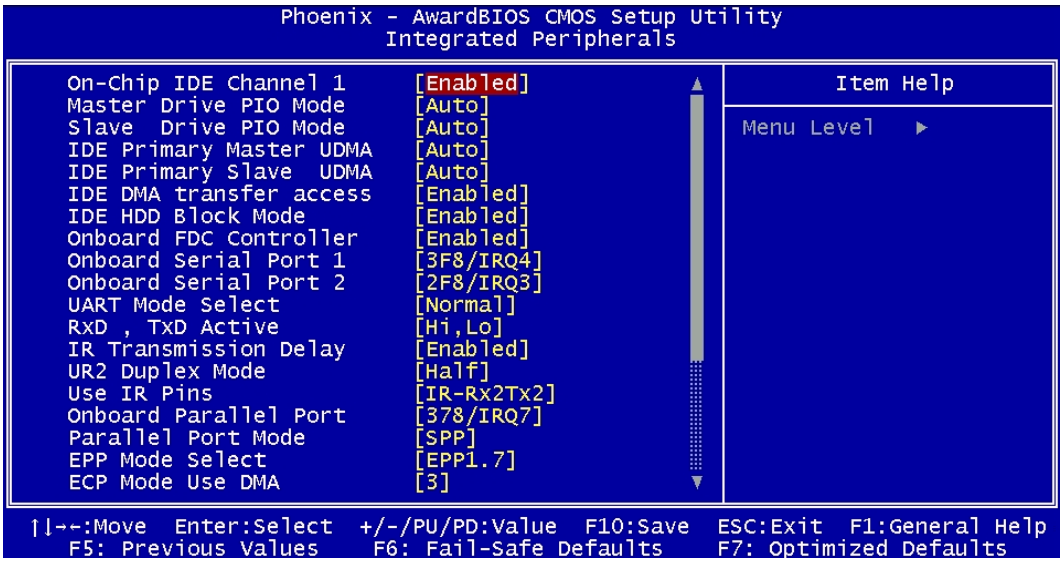
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
On-Chip IDE Channel 1 [Enabled]
Master Drive PIO Mode [Auto]
Slave Drive PIO Mode [Auto]
IDE Primary Master UDMA [Auto]
IDE Primary Slave UDMA [Auto]
IDE DMA transfer access [Enabled]
IDE HDD Block Mode [Enabled]
Onboard FDC Controller [Enabled]
Onboard Serial Port 1 [3F8/IRQ4]
Onboard Serial Port 2 [2F8/IRQ3]
UART Mode Select [Normal]
RxD , TxD Active [Hi,Lo]
IR Transmission Delay [Enabled]
UR2 Duplex Mode [Half]
Use IR Pins [IR-Rx2Tx2]
Onboard Parallel Port [378/IRQ7]
Parallel Port Mode [SPP]
EPP Mode Select [EPP1.7]
ECP Mode Use DMA [3]
Item Help
Menu Level ▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

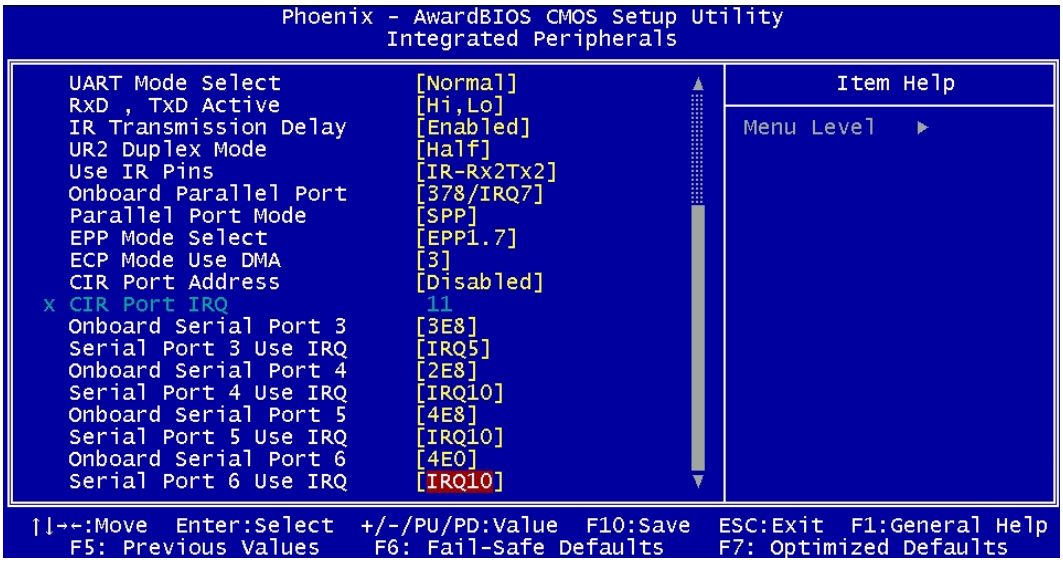
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
UART Mode Select [Normal]
RxD , TxD Active [Hi,Lo]
IR Transmission Delay [Enabled]
UR2 Duplex Mode [Half]
Use IR Pins [IR-Rx2Tx2]
Onboard Parallel Port [378/IRQ7]
Parallel Port Mode [SPP]
EPP Mode Select [EPP1.7]
ECP Mode Use DMA [3]
CIR Port Address [Disabled]
x CIR Port IRQ 11
Onboard Serial Port 3 [3E8]
Serial Port 3 Use IRQ [IRQ5]
Onboard Serial Port 4 [2E8]
Serial Port 4 Use IRQ [IRQ10]
Onboard Serial Port 5 [4E8]
Serial Port 5 Use IRQ [IRQ10]
Onboard Serial Port 6 [4E0]
Serial Port 6 Use IRQ [IRQ10]
Item Help
Menu Level ▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 7: Integrated Peripherals

➔ **On-Chip IDE Channel 1 [Enabled]**

The **On-Chip IDE Channel 1** option is enabled and is NOT user configurable.

➔ **Drive PIO Mode [Auto]**

Use the **Drive PIO Mode** options below to select the Programmed Input/Output (PIO) mode for the following HDDs:

- Master Drive PIO Mode
- Slave Drive PIO Mode

➔ **Auto** (Default) The computer selects the correct mode.

➔ **Mode 0** PIO mode 0 selected with a maximum transfer rate of 3.3MBps.

➔ **Mode 1** PIO mode 1 selected with a maximum transfer rate of 5.2MBps.

➔ **Mode 2** PIO mode 2 selected with a maximum transfer rate of 8.3MBps.

➔ **Mode 3** PIO mode 3 selected with a maximum transfer rate of 11.1MBps.

➔ **Mode 4** PIO mode 4 selected with a maximum transfer rate of 16.6MBps.

➔ **IDE UDMA [Auto]**

Use the **IDE UDMA** option below to select the Ultra DMA (UDMA) mode for the following HDDs:

- IDE Primary Master UDMA
- IDE Primary Slave UDMA

➔ **Auto** (Default) The computer selects the correct UDMA.

➔ **Disabled** The UDMA for the HDD device is disabled.

➔ **IDE DMA transfer access [Enabled]**

Use the **IDE DMA transfer access** option to enable or disable DMA support for IDE devices connected to the system.

➔ **Disabled** All IDE drive DMA transfers are disabled. The IDE drives use PIO mode transfers.

➔ **Enabled** (Default) All IDE drive DMA transfers are enabled.

➔ IDE HDD Block Mode [Enabled]

If the drive connected to the system supports block mode, use the **IDE HDD Block Mode** option to enable the system to detect the optimal number of block read/writes per sector the system IDE drive can support. Block mode is also called block transfer, multiple commands, or multiple sector read/write.

➔ **Disabled** Block mode is not supported.

➔ **Enabled** (Default) Block mode is supported.

➔ Onboard FPC Controller [Disabled]

Use the **Onboard FPC Controller** option to enable or disable the onboard floppy controller. If the system is not connected to a floppy disk or uses an adapter for the FDD, this option can be disabled.

➔ **Disabled** (Default) The FDD controller is disabled.

➔ **Enabled** The FDD controller is enabled.

➔ Onboard Serial Port 1 [3F8/IRQ4]

Use the **Onboard Serial Port 1** option to select the I/O address and IRQ for the onboard serial port 1. The serial port can be disabled or the I/O address and the IRQ can be automatically selected by the BIOS. The **Onboard Serial Port 1** options are:

- Disabled
- 3F8/IRQ4 (Default)
- 2F8/IRQ3
- 3E8/IRQ4

- 2E8/IRQ3
- Auto

➔ **Onboard Serial Port 2 [2F8/IRQ3]**

Use the **Onboard Serial Port 2** option to select the I/O address and IRQ for the onboard serial port 2. The serial port can be disabled or the I/O address and the IRQ can be automatically selected by the BIOS. The **Onboard Serial Port 2** options are:

- Disabled
- 3F8/IRQ4
- 2F8/IRQ3 (Default)
- 3E8/IRQ4
- 2E8/IRQ3
- Auto

➔ **UART Mode Select [Normal]**

Use the **UART Mode Select** to select the UART mode for the system.

➔ **IrDA**		IrDA is set as the IR serial mode. If this option is selected, COM2 will be disabled.
➔ **ASKIR**		ASKIR is set as the IR serial mode. If this option is selected, COM2 will be disabled.
➔ **Normal**	(Default)	COM2 is enabled and the IR device disabled.

➔ **x RxD, TxD Active [Hi,Lo]**

The **RxD, TxD Active** option can only be selected if the **UART Mode Select** option is set to IrDA mode or ASKIR mode. Use the **RxD, TxD Active** option to set the infrared reception (RxD) and transmission (TxD) polarity. The **RxD, TxD Active** options are:

- Hi, Hi
- Hi, Lo (Default)
- Lo, Hi
- Lo, Lo

➔ **x IR Transmission Delay [Enabled]**

Use the **IR Transmission Delay** option to enable or disable IR transmission delays.

➔ **Disabled**		IR transmission are not delayed.
➔ **Enabled**	(Default)	IR transmission are delayed.

➔ **x UR2 Duplex Mode [Half]**

Use the **UR2 Duplex Mode** option to specify the transmission mode for the IR port device.

➔ **Full**		Simultaneous bi-directional transmission occurs.
➔ **Half**	(Default)	Transmission only occurs in one direction at a time.

➔ **x Use IR Pins [IR-Rx2Tx2]**

Use the **Use IR Pins** options to specify how the IR pins respond. The **Use IR Pins** options are:

- RxD2,TxD2
- IR-Rx2Tx2 (Default)

➔ **Onboard Parallel Port [378/IRQ7]**

Use the **Onboard Parallel Port** option to specify a logical LPT port address and corresponding interrupt for the physical parallel port. The **Onboard Parallel Port** options are:

- Disabled
- 378/IRQ7 (Default)
- 278/IRQ5
- 3BC/IRQ7

➔ **Parallel Port Mode [SPP]**

Use the **Parallel Port Mode** option to select parallel port operation mode.

➔ **SPP** (Default) The parallel port operates in the standard parallel port (SPP) mode. This parallel port mode works with most parallel port devices but is slow.

➔ **EPP** The parallel port operates in the enhanced parallel port mode (EPP). The EPP mode supports bi-directional communication between the system and the parallel port device and the transmission rates between the two are much faster than the SPP mode.

➔ **ECP** The parallel port operates in the extended capabilities port (ECP) mode. The ECP mode supports bi-directional communication between the system and the parallel port device and the transmission rates between the two are much faster than the SPP mode.

➔ **ECP+EPP** The parallel port is compatible with both ECP and EPP devices.

➔ **Normal**

➔ **x EPP Mode Select [EPP1.7]**

The **EPP Mode Select** option is only available if the **Parallel Port Mode** option is set to EPP mode. Use the **EPP Mode Select** option to select the parallel port mode standard for the parallel port.

➔ **EPP1.9** EPP 1.9 is selected as the EPP standard.

➔ **EPP1.7** (Default) EPP 1.7 is selected as the EPP standard.

➔ **x ECP Mode Use DMA [3]**

The **ECP Mode Use DMA** option is only available if the **Parallel Port Mode** option is set to ECP mode. Use the **ECP Mode Use DMA** option to specify the DMA channel the parallel port must use in the ECP mode.

➔	**1**		The parallel port uses DMA Channel 1 in ECP mode.
➔	**3**	(Default)	The parallel port uses DMA Channel 3 in ECP mode.

➔ **CIR Port Address [Disabled]**

Use the **CIR Port Address** option to enable the CIR port and set the CIR port base address.

- Disabled (Default)
- 3F8
- 2F8
- 3E8
- 2E8

➔ **x CIR Port IRQ [11]**

The **CIR Port IRQ** option is only available if the **CIR Port Address** option is not disabled. Use the **CIR Port IRQ** option to specify an interrupt address for the CIR port. The **CIR Port IRQ** options are:

- 11 (Default)
- 5

➔ **Onboard Serial Port # [XXX]**

Use the **Onboard Serial Port #** option to select the I/O address and IRQ for any additional onboard serial ports. The **Onboard Serial Port #** address options are:

- Disabled
- 3F8
- 2F8
- 3E8
- 2E8

➔ **Serial Port # Use IRQ [XXX]**

Use the **Serial Port # Use IRQ** option to select the IRQ for the additional onboard serial ports listed above. The **Serial Port # Use IRQ** IRQ options are:

- IRQ5
- IRQ7
- IRQ10
- IRQ11

6.6 Power Management Setup

Use the Power Management Setup menu (BIOS Menu 8) to set the BIOS power management and saving features.

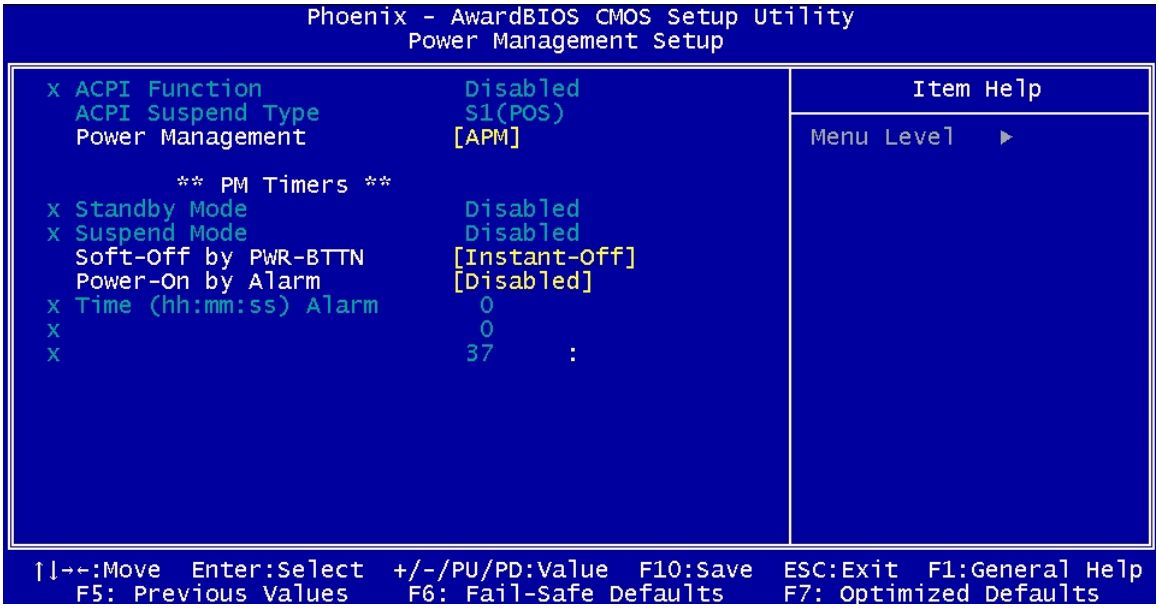
Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup
x ACPI Function Disabled
ACPI Suspend Type S1(POS)
Power Management [APM]
** PM Timers **
x Standby Mode Disabled
x Suspend Mode Disabled
Soft-Off by PWR-BTTN [Instant-Off]
Power-On by Alarm [Disabled]
x Time (hh:mm:ss) Alarm 0
x 0
x 37 :
Item Help
Menu Level ▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 8: Power Management Setup

➔ **x ACPI Function [Disabled]**

The **ACPI Function** is enabled when the **Power Management** option is set to ACPI; otherwise, it is disabled.

➔ **ACPI Suspend Type [S1(POS)]**

When the system is in the [S1(POS)] suspend state, the system appears off. The CPU is stopped, RAM is refreshed AND the system is runs in a low power mode. **The ACPI Suspend Type** option is not user configurable.

➔ **Power Management [APM]**

Use the **Power Management** option to set the power management type used by the system.

➔ **Disabled**		All power management options are turned off. The only user configurable options are the power button and alarm settings.
➔ **Legacy**		Standby and suspend modes can be set.
➔ **APM**	(Default)	Advanced power management (APM) is activated
➔ **ACPI**		Advanced Configuration and Power Interface (ACPI) is activated.

➔ **x Standby Mode [Disabled]**

The **Standby Mode** option can only be selected if the **Power Management** option is set to **Legacy**. The **Standby Mode** specifies the amount of time the system can be inactive before the system enters standby mode. The **Standby Mode** options are:

- Disabled (Default)
- 1 Sec
- 5 Sec
- 10 Sec
- 15 Sec
- 30 Sec
- 45 Sec
- 1 Min
- 5 Min
- 10 Min
- 15 Min

- 30 Min
- 45 Min
- 60 Min
- 90 Min
- 120 Min

➔ **x Suspend Mode [Disabled]**

The **Suspend Mode** option can only be selected if the **Power Management** option is set to Legacy. The **Suspend Mode** specifies the amount of time the system can be inactive before the system enters suspend mode. The **Suspend Mode** options are:

- Disabled (Default)
- 1 Sec
- 5 Sec
- 10 Sec
- 15 Sec
- 30 Sec
- 45 Sec
- 1 Min
- 5 Min
- 10 Min
- 15 Min
- 30 Min
- 45 Min
- 60 Min
- 90 Min
- 120 Min

➔ **Soft-Off by PWR-BTTN [Instant-Off]**

Use the **Soft-Off by PWR-BTTN** option to enabled the system to enter a very low-power-usage state when the power button is pressed.

➔ **Instant-Off** (Default) When the power button is pressed, the system is immediately shutdown.

➔ **Delay 4-sec** To shutdown the system the power button must be held down longer than four seconds otherwise the system enters a low power usage state.

➔ **Power-On by Alarm [Disabled]**

Use the **Power-On by Alarm** to set the time when the system should automatically be turned on.

➔ **Disabled** (Default) The real time clock (RTC) cannot generate a wake event.

➔ **Enabled** If selected, the tune (**hh:mm:ss**) options can be set to specify the exact time the system is roused.

6.7 PnP/PCI Configurations

Use the PnP/PCI Configurations menu (**BIOS Menu 9**) to set the plug and play, and PCI options.

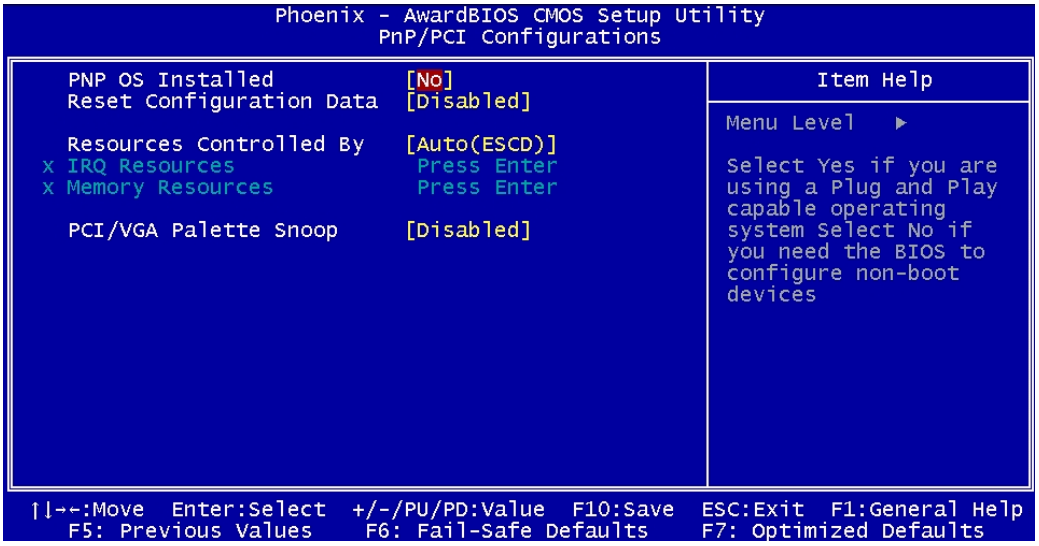
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
PNP OS Installed [No]
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
x Memory Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
Item Help
Menu Level ▶
Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 9: PnP/PCI Configurations

➔ **PNP OS Installed [No]**

The **PNP OS Installed** option determines whether the Plug and Play devices connected to the system are configured by the operating system or the BIOS.

➔ No	(Default)	If the operating system does not meet the Plug and Play specifications, BIOS configures all the devices in the system.
➔ Yes		Set this option if the system is running Plug and Play aware operating systems. The operating system changes the interrupt, I/O, and DMA settings.

➔ **Reset Configuration Data [Disabled]**

Use the **Reset Configuration Data** option to reset the Extended System Configuration Data (ESCD) when exiting setup if booting problems occur after a new add-on is installed.

➔ **Disabled**	(Default)	ESCD will not be reconfigured
➔ **Enabled**		ESCD will be reconfigured after you exit setup

➔ **Resources Controlled By [Auto (ESCD)]**

Use the **Resources Controlled By** option to either manually configure all the boot and plug and play devices, or allow BIOS to configure these devices automatically. If BIOS is allowed to configure the devices automatically IRQs, DMA and memory base address fields cannot be set manually.

➔ **Auto(ESCD)**	(Default)	BIOS automatically configures plug and play devices as well as boot devices.
➔ **Manual**		Manually configure the plug and play devices and any other boot devices.

➔ **x IRQ Resources [Press Enter]**

The IRQ Resources option (**BIOS Menu 10**) can only be selected if the Resources Controlled By option is set to Manual.

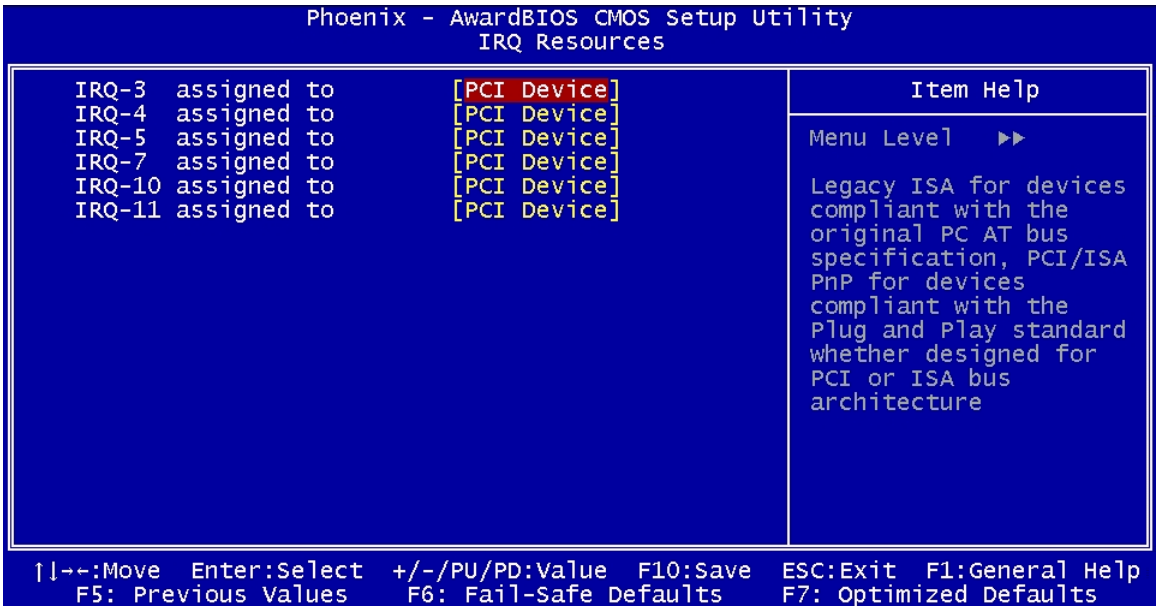
Phoenix - AwardBIOS CMOS Setup Utility
IRQ Resources
IRQ-3 assigned to [PCI Device]
IRQ-4 assigned to [PCI Device]
IRQ-5 assigned to [PCI Device]
IRQ-7 assigned to [PCI Device]
IRQ-10 assigned to [PCI Device]
IRQ-11 assigned to [PCI Device]
Item Help
Menu Level ▶▶
Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 10: IRQ Resources

The **IRQ Resources** menu has the following options:

- IRQ-3 assigned to
- IRQ-4 assigned to
- IRQ-5 assigned to
- IRQ-7 assigned to
- IRQ-10 assigned to
- IRQ-11 assigned to

The above options all have the following default options.

➔ **PCI Device** (Default) The IRQ is assigned to legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PNP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

➔ **Reserved** The IRQ is reserved by BIOS.

➔ **x Memory Resources [Press Enter]**

The Memory Resources menu (**BIOS Menu 11**) can only be accessed if the Resources Controlled By option is set to Manual. Use Memory Resources to select a base address and the length for the memory area used by a peripheral that requires high memory.

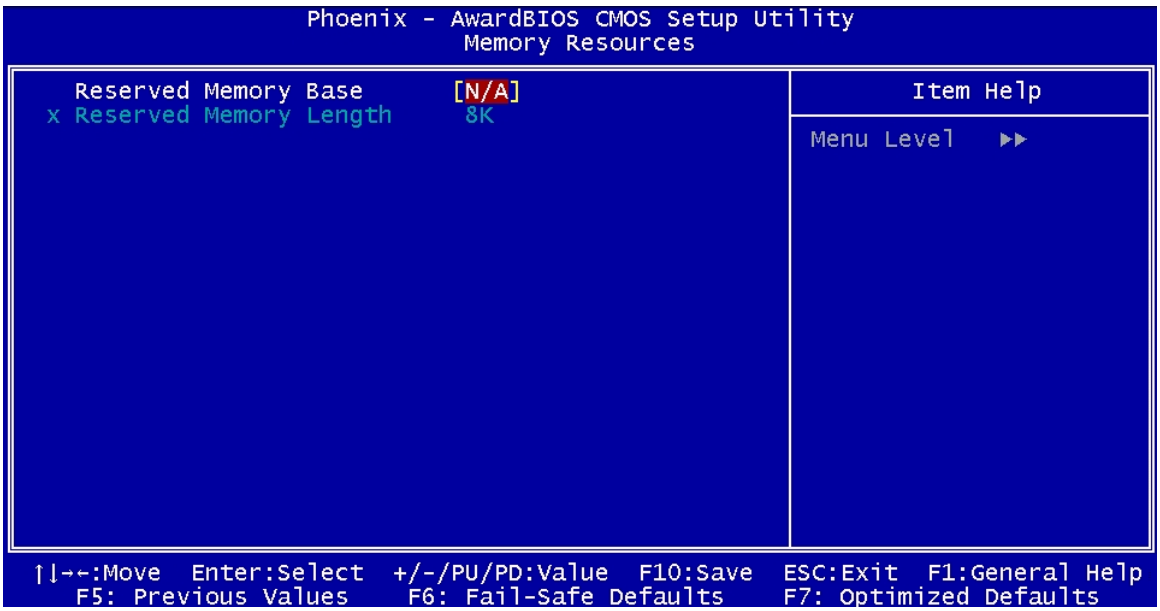
Phoenix - AwardBIOS CMOS Setup Utility
Memory Resources
Reserved Memory Base [N/A]
x Reserved Memory Length 8K
Item Help
Menu Level ▶▶
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Menu 11: Memory Resources

The menu has two configurable options:

- Reserved Memory Base
- Reserved Memory Length

➔ **Reserved Memory Base [N/A]**

The **Reserved Memory Base** option specifies the base address for the peripheral device. The **Reserved Memory Base** options are:

- N/A (Default)
- C800
- CC00
- D000
- D400
- D800
- DC00

➔ **x Reserved Memory Length [8K]**

The **Reserved Memory Length** option can only be accessed if the **Reserved Memory Base** option is not set to **N/A**. The **Reserved Memory Length** specifies the amount of memory reserved for the peripheral device. The **Reserved Memory Length** options:

- 8K (Default)
- 16K
- 32K
- 64K

➔ **PCI/VGA Palette Snoop [Disabled]**

The **PCI/VGA Palette Snoop** option enables the system to determine whether or not some special VGA cards, high-end hardware MPEG decoders and other similar devices are allowed to look at the VGA palette on the video card so these devices can determine what colors are in use. This option is needed *very* rarely and should be left "Disabled" unless a video device specifically requires the setting to be enabled upon installation.

➔ **Disabled** (Default) Does not allow the graphics devices to examine the VGA palette on the graphics card.

➔ **Enabled** Allows the graphics devices to examine the VGA palette on the graphics card.

6.8 PC Health Status

The **PC Health Status** menu (**BIOS Menu 12**) has no user configurable options, but shows system operating parameters that are essential to the stable operation of the system.

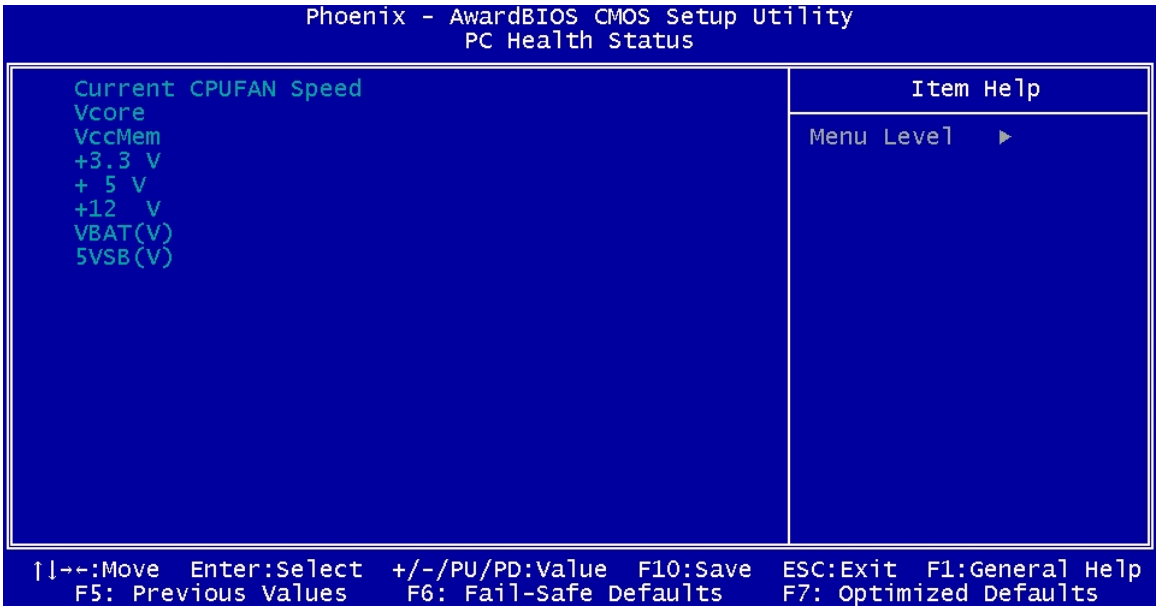

BIOS Menu 12: PC Health Status

The following system parameters are monitored by the **PC Health Status** menu.

➔ **Fan Speeds**

The following fan speed is monitored:

- CPU Fan Speed

➔ **Voltages**

The following voltages are monitored:

- Vcore
- VccMem
- +3.3 V
- +5 V
- +12 V
- VBAT(V)
- 5VSB(V)

Chapter

7

Software Drivers

7.1 Available Software Drivers

NOTE:

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. You may visit the IEI website or contact technical support for the latest updates.

The NANO-LX SBC has five software drivers:

- VGA Driver
- Audio Driver
- LAN Driver
- SATA/RAID Driver
- ISA Driver

All five drivers can be found on the CD that came with the SBC. To install the drivers please follow the instructions in the sections below.

Insert the CD into the system that contains the NANO-LX SBC.

NOTE:

If your system does not run the "autorun" program when the CD is inserted, click the **Start** button, select **Run**, then type **X:\autorun.exe** (replace **X** with the actual drive letter for your CD-ROM) to access the **IEI Driver CD** main menu.

Step 1: From the AMD® LX/GX Driver CD main menu (**Figure 7-1**), click **NANO-LX**.

Figure 7-1: AMD® LX/GX CD Main Menu

Step 2: A window appears listing the drivers available for installation (**Figure 7-2**).

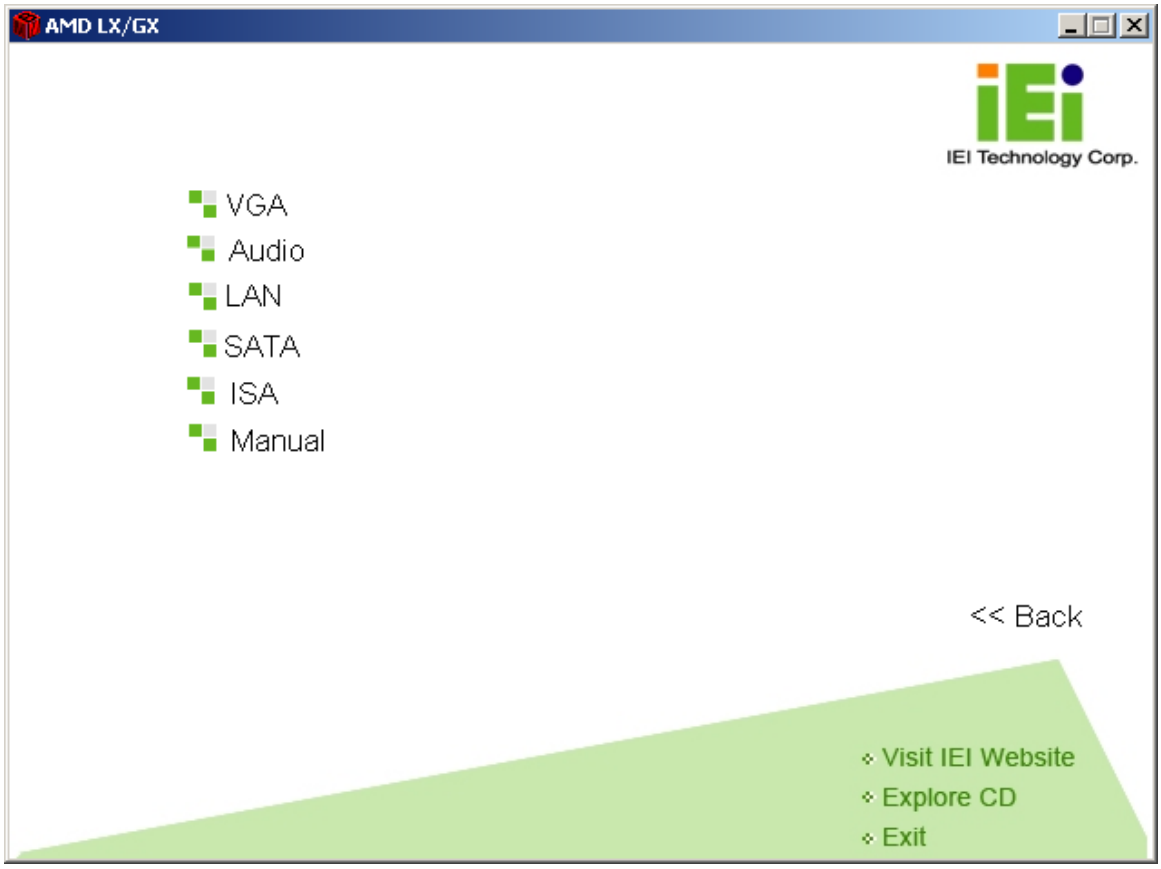

Figure 7-2: AMD® LX/GX CD Driver Menu

Step 3: Select any item from the list to view more information on the driver installation, or select Manual to navigate to the NANO-LX user manual.

The following sections fully describe the driver installation procedures for the NANO-LX SBC.

7.2 AMD® VGA Installation

NOTE:

This installation assumes the use of Windows XP as the operating system.

Follow the steps below to install the AMD® VGA display device controller.

Step 1: Open **Windows Control Panel** from the **Start** menu (Figure 7-3).

Figure 7-3: Access Windows Control Panel

Step 2: Double-click the **System** icon (Figure 7-4).

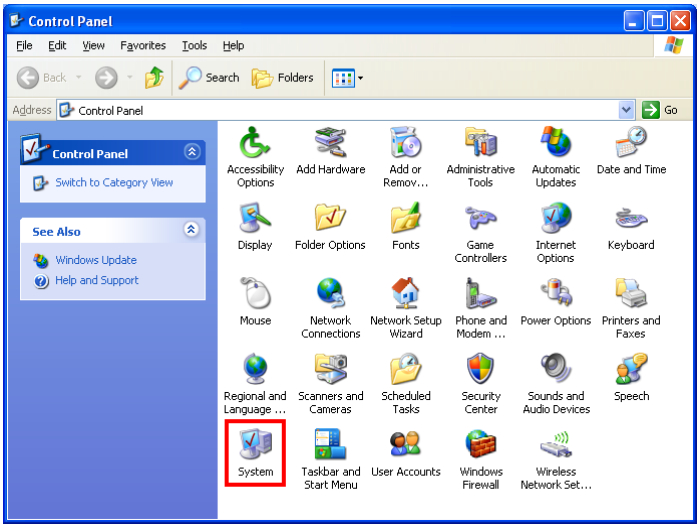

Figure 7-4: Double Click the System Icon

Step 3: Click the **Device Manager** tab (Figure 7-5).

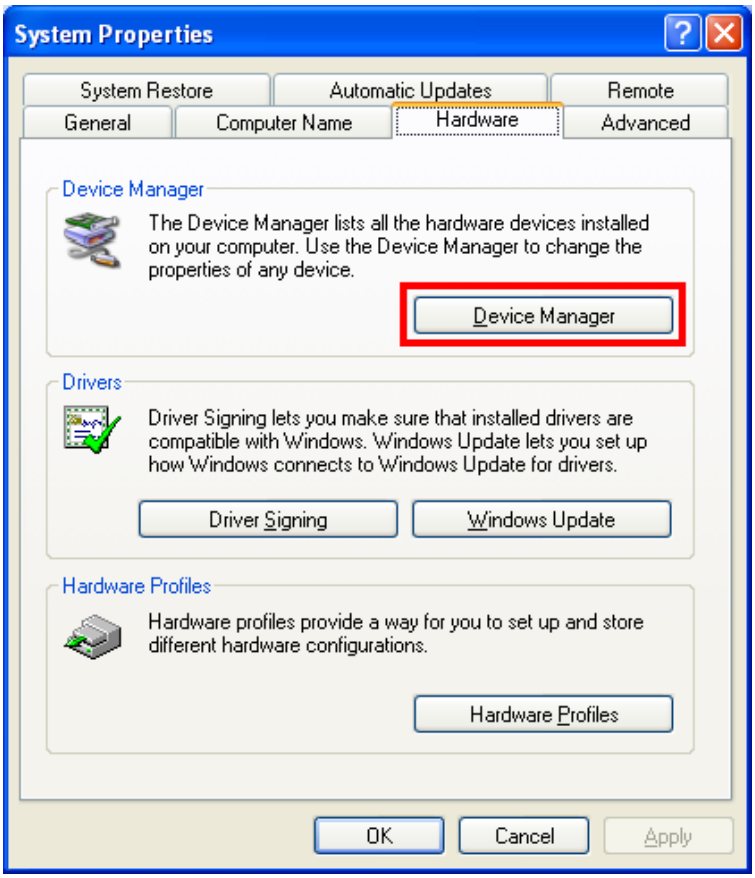
System Properties
System Restore
Automatic Updates
Remote
General
Computer Name
Hardware
Advanced
Device Manager
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device.
Device Manager
Drivers
Driver Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers.
Driver Signing
Windows Update
Hardware Profiles
Hardware profiles provide a way for you to set up and store different hardware configurations.
Hardware Profiles
OK
Cancel
Apply

Figure 7-5: Click the Device Manager Tab

Step 4: A list of system hardware devices appears (Figure 7-6).

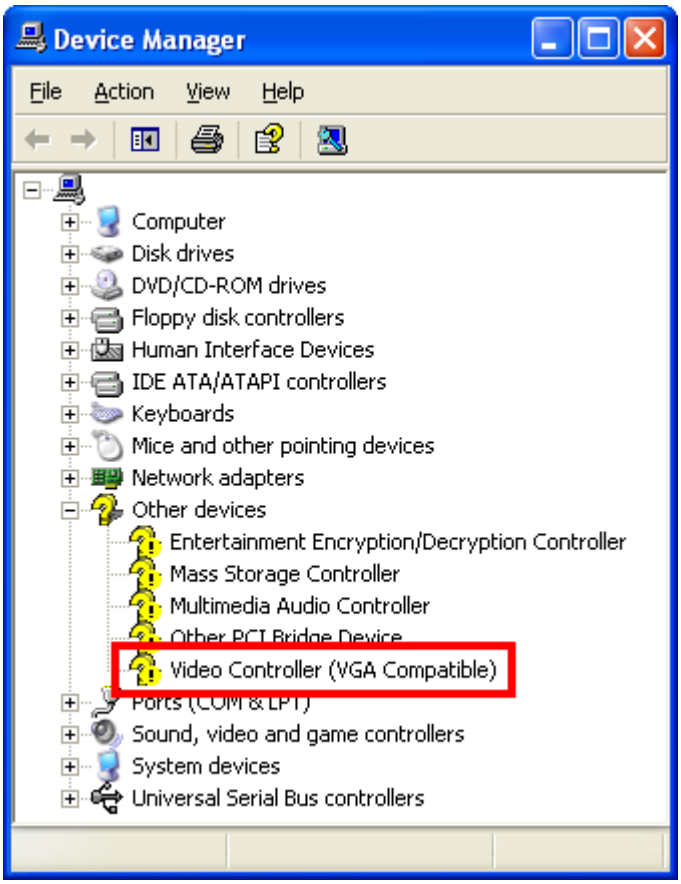

Figure 7-6: Device Manager List

Step 5: Double-click the **Video Controller** device.

Step 6: The **Video Controller Properties** window appears (Figure 7-7).

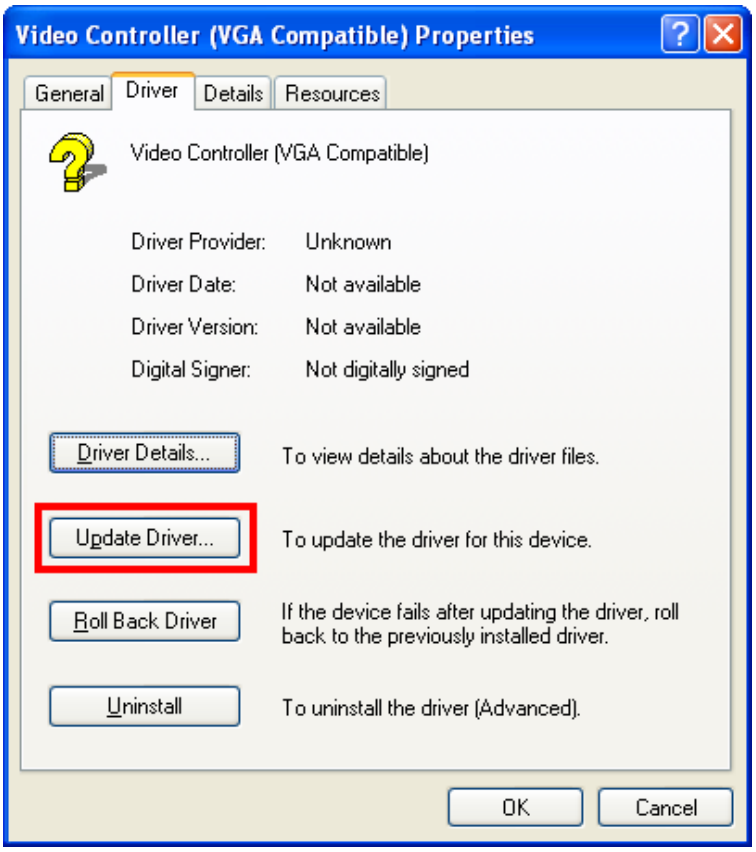

Figure 7-7: Video Controller Properties Window

Step 7: Click the **Update Driver** button in the **Driver** tab.

Step 8: The **Hardware Update Wizard** appears (Figure 7-8).

Hardware Update Wizard
Welcome to the Hardware Update Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

Figure 7-8: Hardware Update Wizard

Step 9: Select "**No, not this time**," and click **NEXT** to continue.

Step 10: The following window (Figure 7-9) appears.

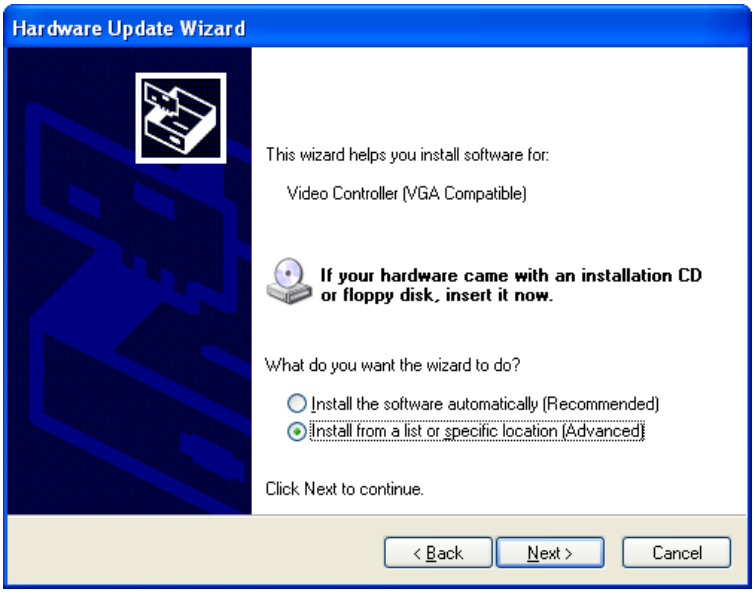
Hardware Update Wizard
This wizard helps you install software for:
Video Controller (VGA Compatible)
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Figure 7-9: Install Options Window

Step 11: Select "**Install from a list or specific location**…" and click **NEXT** to continue.

Step 12: The following window (Figure 7-10) appears.

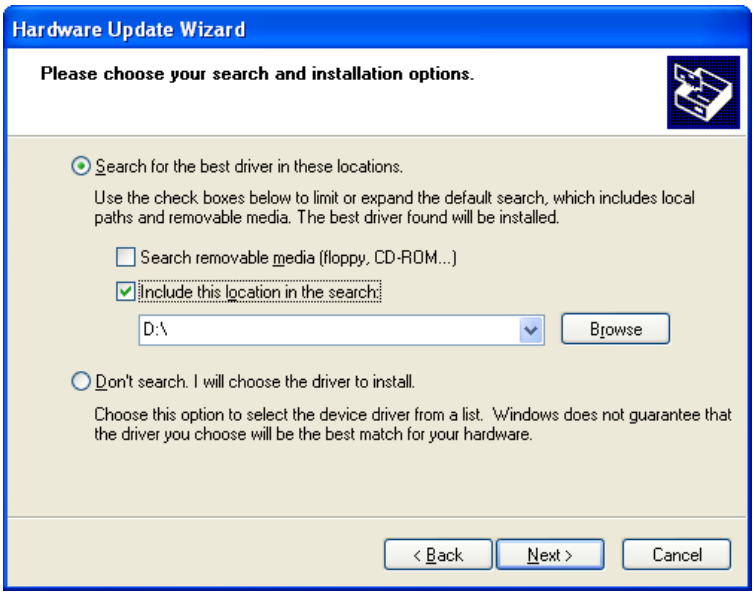
Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
D:\
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

Figure 7-10: Search Options Window

Step 13: Select "**Search for the best driver in these locations**," "**Include this location in the search**," and click **BROWSE** to continue.

Step 14: The following window (Figure 7-11) appears.

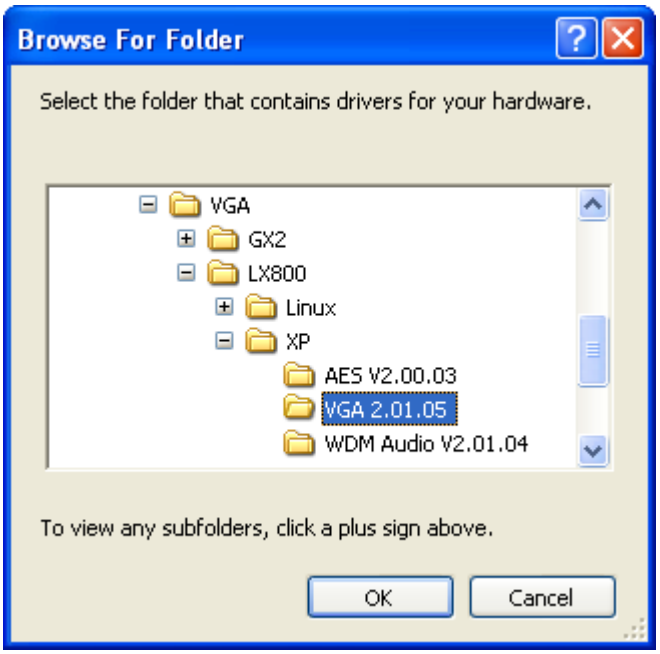

Figure 7-11: Folder Selection Window

Step 15: Select the proper driver folder under the "**X:\VGA\LX 800\XP**" directory in the location browsing window, where "**X:\"** is the system CD drive, and click **OK** to continue.

Step 16: The following window (Figure 7-12) appears.

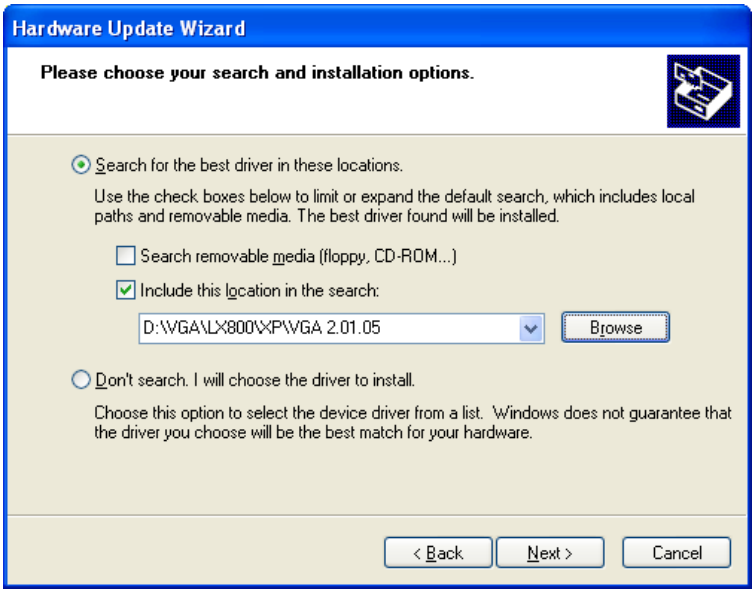
Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
D:\VGA\LX800\XP\VGA 2.01.05
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

Figure 7-12: Search Options Window

Step 17: Click **NEXT** to continue.

Step 18: The following window (Figure 7-13) appears as the OS searches for the driver.

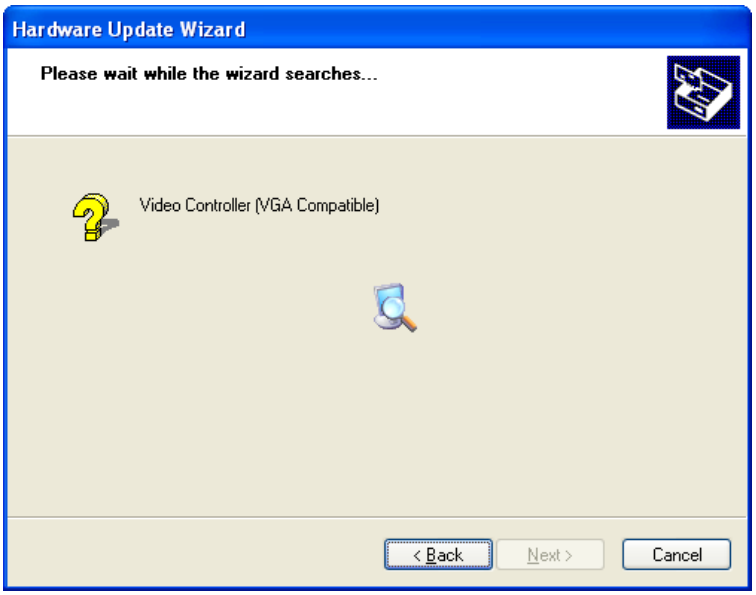

Figure 7-13: Hardware Update Wizard Search Window

Step 19: The following window (Figure 7-14) appears.

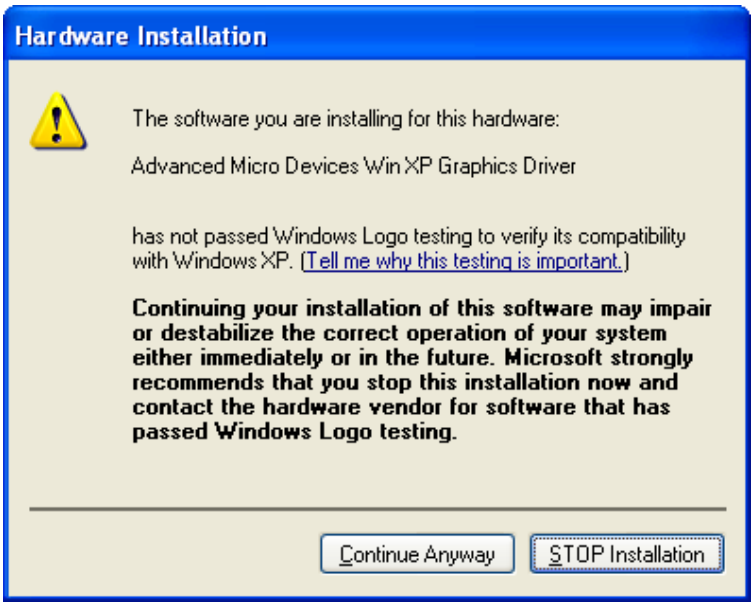
Hardware Installation
The software you are installing for this hardware:
Advanced Micro Devices Win XP Graphics Driver
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Figure 7-14: Windows Logo Testing Window

Step 20: Click **CONTINUE ANYWAY** to continue.

Step 21: The following window (Figure 7-15) appears as the driver is installed.

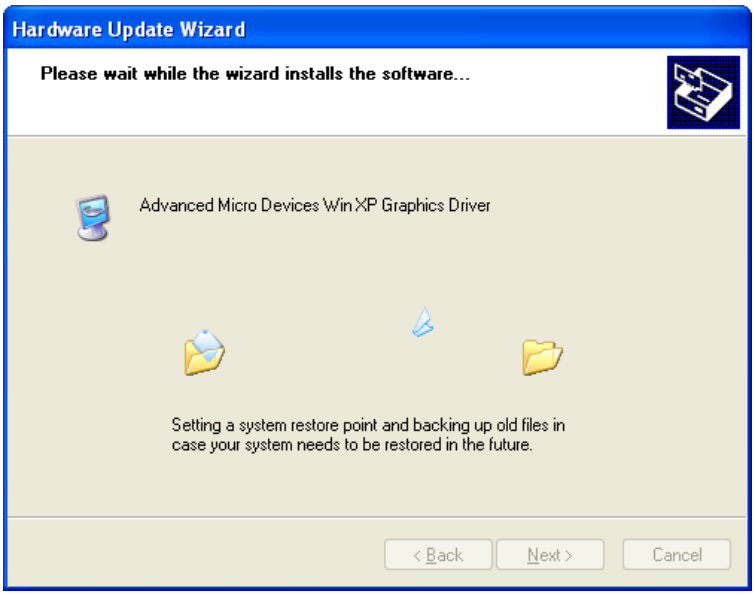
Hardware Update Wizard
Please wait while the wizard installs the software...
Advanced Micro Devices Win XP Graphics Driver
Setting a system restore point and backing up old files in case your system needs to be restored in the future.
< Back
Next >
Cancel

Figure 7-15: Driver Installation Window

Step 22: After the driver installation process is complete, a confirmation screen appears (Figure 7-16).

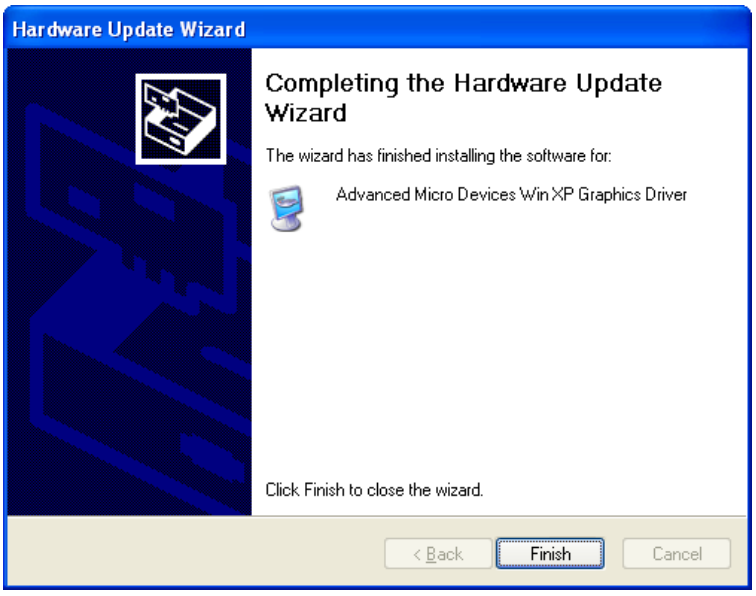
Hardware Update Wizard
Completing the Hardware Update Wizard
The wizard has finished installing the software for:
Advanced Micro Devices Win XP Graphics Driver
Click Finish to close the wizard.
< Back
Finish
Cancel

Figure 7-16: Driver Installation Complete Window

Step 23: Click **FINISH** to exit the program.

Step 24: The **Device Manager Window** now shows the installed AMD graphics driver (Figure 7-17).

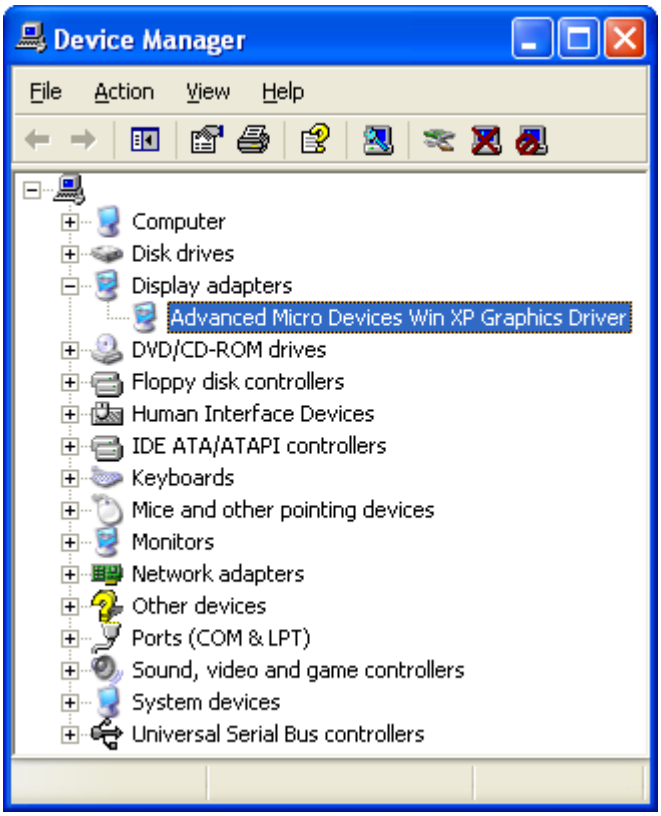

Figure 7-17: Device Manager Window

7.3 Audio Driver Installation

To install the audio driver please follow the steps below.

Step 1: Open **Windows Control Panel (Figure 7-18**).

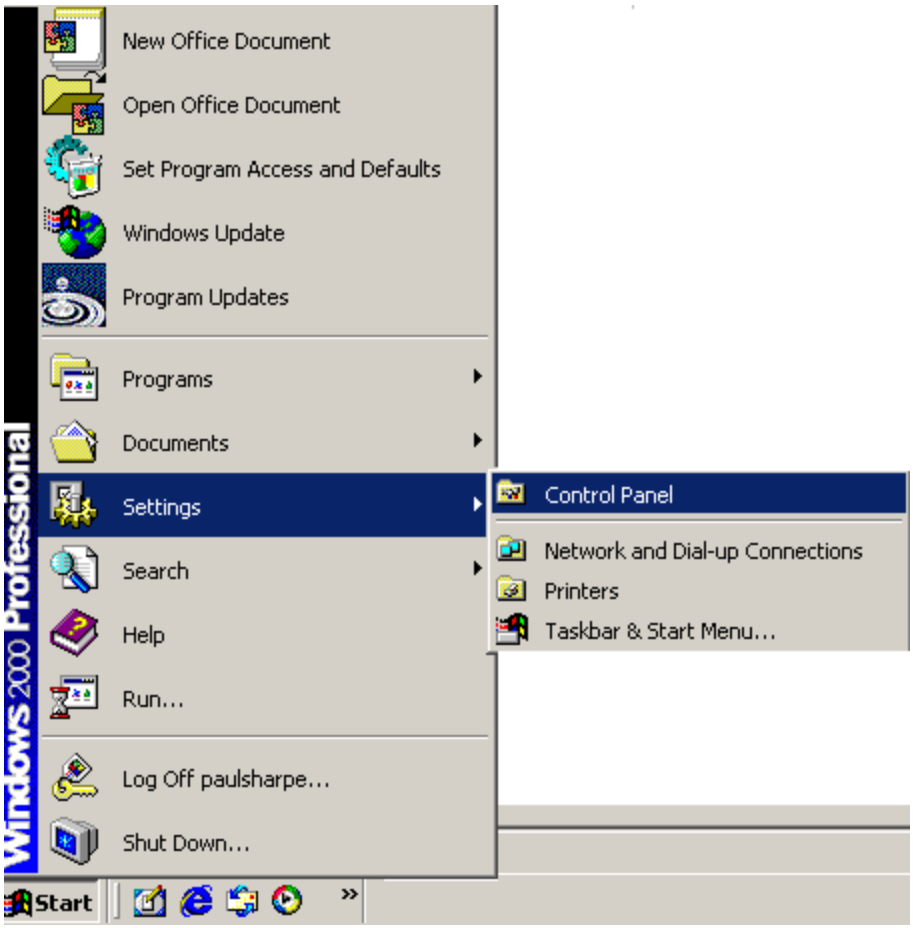

Figure 7-18: Access Windows Control Panel

Step 2: Double click the **System** icon (**Figure 7-19**).

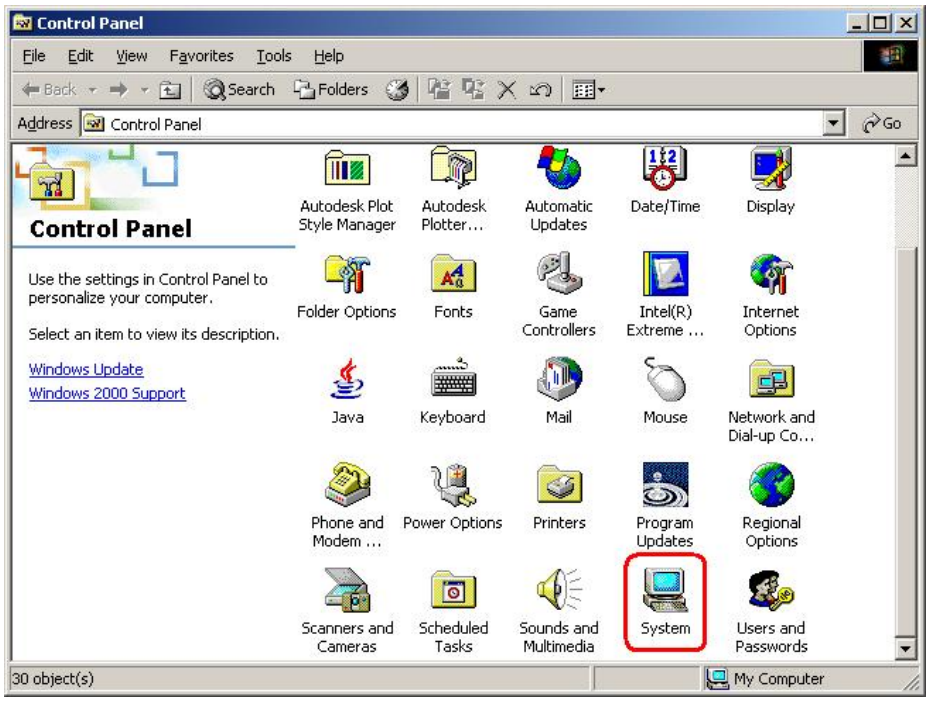

Figure 7-19: Double Click the System Icon

Step 3: Double click the **Device Manager** tab (**Figure 7-20**).

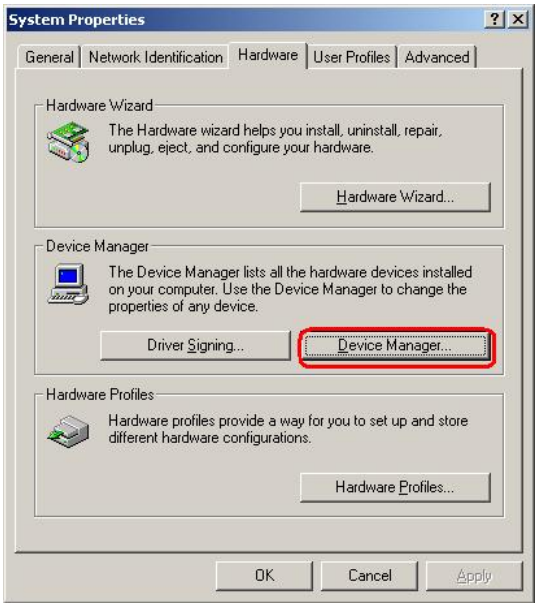
System Properties
General
Network Identification
Hardware
User Profiles
Advanced
Hardware Wizard
The Hardware wizard helps you install, uninstall, repair, unplug, eject, and configure your hardware.
Hardware Wizard...
Device Manager
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device.
Driver Signing...
Device Manager...
Hardware Profiles
Hardware profiles provide a way for you to set up and store different hardware configurations.
Hardware Profiles...
OK
Cancel
Apply

Figure 7-20: Double Click the Device Manager Tab

Step 4: A list of system hardware devices appears (**Figure 7-21**).

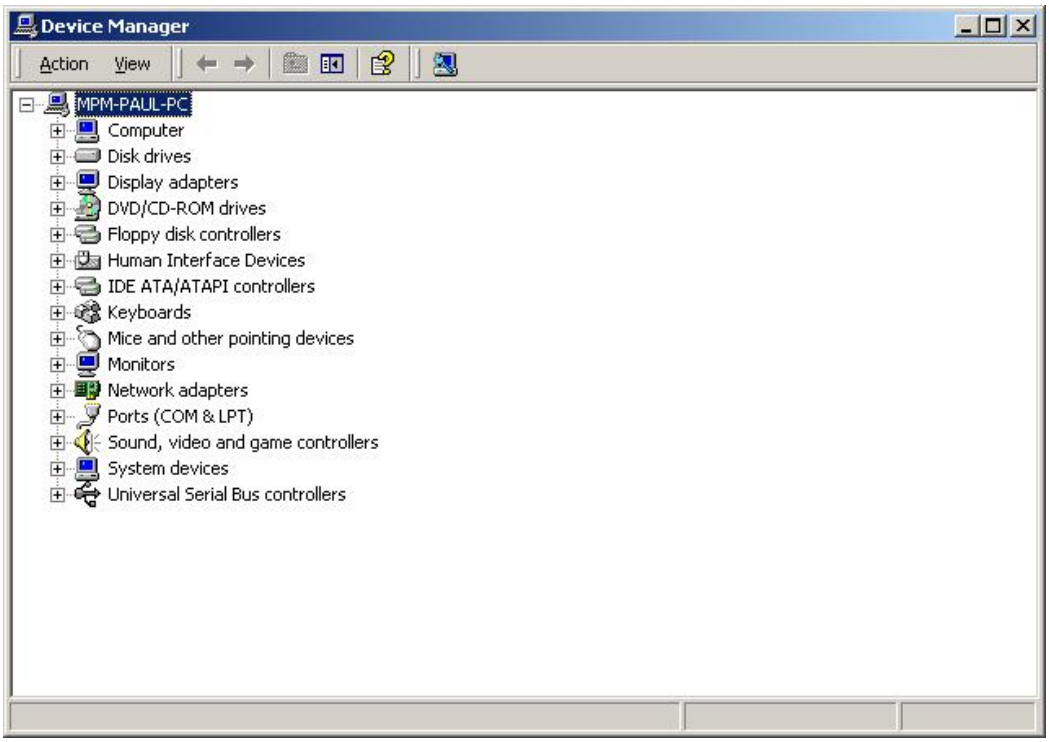

Figure 7-21: Device Manager List

Step 5: Double click the listed device that has question marks next to it. (This means Windows does not recognize the device).

Step 6: The **Device Driver Wizard** appears (**Figure 7-22**). Click **NEXT** to continue.

Upgrade Device Driver Wizard
Install Hardware Device Drivers
A device driver is a software program that enables a hardware device to work with an operating system.
This wizard upgrades drivers for the following hardware device:
532DD36TA0379HannStar U171
Upgrading to a newer version of a device driver may add functionality to or improve the performance of this device.
What do you want the wizard to do?
Search for a suitable driver for my device (recommended)
Display a list of the known drivers for this device so that I can choose a specific driver
< Back
Next >
Cancel

Figure 7-22: Search for Suitable Driver

Step 7: Select "**Specify a Location**" in the **Locate Driver Files** window (**Figure 7-23**).

Click **NEXT** to continue.

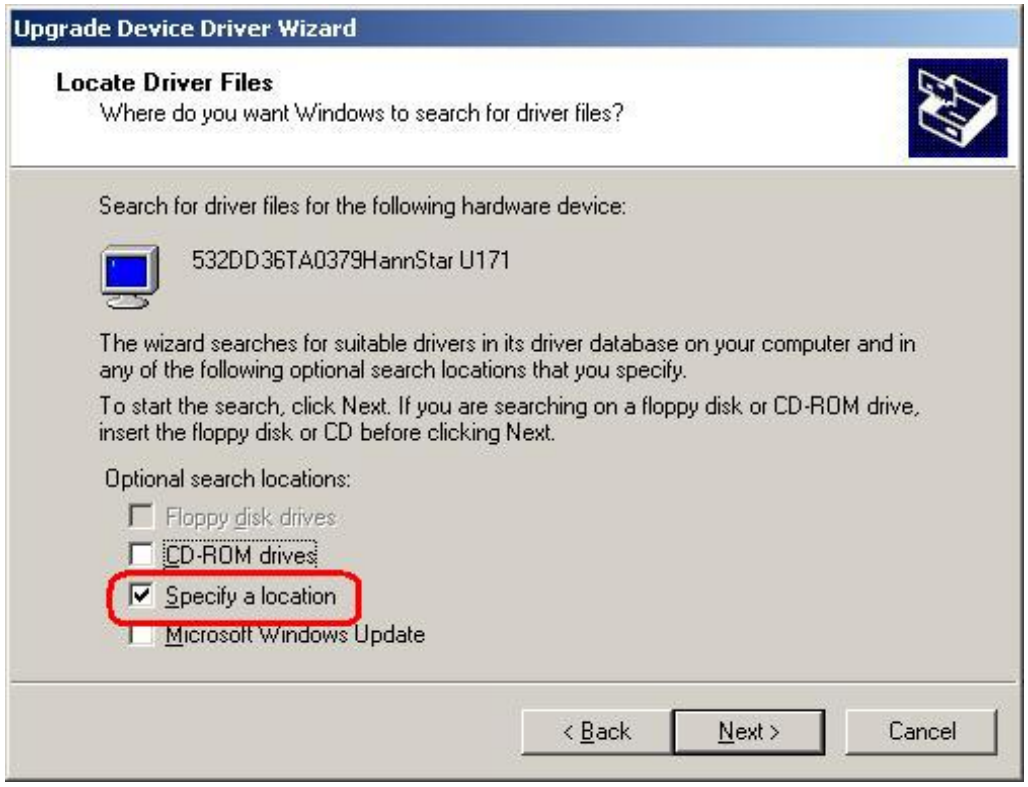
Upgrade Device Driver Wizard
Locate Driver Files
Where do you want Windows to search for driver files?
Search for driver files for the following hardware device:
532DD36TA0379HannStar U171
The wizard searches for suitable drivers in its driver database on your computer and in any of the following optional search locations that you specify.
To start the search, click Next. If you are searching on a floppy disk or CD-ROM drive, insert the floppy disk or CD before clicking Next.
Optional search locations:
Floppy disk drives
CD-ROM drives
Specify a location
Microsoft Windows Update
< Back
Next >
Cancel

Figure 7-23: Locate Driver Files

Step 8: Select "**X:\ Audio\GeodeLX_XP_XPe_WDM_Audio_v2.03.00**" directory in the location browsing window, where "**X:\"** is the system CD drive (**Figure 7-24**).

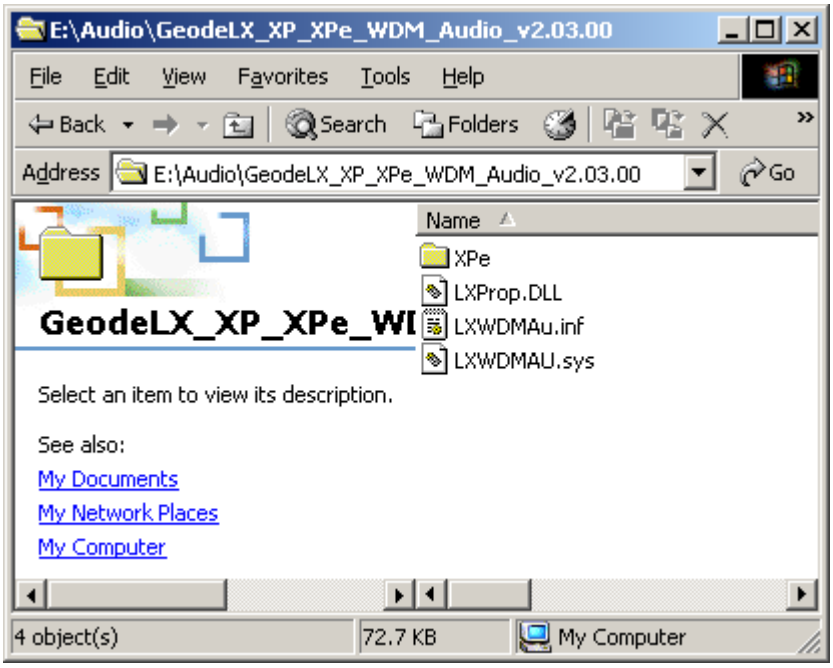

Figure 7-24: Location Browsing Window

Step 9: Click **OK** to continue. A driver files location menu window appears. Select the **LXWDMAu.inf** file and click **OPEN** to continue. The driver is installed.

7.4 LAN Driver

To install the LAN driver, please follow the steps below.

Step 1: Click **LAN** from the **AMD LX/GX CD Driver Menu** to open a window to the **X:\LAN\Realtek** (where **X:** is the system CD drive) folder on the driver CD.

Step 2: Open the **RTL8100C** folder.

Step 3: Locate the **Setup** program icon (**Figure 7-25**).

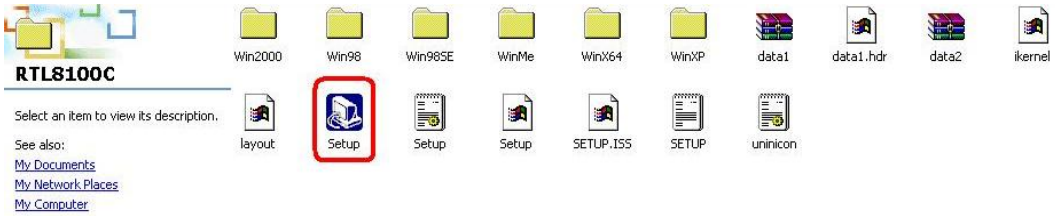

Figure 7-25: Locate the Setup Program Icon

Step 4: Double click the **Setup** program icon in **Figure 7-25**.

Step 5: The **Install Shield Wizard** is prepared to guide the user through the rest of the process (**Figure 7-26**).

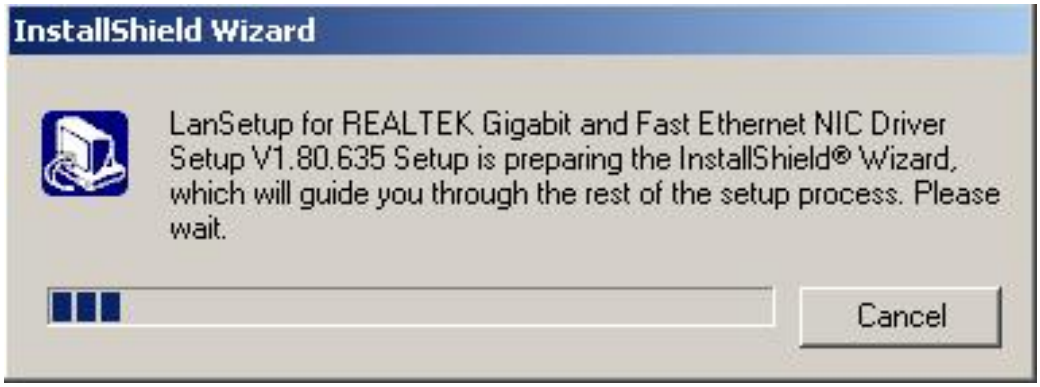
InstallShield Wizard
LanSetup for REALTEK Gigabit and Fast Ethernet NIC Driver Setup V1.80.635 Setup is preparing the InstallShield® Wizard, which will guide you through the rest of the setup process. Please wait.
Cancel

Figure 7-26: Preparing Setup Screen

Step 6: Once initialized, the **Install Wizard** welcome screen appears (**Figure 7-27**).

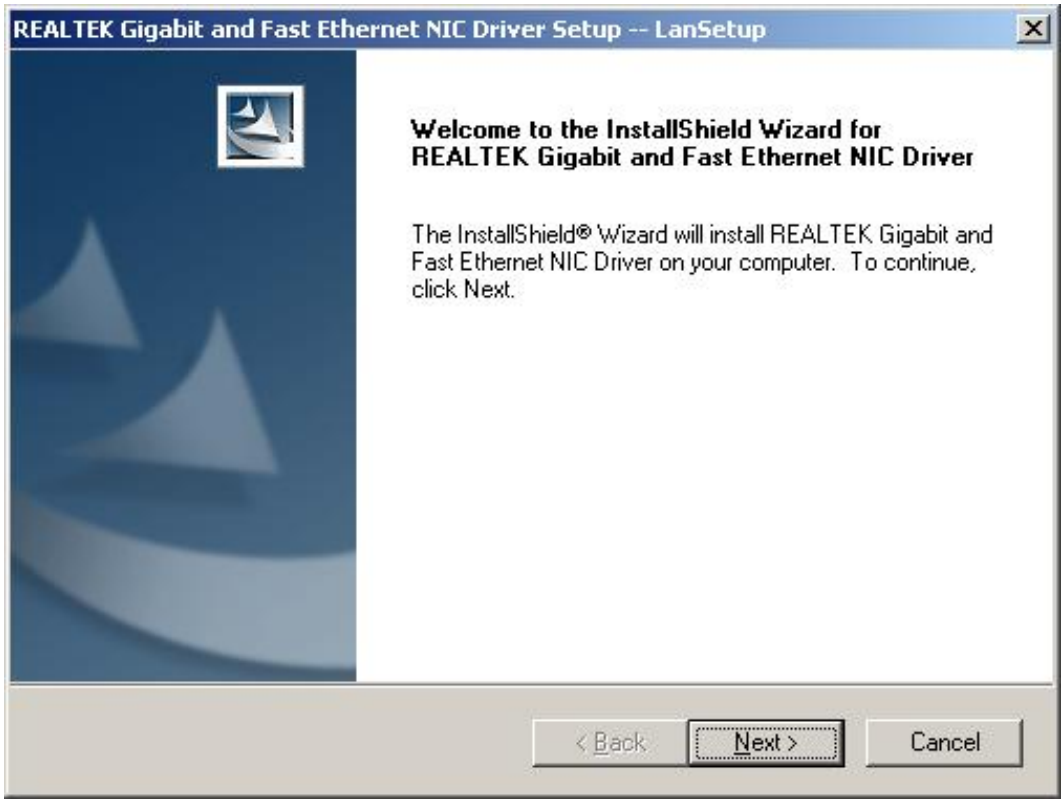
REALTEK Gigabit and Fast Ethernet NIC Driver Setup -- LanSetup
Welcome to the InstallShield Wizard for REALTEK Gigabit and Fast Ethernet NIC Driver
The InstallShield® Wizard will install REALTEK Gigabit and Fast Ethernet NIC Driver on your computer. To continue, click Next.
< Back
Next >
Cancel

Figure 7-27: Install Wizard Welcome Screen

Step 7: Click **NEXT** to continue the installation or **CANCEL** to stop the installation.

Step 8: The **Install Wizard** starts to install the LAN driver.

Step 9: Once the installation is complete, the **InstallShield Wizard Complete** screen appears (**Figure 7-28**).

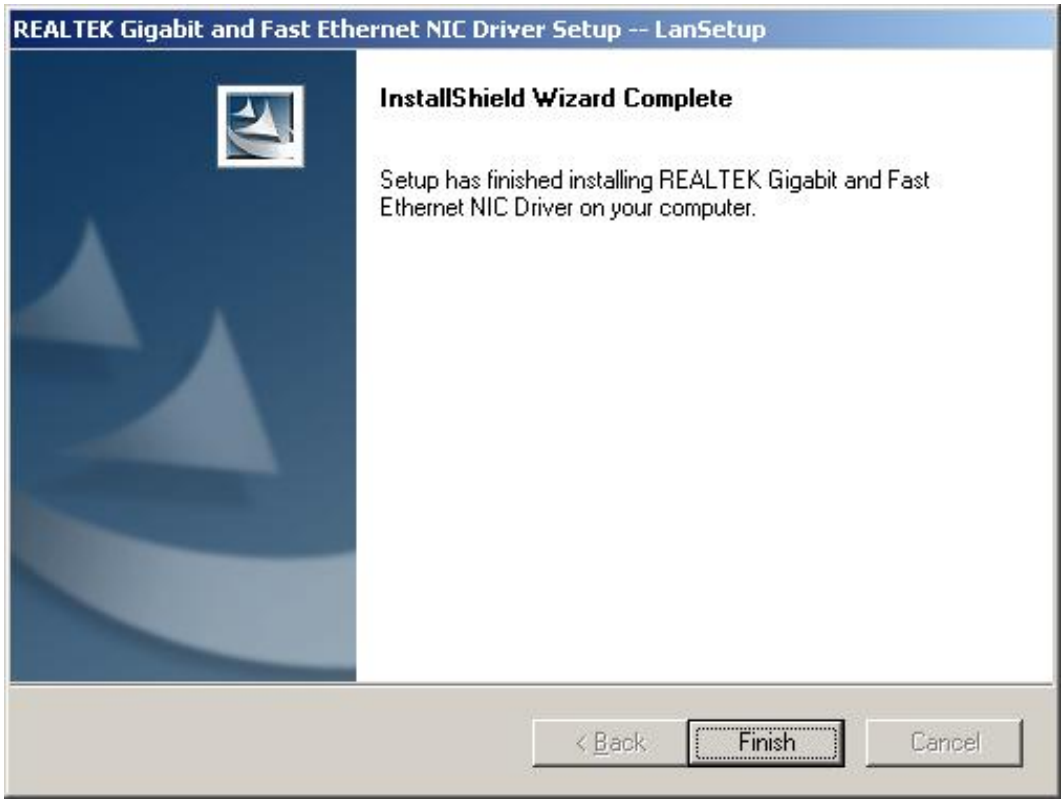
REALTEK Gigabit and Fast Ethernet NIC Driver Setup -- LanSetup
InstallShield Wizard Complete
Setup has finished installing REALTEK Gigabit and Fast Ethernet NIC Driver on your computer.
< Back
Finish
Cancel

Figure 7-28: Installing Screen

Step 10: Click **FINISH** to complete the installation and exit the **Install Shield Wizard**.

Step 11: Once the installation process is complete, the computer may be restarted immediately or later. Select the preferred option and click **FINISH** to complete the installation process and exit the **Install Shield Wizard** (**Figure 7-29**).

SiSAGP driver - InstallShield Wizard
SiSAGP driver
The InstallShield Wizard has successfully installed SiSAGP driver. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

Figure 7-29: Restart the Computer

7.5 SATA/RAID Driver

To install the ALi SATA/RAID driver, please follow the steps below.

Step 1: Click **SATA** from the **AMD LX/GX CD Driver Menu** to open a window to the **X:\ALi_SATA_M5283** (where **X:** is the system CD drive) folder on the driver CD.

Step 2: Locate the **Setup** program icon (**Figure 7-30**).

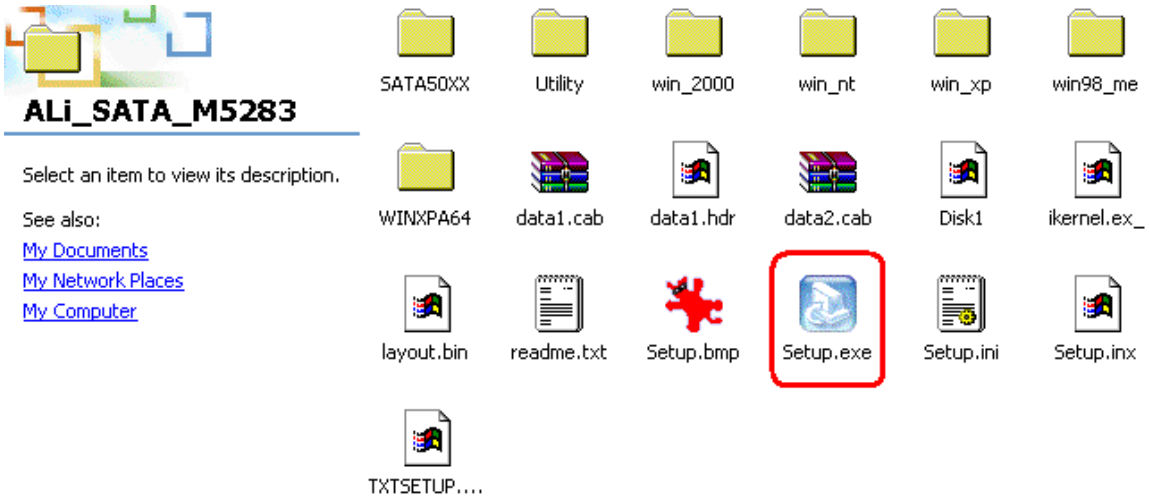

Figure 7-30: Locate the Setup Program Icon

Step 3: The **Install Shield Wizard** (**Figure 7-31**) is prepared to guide the user through the rest of the process.

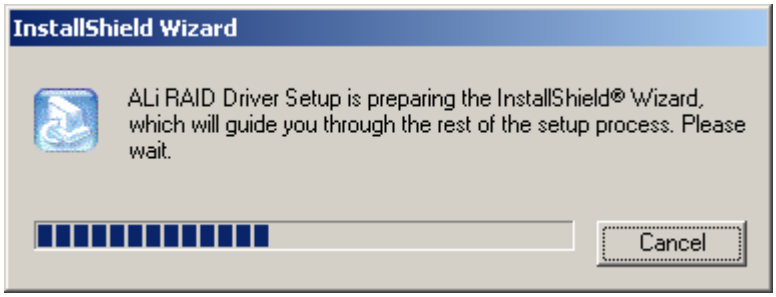
InstallShield Wizard
ALi RAID Driver Setup is preparing the InstallShield® Wizard, which will guide you through the rest of the setup process. Please wait.
Cancel

Figure 7-31: Preparing Setup Screen

Step 4: Once initialized, the **Install Wizard** welcome screen appears (**Figure 7-32**).

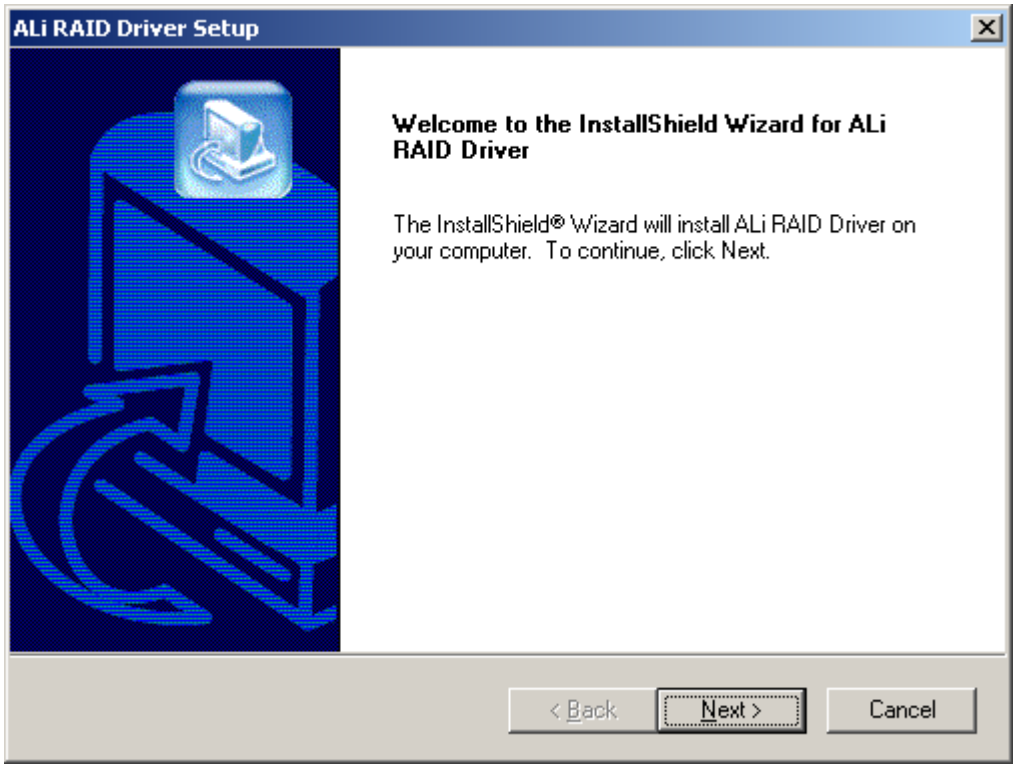
ALi RAID Driver Setup
Welcome to the InstallShield Wizard for ALi RAID Driver
The InstallShield® Wizard will install ALi RAID Driver on your computer. To continue, click Next.
< Back
Next >
Cancel

Figure 7-32: Install Wizard Welcome Screen

Step 5: Click **NEXT** to continue the installation or **CANCEL** to stop the installation.

Step 6: The **Install Wizard** starts to install the driver (**Figure 7-33**).

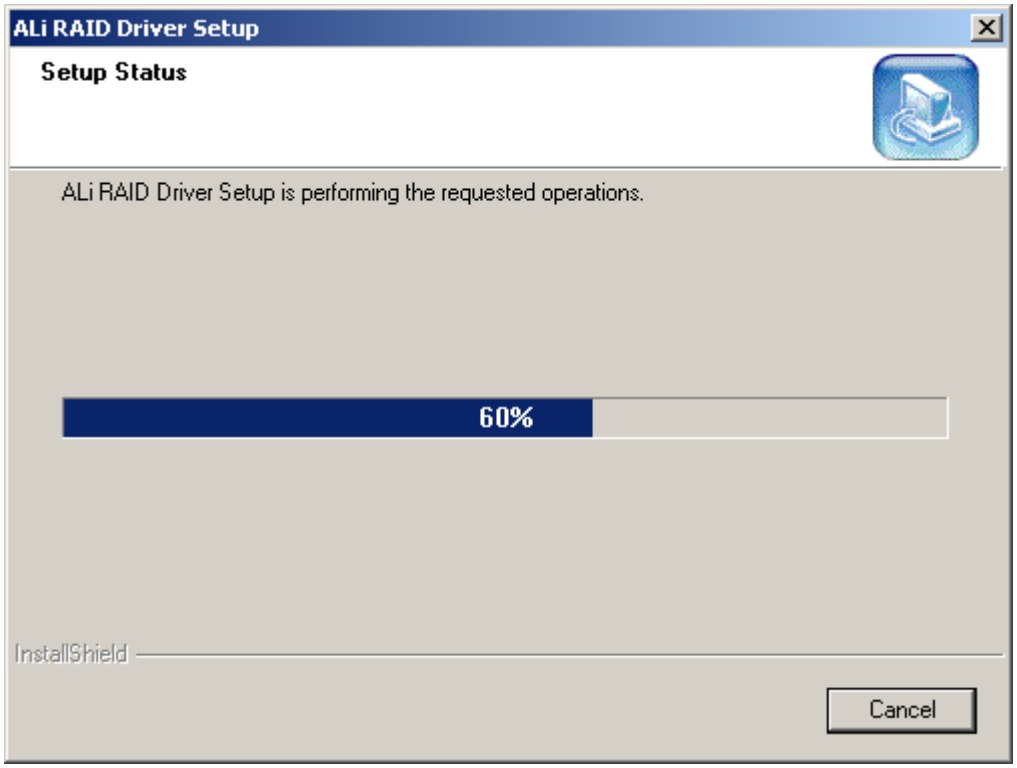

Figure 7-33: Installing Screen

Step 7: A "**Digital Signal Not Found**" screen appears (**Figure 7-34**). Click **YES** to continue the installation process.

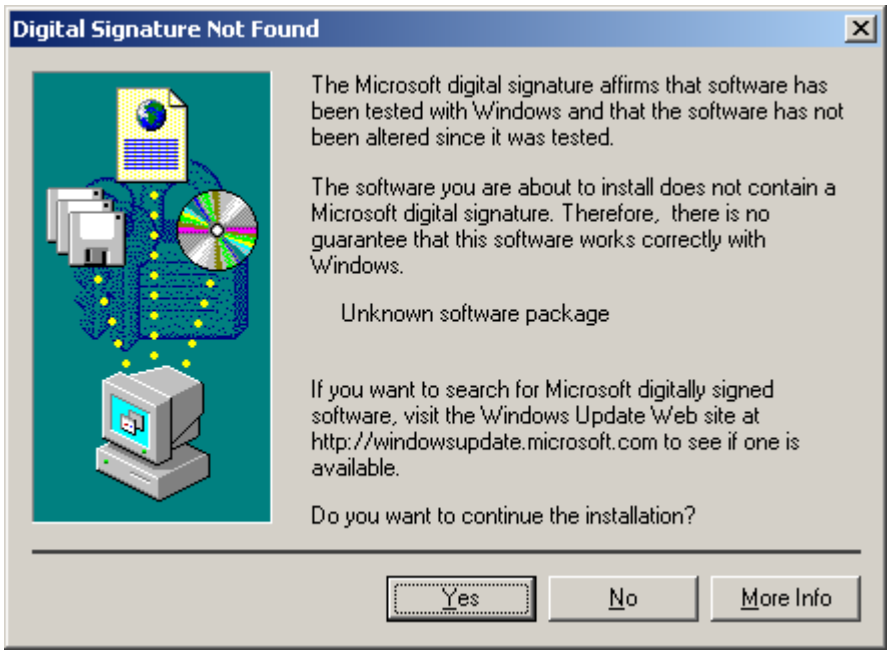
Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
Unknown software package
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

Figure 7-34: RAID Driver Digital Signal

Step 8: Once the installation is complete, the **InstallShield Wizard Complete** screen appears (**Figure 7-35**).

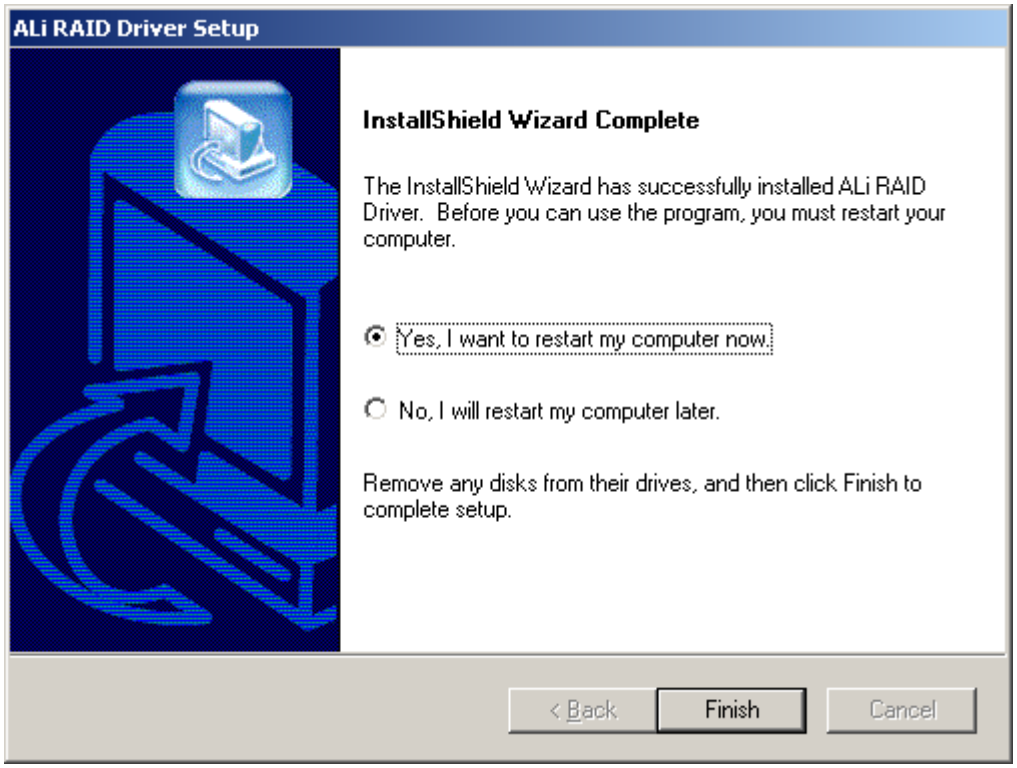
ALi RAID Driver Setup
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed ALi RAID Driver. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

Figure 7-35: InstallShield Wizard Complete Screen

Step 9: Once the installation process is complete, the computer may be restarted immediately or later. Select the preferred option and click **FINISH** to complete the installation process and exit the **Install Shield Wizard**.

7.6 ISA Driver

To install the IT8888 ISA Bridge driver please follow the steps below:

Step 1: Open **Windows Control Panel** (**Figure 7-36**).

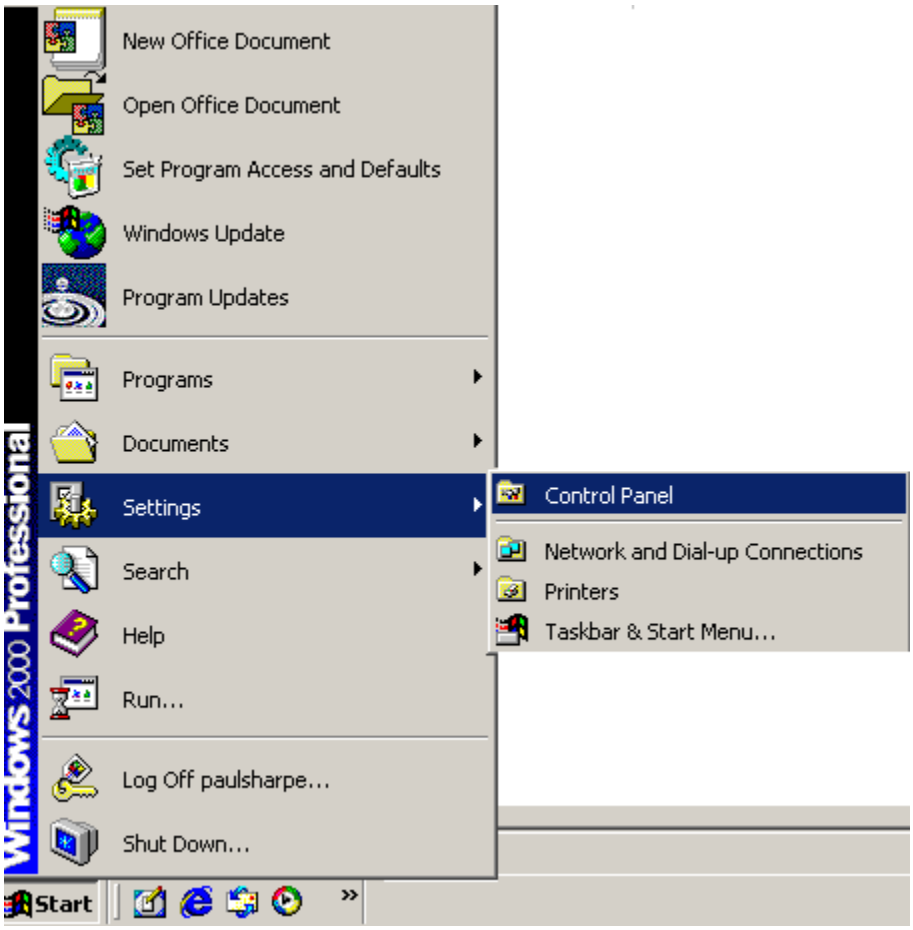

Figure 7-36: Access Windows Control Panel

Step 2: Double click the **System** icon (**Figure 7-37**).

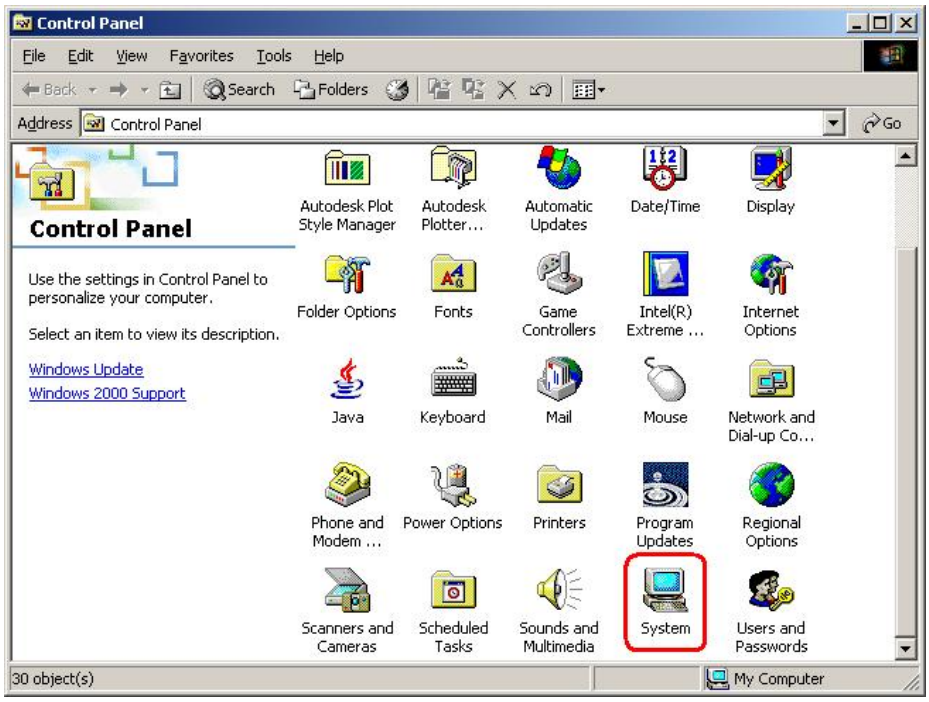

Figure 7-37: Double Click the System Icon

Step 3: Double click the **Device Manager** tab (**Figure 7-38**).

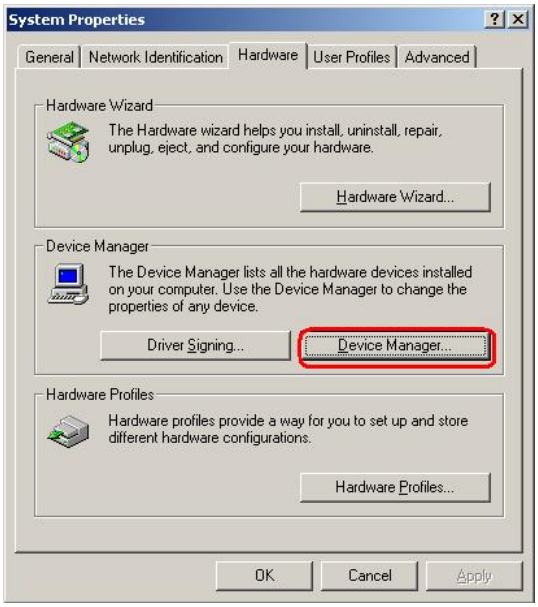
System Properties
General
Network Identification
Hardware
User Profiles
Advanced
Hardware Wizard
The Hardware wizard helps you install, uninstall, repair, unplug, eject, and configure your hardware.
Hardware Wizard...
Device Manager
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device.
Driver Signing...
Device Manager...
Hardware Profiles
Hardware profiles provide a way for you to set up and store different hardware configurations.
Hardware Profiles...
OK
Cancel
Apply

Figure 7-38: Double Click the Device Manager Tab

Step 4: A list of system hardware devices appears (**Figure 7-39**).

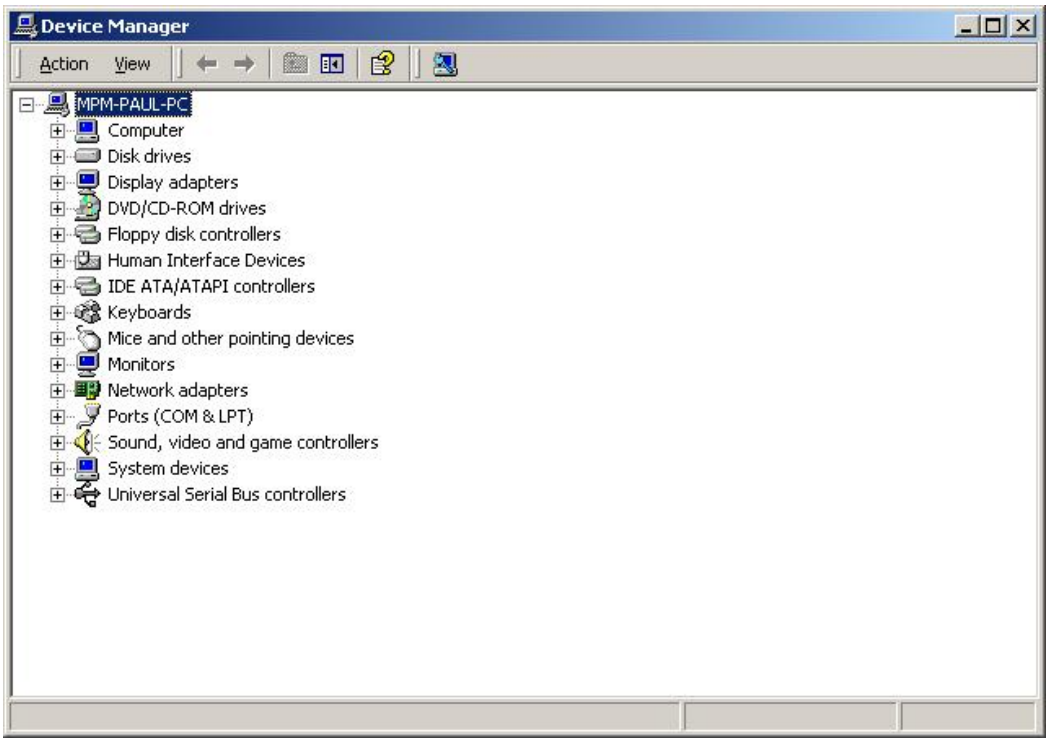

Figure 7-39: Device Manager List

Step 5: Double click the listed device that has question marks next to it. (This means Windows does not recognize the device).

Step 6: The **Device Driver Wizard** appears (**Figure 7-40**). Click **NEXT** to continue.

Upgrade Device Driver Wizard
Install Hardware Device Drivers
A device driver is a software program that enables a hardware device to work with an operating system.
This wizard upgrades drivers for the following hardware device:
532DD36TA0379HannStar U171
Upgrading to a newer version of a device driver may add functionality to or improve the performance of this device.
What do you want the wizard to do?
Search for a suitable driver for my device (recommended)
Display a list of the known drivers for this device so that I can choose a specific driver
< Back
Next >
Cancel

Figure 7-40: Search for Suitable Driver

Step 7: Select "**Specify a Location**" in the **Locate Driver Files** window (**Figure 7-41**).

Click **NEXT** to continue.

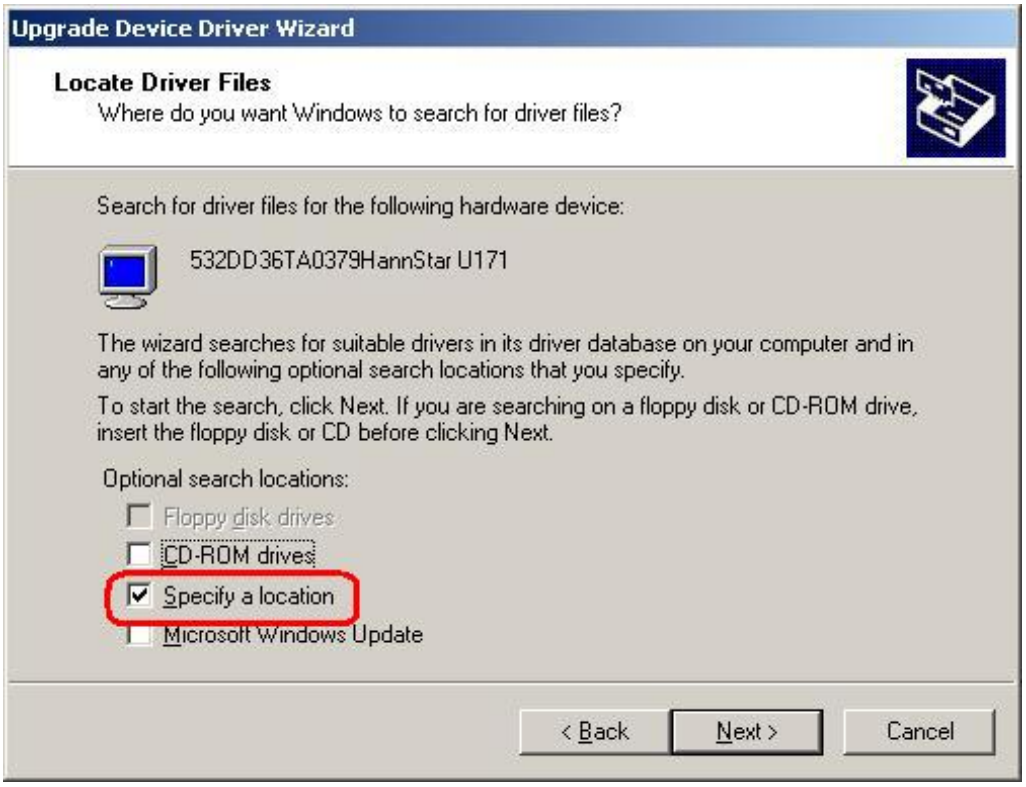
Upgrade Device Driver Wizard
Locate Driver Files
Where do you want Windows to search for driver files?
Search for driver files for the following hardware device:
532DD36TA0379HannStar U171
The wizard searches for suitable drivers in its driver database on your computer and in any of the following optional search locations that you specify.
To start the search, click Next. If you are searching on a floppy disk or CD-ROM drive, insert the floppy disk or CD before clicking Next.
Optional search locations:
Floppy disk drives
CD-ROM drives
Specify a location
Microsoft Windows Update
< Back
Next >
Cancel

Figure 7-41: Locate Driver Files

Step 8: Select "**X:\IT8888**" directory in the location browsing window, where "**X:\"** is the system CD drive (**Figure 7-42**).

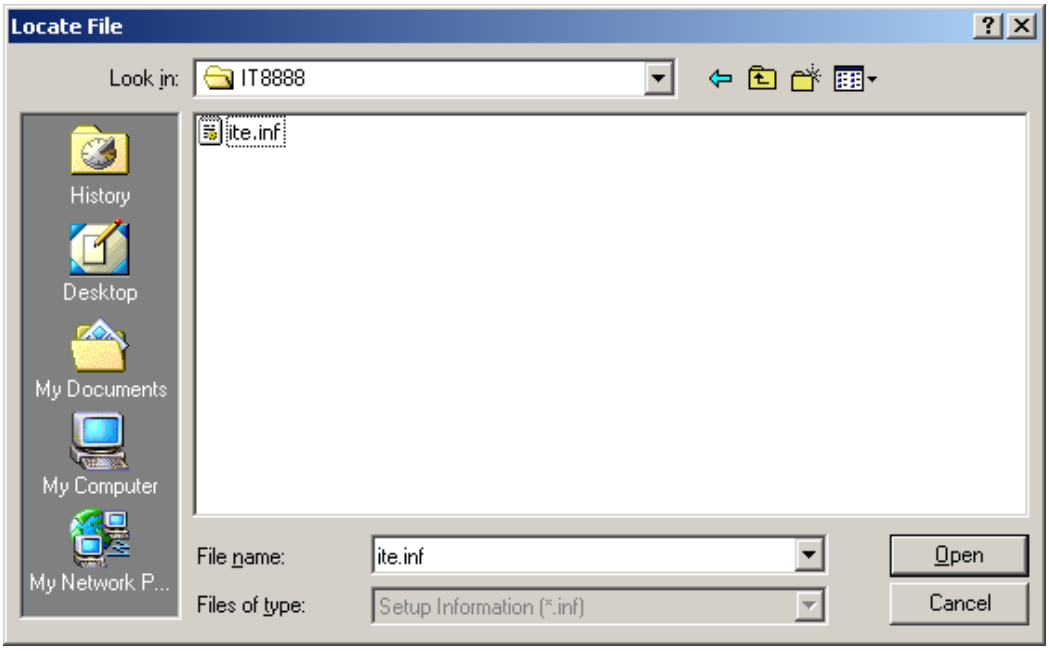

Figure 7-42: Location Browsing Window

Click **OK** to continue. A driver files location menu window appears. Select the **ite.inf** file and click **OPEN** to continue. The driver is installed.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

A

BIOS Configuration Options

A.1 BIOS Configuration Options

Below is a list of BIOS configuration options described in **Chapter 6**.

Load Fail-Safe Defaults **119**
Load Optimized Defaults **119**
Set Supervisor Password **119**
Set User Password **119**
Save & Exit Setup **119**
Exit Without Saving **119**
Date [Day mm:dd:yyyy] **120**
Time [hh/mm/ss] **120**
IDE Master and IDE Slave **120**
Drive A [1.44M, 3.5in] **121**
Halt On [All, But Keyboard] **121**
Base Memory: **122**
Extended Memory **122**
Total Memory **122**
IDE HDD Auto-Detection [Press Enter] **123**
IDE Primary Master [Auto] **123**
Access Mode [Auto] **123**
Capacity **124**
Cylinder **124**
Head **124**
Precomp **124**
Landing Zone **124**
Sector **125**
Virus Warning [Disabled] **126**
CPU Internal Cache [Enabled] **126**
Boot From LAN Control [Disabled] **126**
SATA Boot ROM Control [Disabled] **127**
Boot Device **127**
Boot Other Device [Enabled] **128**

Boot Up Floppy Seek [Disabled] 128
Boot Up Numlock Status [On] 128
Gate A20 Option [Fast] 129
Typematic Rate Setting [Disabled] 129
Typematic Rate (Chars/sec) [6] 129
Typematic Delay (Msec) [250] 130
Security Option [Setup] 130
OS Select For DRAM > 64MB [Non-OS2] 131
Video BIOS Shadow [Enabled] 131
XXXXX-YYYYY Shadow [Disabled] 131
Small Logo (EPA) Show [Disabled] 132
Cyrix 6x86/MII CPUID [Enabled] 132
CPU Frequency [500MHz] 133
Memory Frequency [266MHz] 133
CAS Latency [Auto] 133
Interleave Select [LOI] 133
Video Memory Size [8M] 133
Output Display [Panel & CRT] 134
Flat Panel Configuration [Press Enter] 134
OnBoard Audio [Enabled] 134
UART Port A [Disabled] 135
Flat Panel Type [Auto] 135
Resolution [800 x 600] 136
Data Bus Type [9 – 24 bits, 1 ppc] 136
Refresh Rate [60Hz] 136
HSYNC Polarity [Low] 137
VSYNC Polarity Active [Low] 137
SHFCLK Active Period [Free Running] 137
LP Active Period [Free Running] 137
On-Chip IDE Channel 1 [Enabled] 139
Drive PIO Mode [Auto] 139
IDE UDMA [Auto] 139

IDE DMA transfer access [Enabled] 139
IDE HDD Block Mode [Enabled] 140
Onboard FPC Controller [Disabled] 140
Onboard Serial Port 1 [3F8/IRQ4] 140
Onboard Serial Port 2 [2F8/IRQ3] 141
UART Mode Select [Normal] 141
x RxD, TxD Active [Hi,Lo] 141
x IR Transmission Delay [Enabled] 142
x UR2 Duplex Mode [Half] 142
x Use IR Pins [IR-Rx2Tx2] 142
Onboard Parallel Port [378/IRQ7] 142
Parallel Port Mode [SPP] 142
x EPP Mode Select [EPP1.7] 143
x ECP Mode Use DMA [3] 143
CIR Port Address [Disabled] 144
x CIR Port IRQ [11] 144
Onboard Serial Port # [XXX] 144
Serial Port # Use IRQ [XXX] 145
x ACPI Function [Disabled] 145
ACPI Suspend Type [S1(POS)] 145
Power Management [APM] 146
x Standby Mode [Disabled] 146
x Suspend Mode [Disabled] 147
Soft-Off by PWR-BTTN [Instant-Off] 147
Power-On by Alarm [Disabled] 148
PNP OS Installed [No] 149
Reset Configuration Data [Disabled] 149
Resources Controlled By [Auto (ESCD)] 149
x IRQ Resources [Press Enter] 150
x Memory Resources [Press Enter] 151
Reserved Memory Base [N/A] 152
x Reserved Memory Length [8K] 152

PCI/VGA Palette Snoop [Disabled]..... 152

Fan Speeds 153

Voltages 154

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

B

Watchdog Timer

NOTE:

The following discussion applies to DOS environment. It is recommended you contact IEI support or visit our website for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer will either perform a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table B-1: AH-6FH Sub-function

You have to call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer will start counting down. While the timer value reaches zero, the system will reset. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer will be disabled if you set the time-out value to be zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system will reset.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:
        MOV     AX, 6F02H       ; setting the time-out value
        MOV     BL, 30          ; time-out value is 48 seconds
;
; ADD YOUR APPLICATION PROGRAM HERE
;
        CMP     EXIT_AP, 1      ; is your application over?
        JNE     W_LOOP          ; No, restart your application
        MOV     AX, 6F02H       ; disable Watchdog Timer
        MOV     BL, 0           ;
        INT     15H
;
; EXIT ;
```

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

C

Address Mapping

C.1 I/O Address Map

I/O Address Range	Description
000-01F	DMA Controller
020-021	Interrupt Controller
040-043	System time
060-06F	Keyboard Controller
070-07F	System CMOS/Real time Clock
080-09F	DMA Controller
0A0-0A1	Interrupt Controller
0C0-0DF	DMA Controller
0F0-0FF	Numeric data processor
1F0-1F7	Primary IDE Channel
2F8-2FF	Serial Port 2 (COM2)
378-37F	Parallel Printer Port 1 (LPT1)
3B0-3BB	Intel(R) Graphics Controller
3C0-3DF	Intel(R) Graphics Controller
3F6-3F6	Primary IDE Channel
3F7-3F7	Standard floppy disk controller
3F8-3FF	Serial Port 1 (COM1)

Table C-1: I/O Address Map

C.2 1st MB Memory Address Map

Memory address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
F0000-FFFFF	System BIOS
1000000-	Extend BIOS

Table C-2: 1st MB Memory Address Map

C.3 IRQ Mapping Table

IRQ#	Description	IRQ#	Description
IRQ0	System Timer	IRQ8	RTC clock
IRQ1	Keyboard	IRQ9	ACPI
IRQ2	Available	IRQ10	LAN
IRQ3	COM2	IRQ11	LAN/USB2.0/SATA
IRQ4	COM1	IRQ12	PS/2 mouse
IRQ5	SMBus Controller	IRQ13	FPU
IRQ6	FDC	IRQ14	Primary IDE
IRQ7	Available	IRQ15	Secondary IDE

Table C-3: IRQ Mapping Table

C.4 DMA Channel Assignments

Channel	Function
0	Available
1	Available
2	Floppy disk (8-bit transfer)
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

Table C-4: IRQ Mapping Table

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

D

External AC'97 Audio CODEC

D.1 Introduction

The motherboard comes with an onboard Realtek ALC203 CODEC. Realtek ALC203 is a 16-bit, full duplex AC'97 Rev. 2.3 compatible audio CODEC with a sampling rate of 48KHz.

D.1.1 Accessing the AC'97 CODEC

The CODEC is accessed through three phone jacks on the rear panel of the motherboard. The phone jacks include:

3. A LINE input shared with surround output
4. A MIC input shared with Center and LFE output
5. A LINE output
6. A MIC input line.

D.1.2 Driver Installation

The driver installation has been described in Section **7.3**.

After rebooting, the sound effect configuration utility appears in the **Windows Control Panel** (**Figure D-1**). If the peripheral speakers are properly connected, sound effects should be heard.

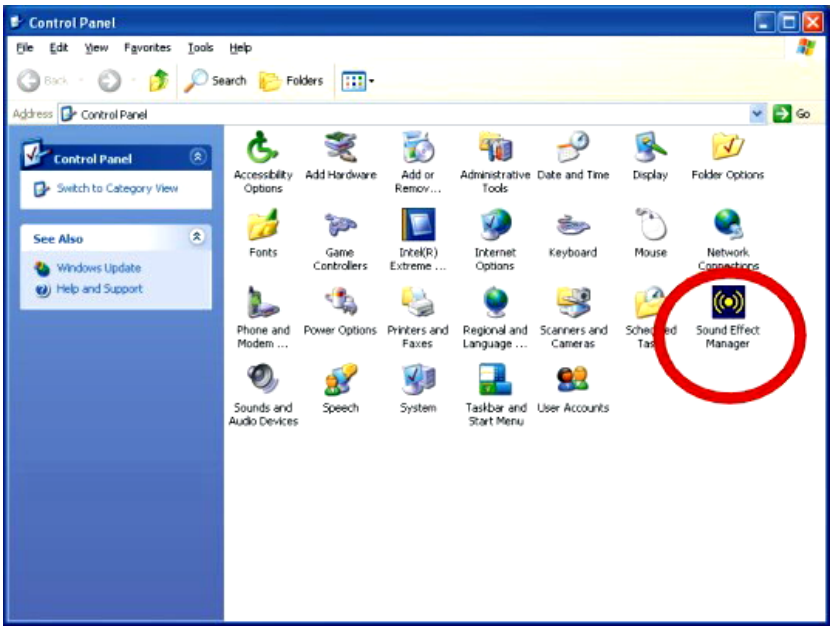

Figure D-1: Control Panel Sound Effect Manager

D.2 Sound Effect Configuration

D.2.1 Accessing the Sound Effects Manager

To access the Sound Effects Manager, please do the following:

Step 1: Install the audio CODEC driver.

Step 2: Click either:

- The **Sound Effect Manager** icon in the **Notification Area** of the system task bar (**Figure D-2**), or
- The **Sound Effect Manager** icon in the **Control Panel** (**Figure D-3**).

Figure D-2: Sound Effect Manager Icon [Task Bar]

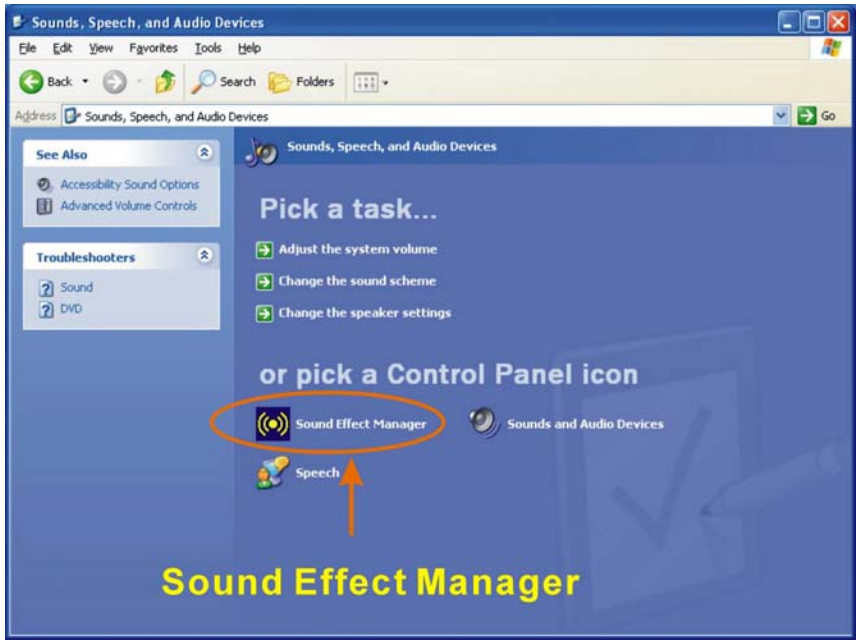

Figure D-3: Sound Effect Manager Icon [Control Panel]

Step 3: The sound effect manager appears (**Figure D-4**).

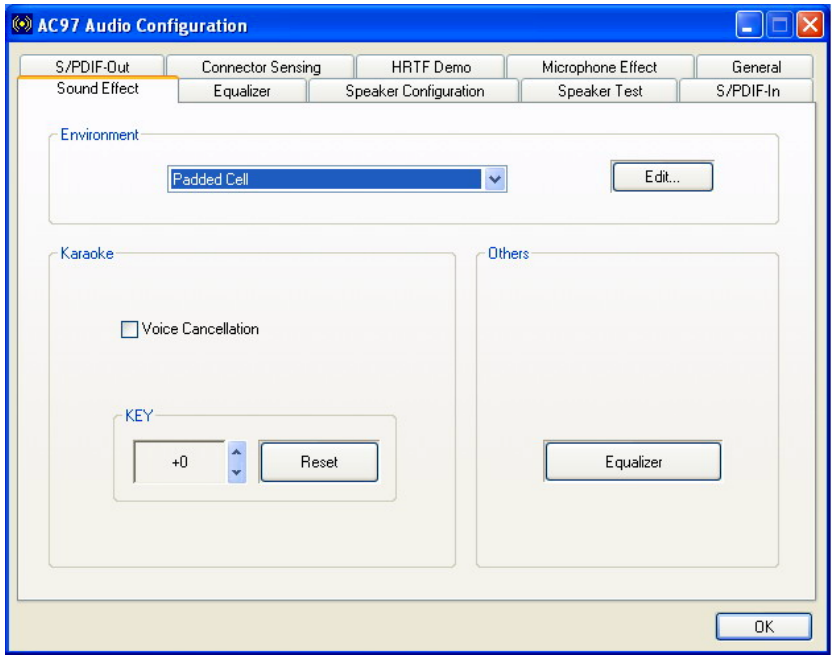

Figure D-4: Sound Effects Manager (ALC203)

NOTE:

The Sound Effect Manager shown in **Figure D-4** is for the RealTek ALC203 audio CODEC. Different CODECs may have different sound manager appearances.

The following section describes the different configuration options in the Sound Effect Manager.

D.2.2 Sound Effect Manager Configuration Options

The **Sound Effects Manager** enables configuration of the items listed below. To configure these items click the corresponding menu tab in the **Sound Effects Manager** (**Figure D-4)**.

NOTE:

The Karaoke Mode is configured in the **Sound Effect** menu. To access Karaoke configuration settings, click on the **Sound Effect** menu tab.

- Sound Effect
- Karaoke Mode
- Equalizer
- Speaker Configuration
- Speaker Test
- S/PDIF-In
- S/PDIF-Out
- Connector Sensing
- HRTF Demo

- Microphone Effect
- General

NOTE:

Not all RealTek Sound Effect Managers have all the above listed options. The Sound Effect Manager loaded onto the system may only have some of the options listed above.

Below is a brief description of the available configuration options in the **Sound Effects Manager**.

- ***Sound Effect***:- Select a sound effect from the 23 listed options in the drop down menu. Selected sound effect properties can be edited. To edit the sound effect click **EDIT**.
- ***Karaoke Mode***:- The **Karaoke Mode** is accessed in the Sound Effect window. The **Voice Cancellation** disables the vocal part of the music being played. The **Key adjustment** up or down arrow icons enables users to define a key that fits a certain vocal range.
- ***Equalizer Selection***:- Preset equalizer settings enable easy audio range settings. Ten frequency bands can be configured.
- ***Speaker Configuration***:- Multi-channel speaker settings are configured in this menu. Configurable options include:
  - Headphone
  - Channel mode for stereo speaker output
  - Channel mode for 4 speaker output
  - Channel mode for 5.1 speaker output
  - Synchronize the phonejack switch with speakers settings
- ***Speaker Test*:-** Each speaker connected to the system is tested individually to see if the 4-channel or 6-channel audio operates properly.
- ***S/PDIF-In & S/PDIF-Out***:- These functions are currently not supported.
- ***Connector Sensing***:- Realtek ALC203 detects if an audio device is plugged into the wrong connector. If an incorrect device is plugged in, a warning message appears.

- ***HRTF Demo***:- Adjust HRTF (Head Related Transfer Functions) 3D positional audio here before running 3D applications.
- ***Microphone Effect***:- Microphone noise suppression is enabled in this menu.
- ***General***:- General information about the installed AC'97 audio configuration utility is listed here.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

E

ALi® RAID for SATA

E.1 Introduction

The ALi M5283 is a highly integrated disk drive controller that is capable of managing Parallel-ATA and Serial-ATA interface hard disk drives. The ALi controller supports PATA UDMA transfer mode up to mode 6 and SATA 1.0 disk drives. The ALi M5283 also comes with cost-effective RAID functionality that can be used to increase data read/write speed and to provide protection to data by distributing mirrored duplicates of data onto two disk drives (RAID1).

CAUTION!

A configured RAID volume (which may consist of multiple hard drives) appears to an operating system as a contingent storage space. The operating system will not be able to distinguish the physical disk drives contained in a RAID configuration.

E.1.1 Precautions

One key benefit a RAID configuration brings is that a single hard drive can fail within a RAID array without damaging data. With RAID1 array, a failed drive can be replaced and the RAID configuration restored.

WARNING!

Irrecoverable data loss will occur if a working drive is removed when trying to remove a failed drive. It is strongly recommended to mark the physical connections of all SATA disk drives. Drive locations can be identified by attaching stickers to the drive bays. If a drive member of a RAID array should fail, the failed drive can then be correctly identified.

CAUTION!

Do not accidentally disconnect the SATA drive cables. Carefully route the cables within the chassis to avoid system down time.

E.2 Features and Benefits

- Supports RAID levels 0, 1, and JBOD
- Supports connectivity to two disk drives
- Supported Operating Systems include: Windows 98/Me, Windows 2000, and Windows XP
- Windows-based software for RAID management

E.3 Accessing the ALi RAID Utility

The RAID BIOS version and disk drive information should appear after the system POST screen.

The BIOS disk drive information should look like the following:

ALi RAID BIOS V1.XX

(c) ALi Corporation 2005, All Rights Reserved.

Identifying IDE drives…

Channel 1 Master: Maxtor xxxxxx

Channel 2 Master: Maxtor xxxxxx

Press Ctrl-A to enter ALi RAID BIOS setup utility

Press **CTRL** and **A** keys simultaneously to enter the RAID configuration utility.

E.4 RAID BIOS Setup Utility

The Serial ATA RAID volume can be configured using the RAID Configuration utility stored within the ALi RAID controller ROM. The BIOS configuration screen is divided into three major areas: Main Menu, Drive Menu, and a list for the configured RAID arrays.

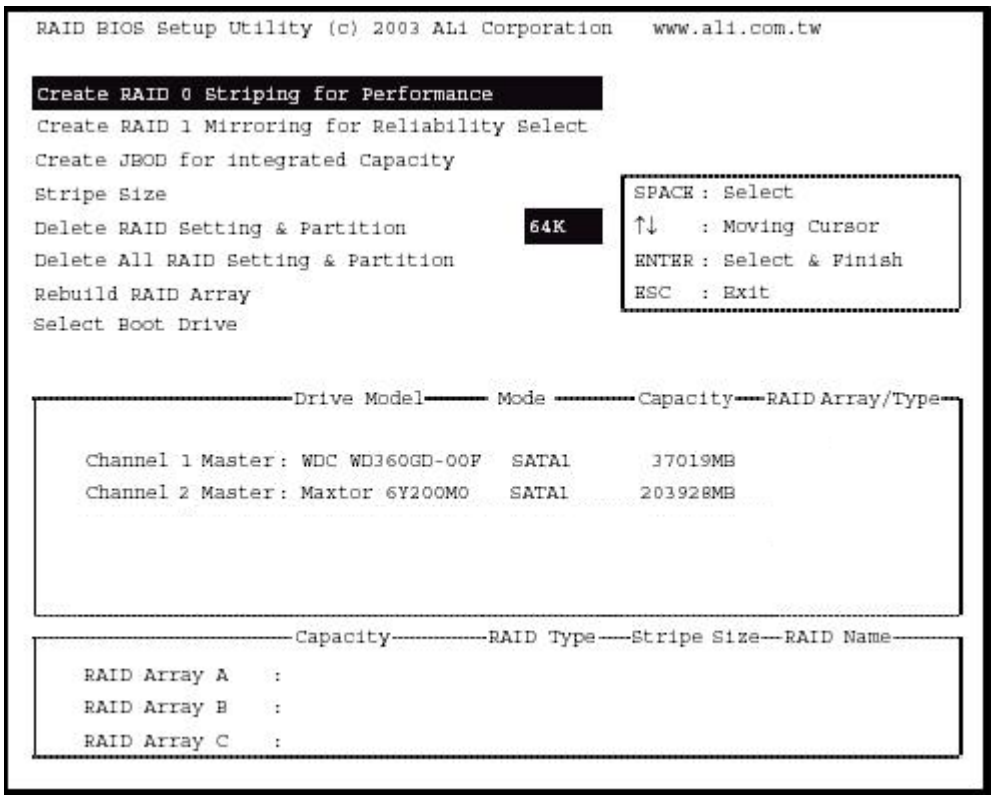
RAID BIOS Setup Utility (c) 2003 ALi Corporation www.ali.com.tw
Create RAID 0 Striping for Performance
Create RAID 1 Mirroring for Reliability Select
Create JBOD for integrated Capacity
Stripe Size
Delete RAID Setting & Partition
Delete All RAID Setting & Partition
Rebuild RAID Array
Select Boot Drive
64K
SPACE : Select
↑↓ : Moving Cursor
ENTER : Select & Finish
ESC : Exit
Drive Model Mode Capacity RAID Array/Type
Channel 1 Master: WDC WD360GD-00F SATA1 37019MB
Channel 2 Master: Maxtor 6Y200M0 SATA1 203928MB
Capacity RAID Type Stripe Size RAID Name
RAID Array A :
RAID Array B :
RAID Array C :

E.5 RAID Options:

E.5.1 Create RAID0 Striping for Performance

WARNING!

All data previously stored on the member drives of a RAID configuration **will be destroyed** during the RAID initialization process. If “used” drives are used to create a RAID array, make sure the data has been moved or backed up before creating a RAID array out of the disk drives.

Step 4: Use the arrow keys to highlight **Create RAID0 Striping for Performance** and press **ENTER**. A flashing ‘S’ appears at the **Drive Menu** where the member drives to be included in the RAID0 array can be chosen.

Step 5: Use the space bar to select members of the RAID0 RAID configuration. The flashing cursor changes to a lower case ‘s’ once any of the connected disk drives has been selected. Follow the same method to select another member drive.

Step 6: The **Create RAID0(Y/N)** confirm box appears. Press **Y**.

Step 7: Enter a nickname for the created array. Upper and lower case alphabetic, numeric, space, and underscore characters are all applicable for naming an array.

Step 8: Once an array is successfully created, it will be seen in the list of configured arrays.

NOTE:

1. To reduce the chance of losing data, ALi imposes certain limitations on the RAID configuration options. Parallel-ATA drives connected on the same IDE channel cannot be selected as the members of a RAID0 array. Avoid mixing Parallel-ATA and Serial-ATA disk drives in a RAID0 array.

2. Always use disk drives of the same capacity to create a RAID array. The excessive capacity of a larger disk drive cannot be utilized because data stripes are equally distributed across all members of a RAID array.

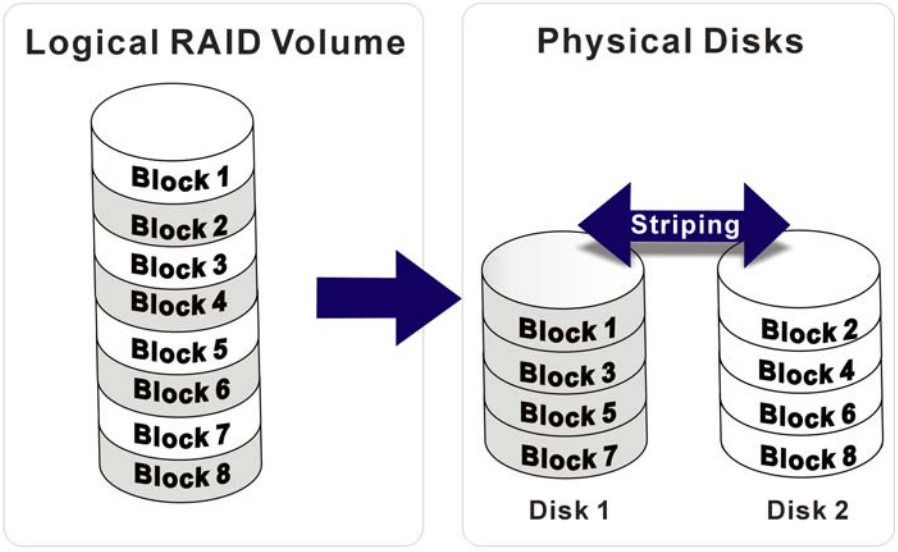

E.5.2 Create RAID1 Mirroring for Reliability

WARNING!

All data previously stored on the member drives of a RAID configuration **will be destroyed** during the RAID initialization process. If “used” drives are used to create a RAID array, make sure the data has been moved or backed up before creating a RAID array out of the disk drives.

Step 1: Use the arrow keys to highlight **Create RAID1 Striping for Performance** and

press **ENTER**. A flashing ‘M’ appears at the **Drive Menu** where the member drives to be included in the RAID1 array can be chosen.

Step 2: Use the space bar to select members of the RAID1 RAID configuration. The flashing cursor changes to a lower case ‘m’ once any of the connected disk drives has been selected. Follow the same method to select another member drive.

Step 3: The **Create RAID1(Y/N)** confirm box appears. Press **Y**.

Step 4: Enter a nickname for the created array. Upper and lower case alphabetic, numeric, space, and underscore characters are all applicable for naming an array.

Step 5: Once an array is successfully created, it will be seen in the list of configured arrays.

Step 6: A prompt will appear to proceed with drive copy. The **Source** and **Destination** drives will be indicated as “M” and “m” in the **Drive Menu**.

NOTE:

1. To reduce the chance of losing data, ALi imposes certain limitations on the RAID configuration options. Parallel-ATA drives connected on the same IDE channel cannot be selected as the members of a RAID1 array. Avoid mixing Parallel-ATA and Serial-ATA disk drives in a RAID1 array.

2. Always use disk drives of the same capacity to create a RAID array. The excessive capacity of a larger disk drive cannot be utilized because data stripes are equally distributed across all members of a RAID array.

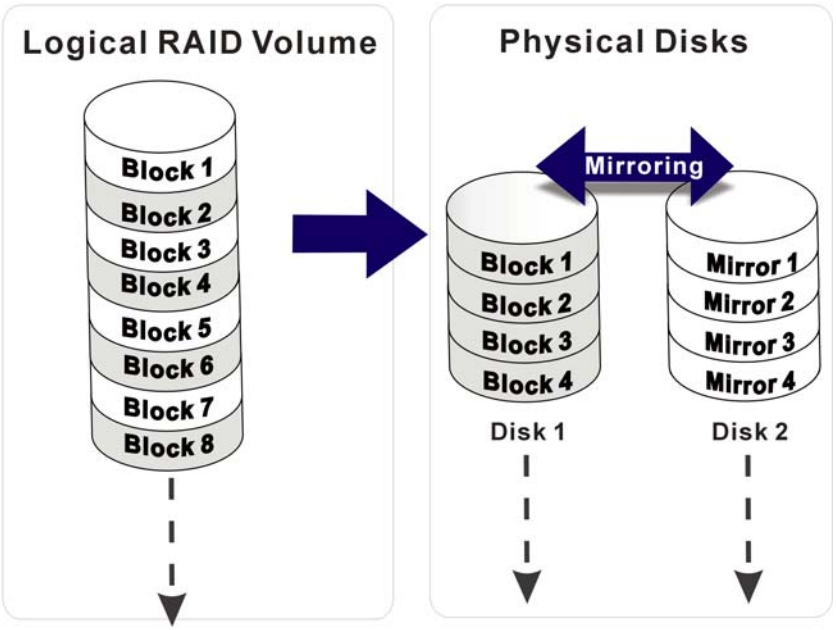

E.5.3 Create JBOD for Integrated Capacity

JBOD is defined as “Just a Bunch of Drives.” JBOD provides neither performance gains nor data redundancy.

WARNING!

All data previously stored on the member drives of a RAID configuration **will be destroyed** during the RAID initialization process. If “used” drives are used to create a RAID array, make sure the data has been moved or backed up before creating a RAID array out of the disk drives.

Step 1: Use the arrow keys to highlight **Create JBOD for Integrated Capacity** and press **ENTER**. A flashing ‘J’ appears at the **Drive Menu** where the member drives to be included in the JBOD can be chosen.

Step 2: Use the space bar to select members of the JBOD configuration. The flashing cursor changes to a lower case ‘j’ once any of the connected disk drives has been selected. Follow the same method to select another member drive. The maximum number of member drives in a JBOD is four and the minimum is two.

Step 3: The **Create RAID1(Y/N)** confirm box appears. Press **Y**.

Step 4: Enter a nickname for the created array. Upper and lower case alphabetic, numeric, space, and underscore characters are all applicable for naming an array.

Step 5: Once an array is successfully created, it will be seen in the list of configured arrays.

NOTE:

To reduce the chance of losing data, ALi imposes certain limitations on the RAID configuration options. Parallel-ATA drives connected on the same IDE channel cannot be selected as the members of a RAID1 array. Avoid mixing Parallel-ATA and Serial-ATA disk drives in a RAID1 array.

E.5.4 Stripe Size

The change to stripe size effects RAID0 arrays. Configurable options are:

- 64K (default)
- 32K
- 16K
- 8K
- 4K

Select a small stripe size if the I/Os to the hard drives are small and randomly occurred. Choose a larger stripe size if the I/Os are mostly large and come in sequential orders, e.g., A/V playback and editing applications. The default value should be appropriate for most applications.

E.5.5 Delete RAID Setting & Partition

WARNING!

If a RAID configuration is deleted, all data previously stored on the member drives of the RAID configuration will also be deleted.

Step 1: Use the arrow keys to highlight **Delete RAID Setting & Partition** and press **ENTER**. A flashing 'E' appears at the **Drive Menu** where the member drives to be removed can be chosen.

Step 2: The **Data on RAID drives will be erased (Y/N)** confirm box appears. Press **Y**.

E.5.6 Delete All RAID Setting & Partition

WARNING!

If a RAID configuration is deleted, all data previously stored on the member drives of the RAID configuration will also be deleted.

Step 1: Use the arrow keys to highlight **Delete All RAID Setting & Partition** and press

ENTER.

Step 2: The **Data on RAID drives will be erased (Y/N)** confirm box appears. Press **Y**.

E.5.7 Rebuild RAID Array

The **Rebuild RAID Array** option can rebuild a RAID array if a member of a RAID configuration should fail. Neither RAID0 nor JBOD provides data redundancy. The **Rebuild RAID Array** option only applies to RAID1 arrays and is applicable when a member of a RAID1 configuration has failed.

Step 1: Use the arrow keys to highlight **Rebuild RAID Array** and press **ENTER**. A flashing 'R' appears at the list of existing arrays. The source and destination drives will be displayed.

Step 2: Press **Y** to begin the rebuild process.

NOTE:

A status bar will indicate the rebuild progress. Rebuild consumes considerable system resources and the time required for rebuilding a RAID array may vary depending on the size of stored data, disk drive capacity, and drive performance.

E.5.8 Select Boot Drive

Step 1: Use the arrow keys to highlight **Select Boot Drive** and press **ENTER**. A flashing 'A' appears at the **Drive Menu** where the boot drive can be chosen.

Step 2: Press **ENTER** or the space bar to finish the configuration.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

F

Connecting an ATX Power Supply

The following notes show how to connect ATX Power Supply to the embedded board.

F.1.1 Using ATX Power Switch

Step 1: Disconnect the AC cord of the power supply from the AC source to prevent a sudden electric surge to the board.

Step 2: Remove the jumper caps from the JP4 jumper.

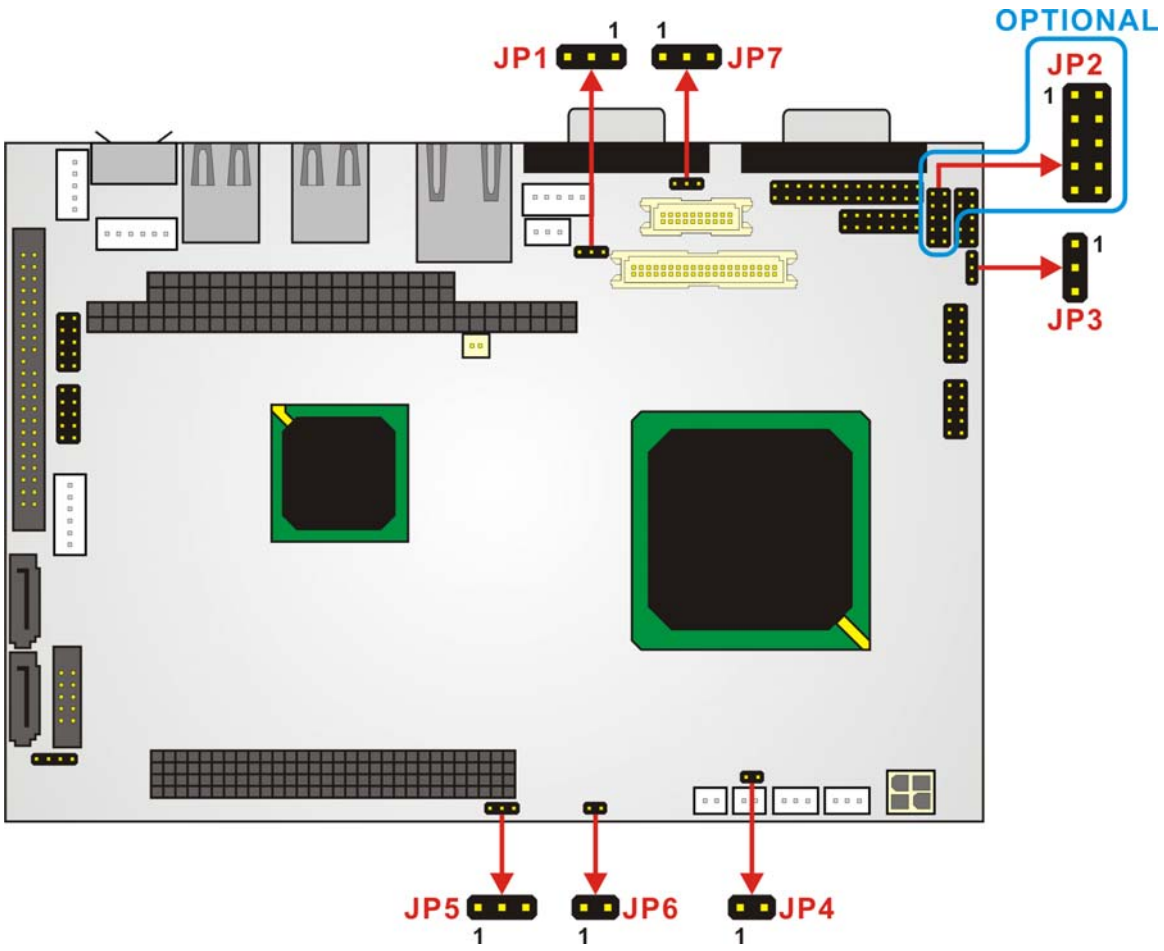

Figure F-1: Jumper Locations

WARNING!

The new power adapter cable for the NANO-LX has its “Ground” pin removed from the 3-pin ATX feature connector. Connecting the power feature connector cable will destroy the CPU board.

Step 3: Be sure that the standard 4-pin AT power connector is connected to the SBC power connector (CN2).

Step 4: Connect the optional ATX power cable to the AT power cable using their 4P power connectors (**Figure F-2**).

Step 5: Connect the optional ATX power cable to the SBC ATX connector (CN3) using the 3-pin ATX feature connector (**Figure F-2**).

Step 6: Connect an ATX power button switch to CN5.

Step 7: Connect the 20-pin ATX power connector to an ATX power supply (**Figure F-2**).

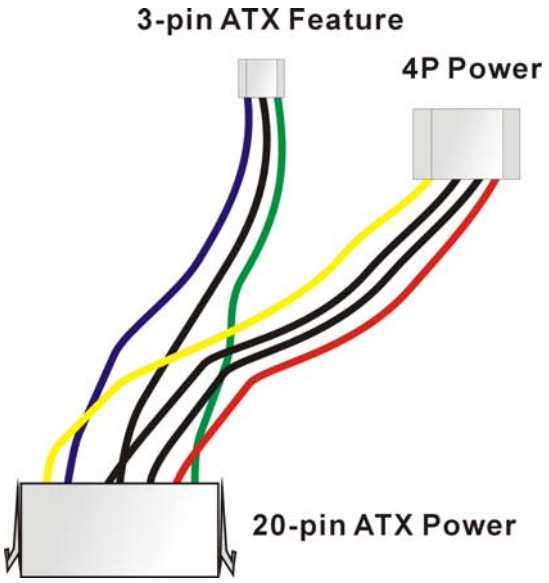

Figure F-2: ATX Power Adapter Cable

Step 8: Press the power button switch once to turn on the system. To turn off the power supply press the ATX power switch button for about 4 seconds.

F.1.2 Using AT Power Supply

Connecting to an AT power supply is as simple as connecting a 4P power connector to CN2. Power on/off is controlled by the power switch on the AT power supply. Let the jumper caps stay on JP4.

Index

A

AC'97 .....24, 54, 205, 206, 211
AC'97 controller
specification v2.3 34
ACPI 18, 23, 33, 145, 146, 203
ACPI v2.0 33
Address Mapping 201
airflow 100
ALi M5283 214
AMD Geode™ LX800 .....20, 23
anti-static precautions 42, 88
anti-static pad 42, 88
anti-static wristband 42, 88
handling 42, 88
self-grounding 42, 88
APM 18, 146
ASKIR 18, 64, 141
AT 20, 23, 51, 95, 98, 150, 227, 228
AT power cable 103
ATA flat cable 102
ATX 20, 22, 23, 49, 51, 52, 53, 72, 95, 98, 225, 226, 227
Audio Codec 18
Audio Driver 156, 168

C

cables 101
AT power 103
ATA flat cable 102
ATX power 45
dual RS-232 43
IDE flat cable 43
Keyboard/Mouse Y 43
LPT 45, 104
parallel port 104
RS-232/422/485 45
SATA drive 106
SATA drive 44
SATA drive power 44, 106
single RS-232 106
Cache Memory 23
CF card 93
installation 93
CFII 18, 23
chassis 100
installation 100
chipset 33
CMOS ... 18, 24, 95, 116, 117, 118, 120, 198, 202
Compact Flash 18, 49, 56
Compact Flash Type II 49
cooling 100
airflow 100

D

DB-15 connector 112
DB-9 connector 111
DDR memory 20
dimensions 28
board 28
external peripheral interface connector panel 29
DIMM 18
DMA Channel Assignments 203

E

electrostatic discharge 42, 88

EPIC 20
Ethernet 20, 22, 24, 51, 81, 82, 83
external peripheral interface 108
connection 108
connectors 108

F

FSB 18, 20

G

Geode™ LX 800 30
Graphics Processor 31

H

Hardware Monitoring 24

I

I/O Address Map 202
I/O Controller 18, 23
IDE ... 18, 22, 23, 50, 62, 120, 121, 122, 123, 127, 139, 140, 202, 203, 215, 218, 220, 221
IDE device 102
ATA flat cable 102
connector 102
installation checklist 90
Inverter 22, 50, 63
IrDA 18, 22, 24, 50, 64, 141
IRQ Mapping 203
ISA Driver 156, 184

J

jumper 94
jumper configuration 94
jumper settings 94

K

keyboard 109

L

LAN connection 109
LAN Driver 156, 175
LPT
cable connection 104
LPT cable 104
LPT connection 104
LVDS 18, 22, 23, 50, 51, 67, 95, 99, 136

M

memory module 31
memory module installation 92
motherboard 101
installation 101

P

Packing List 4
parallel port
cable connection 104
Parallel Port 18, 50, 68, 142, 143, 144
parallel port cable 104
parallel port connection 104
PC/104-Plus 24, 50, 69, 70, 98, 99
PCI Bus 23
peripheral device cables 101
power consumption 40
Power Consumption 23
power management 33

ACPI v2.0 33
AMD® Geode™ LX 800.....33
chipset controller 33
Power Management..18, 23, 118, 145, 146, 147
Power Support.....23
PS/2 connector 109
PS/2 keyboard 109
connection 109

R

RAID BIOS Setup 216
Real Time Clock.....24
Reset Button 50, 74
RJ-45 connection.....109
single connector 109
RoHS 20
RS-232.....22, 23, 81, 106
cable connection 106
single cable 106
RS-422/485.....22, 23

S

SATA .. 18, 20, 22, 50, 75, 76, 127, 156, 179, 203, 213, 214, 215
SATA drive 106
cables 106
connection 106
power cable 106
Serial Communications.....50, 76
Serial Device
connection 110
SERIRQ 51, 95, 99
SO-DIMM.....20, 23, 49, 92
installation.....92
specifcations.....92
Super IO.....23
System Chipset.....23

T

TFT TTL LCD 50, 78
TTL/LCD 22

U

UART 18, 97, 135, 141
unpacking..... 42, 91
unpacking checklist 43, 91
unpacking precautions..... 42, 91
USB.....36
external USB device connection 111
port.....36
USB 1.1 36
USB 2.0 36
USB 1.1.....36
USB 2.0.....36
USB device connection..... 111
dual connector 111

V

VGA 112
VGA Driver 156
VGA monitor.....112
connection 112

W

warranty validation 90
Watchdog Timer 23, 197, 198, 199